

Switch Label Jumper

LT-15679 / Kit Number SK-15726

Instruction Sheet

NOTE: When replacing the switch label in the 700T treadmill, there may be a jumper that is no longer needed with the new switch label. See figure below.


Please read instructions thoroughly before starting this procedure.

Tools Required

- No tools required

Approximate time for repair - 1 minute.

1. Remove old switch label.
2. Check to see whether you have the jumper.
3. Disconnect and discard jumper (see figure below).
4. Remove the paper backing to reveal the adhesive on the switch label.
5. Connect the new switch label directly into the old connector.

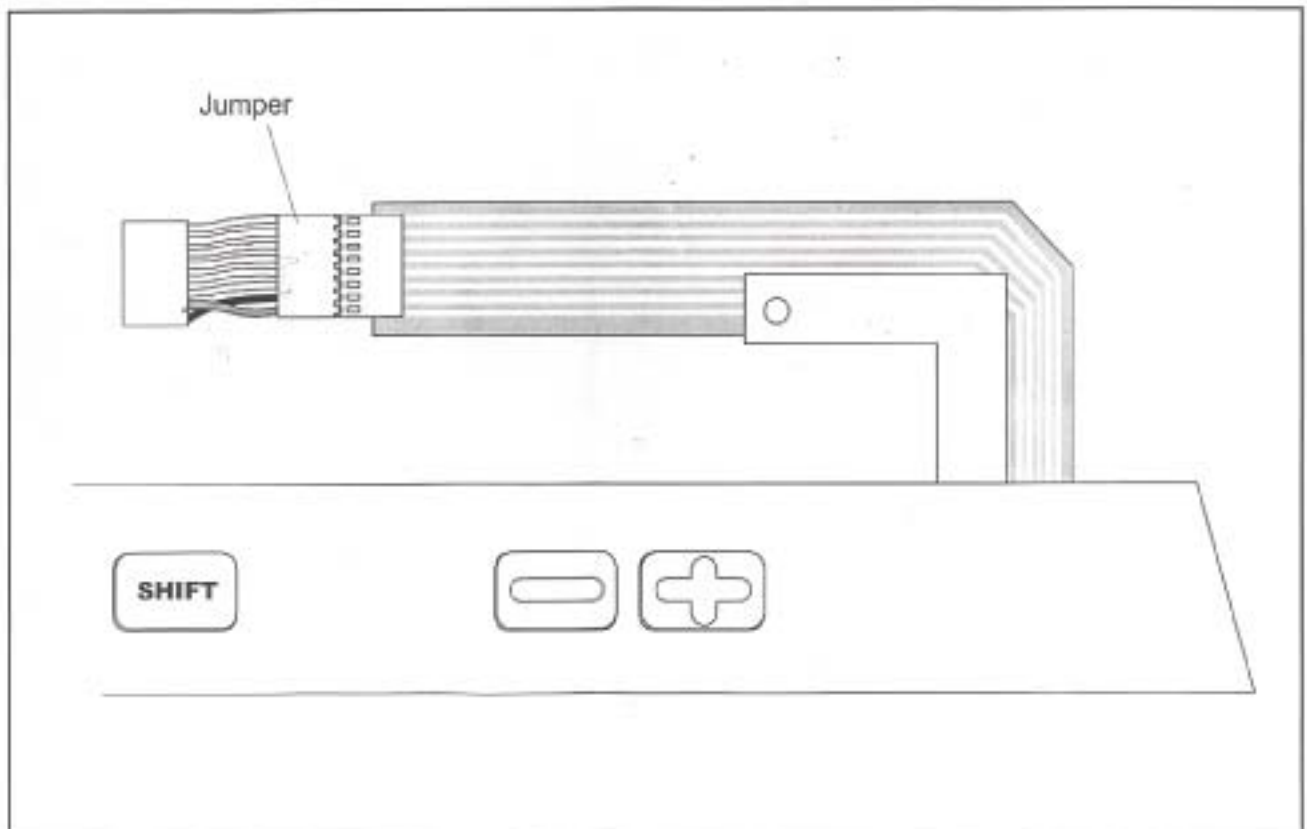



Product Support Bulletin

Title: Overlay / Keypad Installation WARNING

Date: 2/21/08

Warning:

Removal of backing voids warranty.

DO NOT peel the backing from the new overlay/keypad and adhere to display without first testing overlay/keypad. It is recommended that you connect the ribbon cable of the new overlay/keypad to the display electronics and test functionality prior to complete installation. If you experience the same symptoms as with the original overlay/keypad, further troubleshooting may be required to ensure the cause is the overlay/keypad.