 


LifeFitness

Arctic Silver 95Ri Recumbent Bike

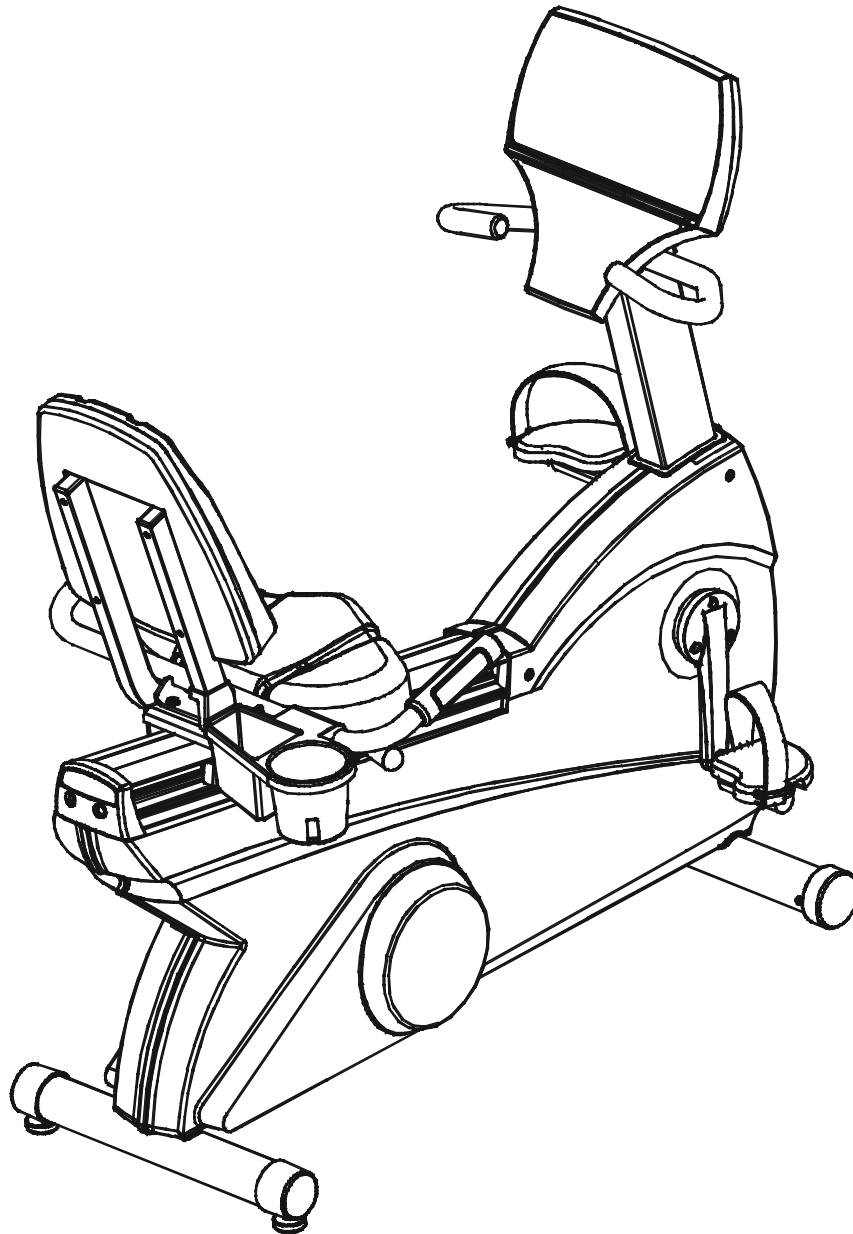

Customer Support Services ***PARTS MANUAL*** rev 04 Apr 2007

ARCTIC SILVER 95Ri
REFERENCES


95R-0XXX-04
S/N 100000 and UP

OPERATION MANUAL	M051-00K39-A119
POWER OPTION KIT 120V	GK39-00002-0002
POWER OPTION KIT 240/50V UK	GK39-00002-0004
POWER OPTION KIT 240V+AUS	GK39-00002-0005
POWER OPTION KIT 230/50V CON	GK39-00002-0006
HARDWARE BAG	GK39-00002-0008
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K39-A012

	Page
CONSOLE COMPONENTS	4
CONSOLE SUPPORT ASSEMBLY	5
SHROUDS, END CAP, CRANKARMS AND PEDALS	6
BELTS AND 6V BATTERY	7
RESISTOR ASSEMBLY	8
POWER CONTROL BOARD	9
ALTERNATOR W/PULLEY	10
CRANKSHAFT AND BEARING ASSEMBLY	11
INTERMEDIATE SHAFT AND BEARING ASSEMBLY	12
IDLER BRACKET ASSEMBLY	13
SEAT ASSEMBLY	14
SEAT BOTTOM ASSEMBLY	15
SEAT FRAME ASSEMBLY	16
SEAT PADS AND ACCESSORY TRAY	17
EXTRUSION ASSEMBLY	18
SEAT LOCKING ASSEMBLY	19
WHEEL AND LEVELER	20
CABLES	21

ARCTIC SILVER 95Ri
Console Components

 
95R-0XXX-04
S/N 10000 and UP

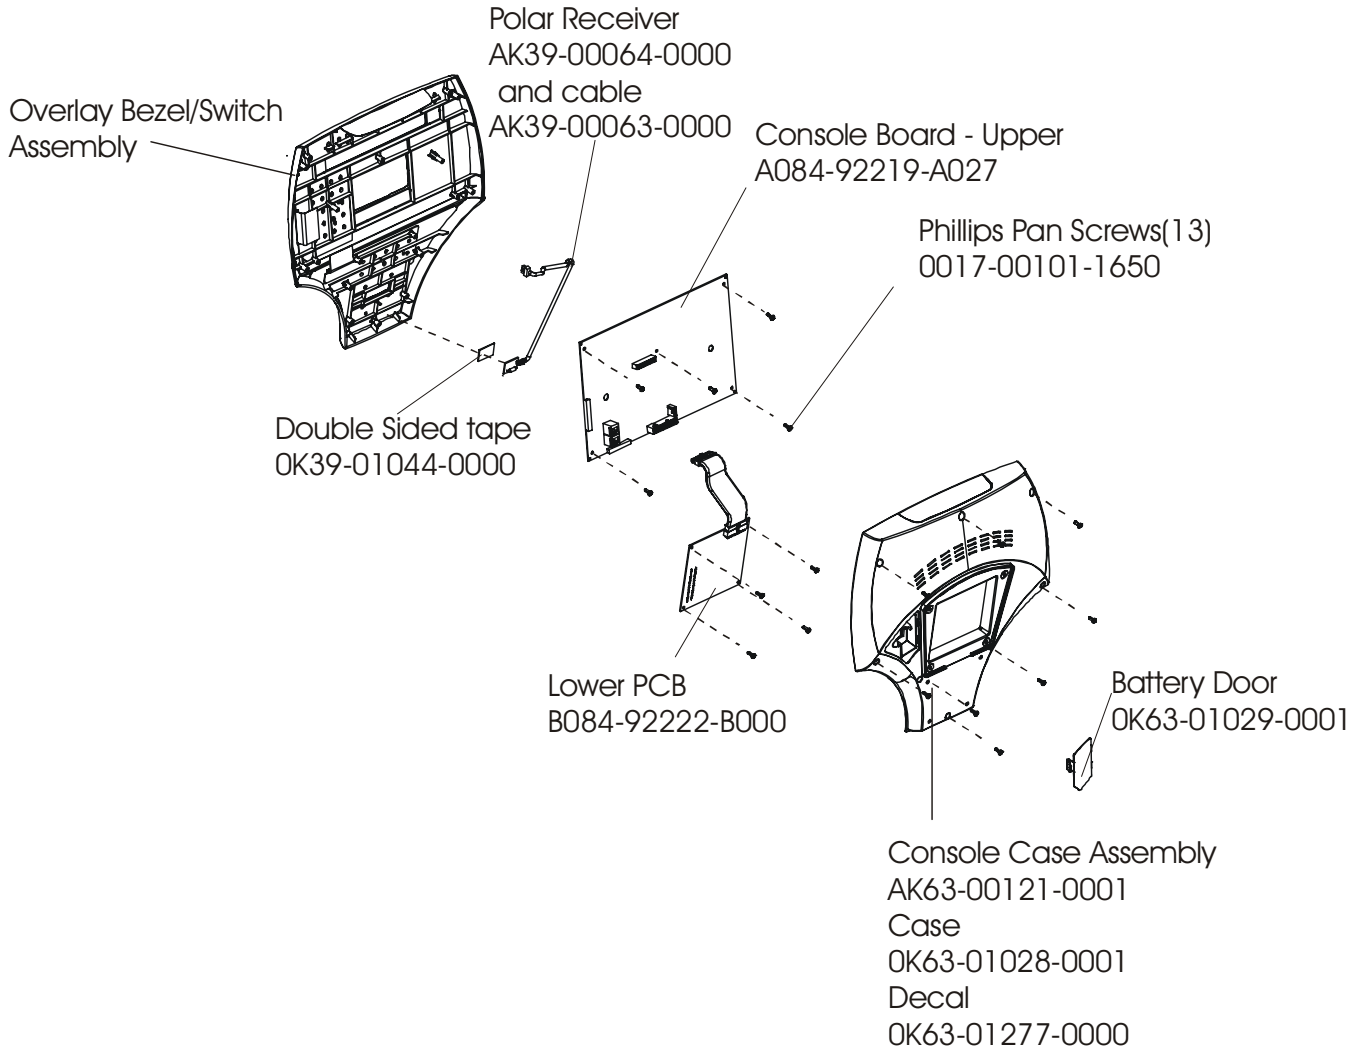

Console Assembly	Overlay/Bezel/Switch Assy.
AK39-00133-0001 Eng	AK63-00165-0001 Eng Met
AK39-00133-0002 Eng Met	AK63-00165-0001 Eng Met
AK39-00133-0003 Ger Met	AK63-00165-0003 Ger Met
AK39-00133-0004 Spn Met	AK63-00165-0004 Spn Met
AK39-00133-0006 Jap Met	AK63-00165-0006 Jap Met
AK39-00133-0007 Frn Met	AK63-00165-0007 Frn Met
AK39-00133-0008 Itl Met	AK63-00165-0008 Itl Met
AK39-00133-0009 Dut Met	AK63-00165-0009 Dut Met
AK39-00133-0010 Por Met	AK63-00165-0010 Por Met
AK39-00070-0014 Tur Met	AK63-00165-0014 Tur Met


ARCTIC SILVER 95Ri
Console Support Assembly

 95R-0XXX-04
S/N 10000 and UP

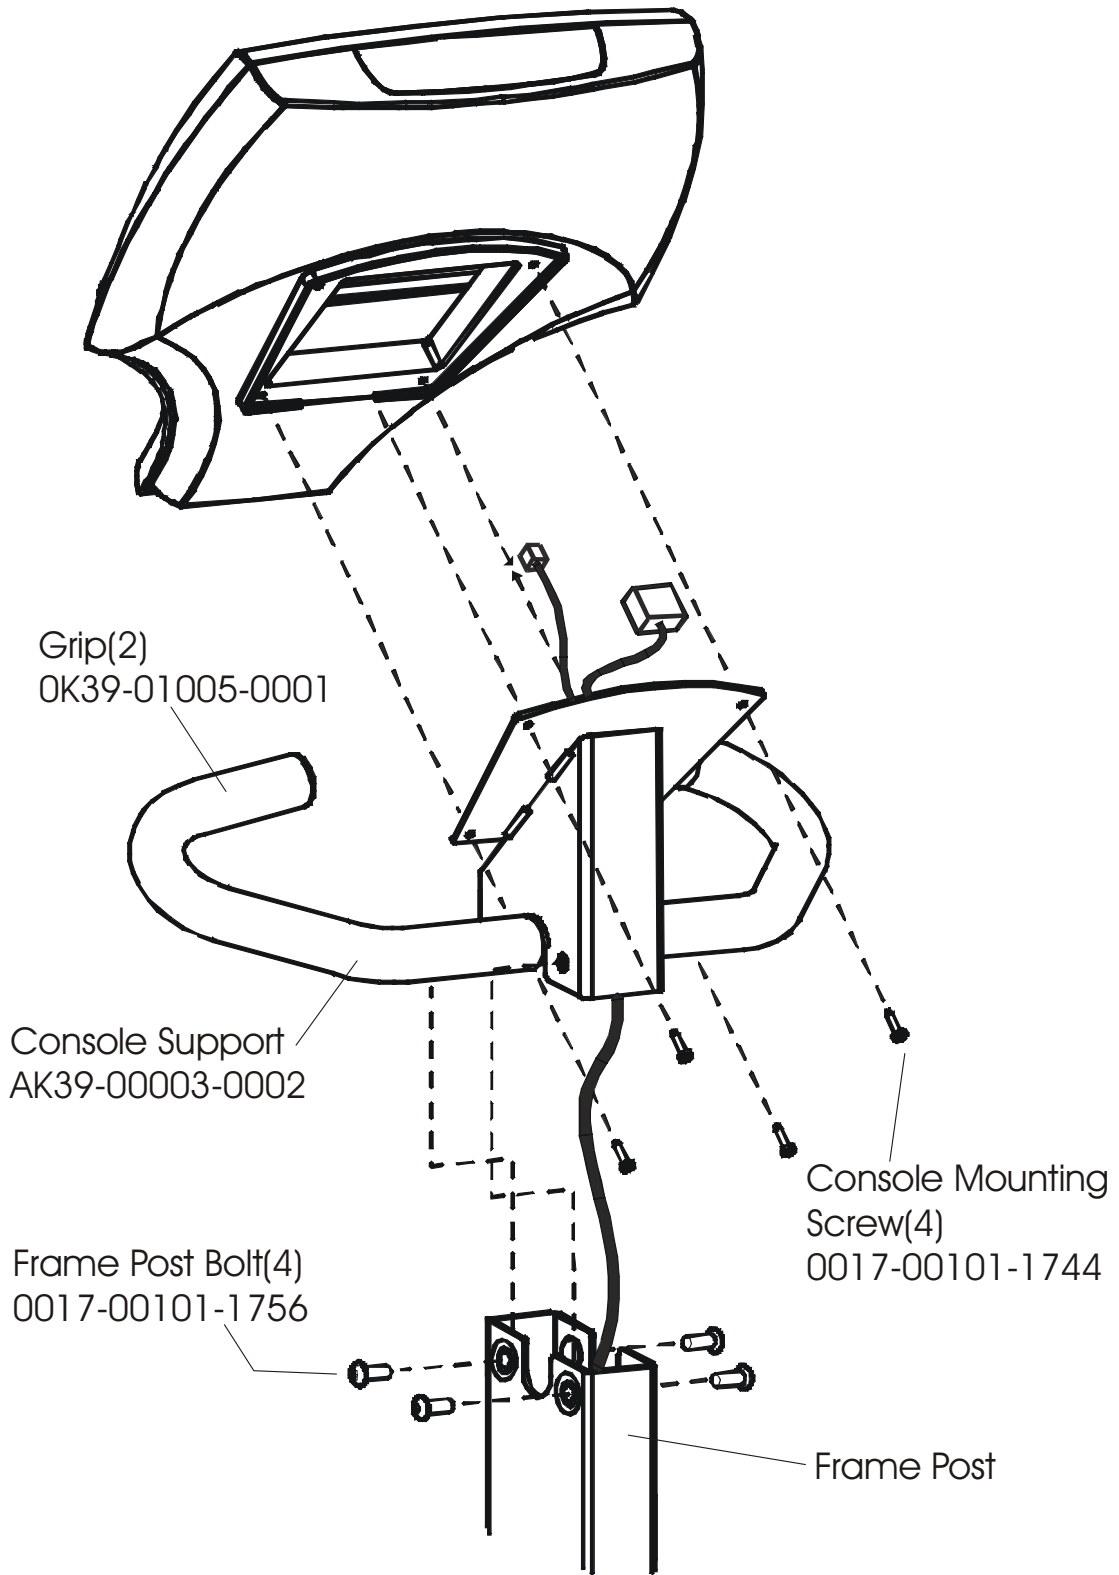


ARCTIC SILVER 95Ri
Shrouds, End cap and Pedals

 95R-0XXX-04
S/N 100000 and UP

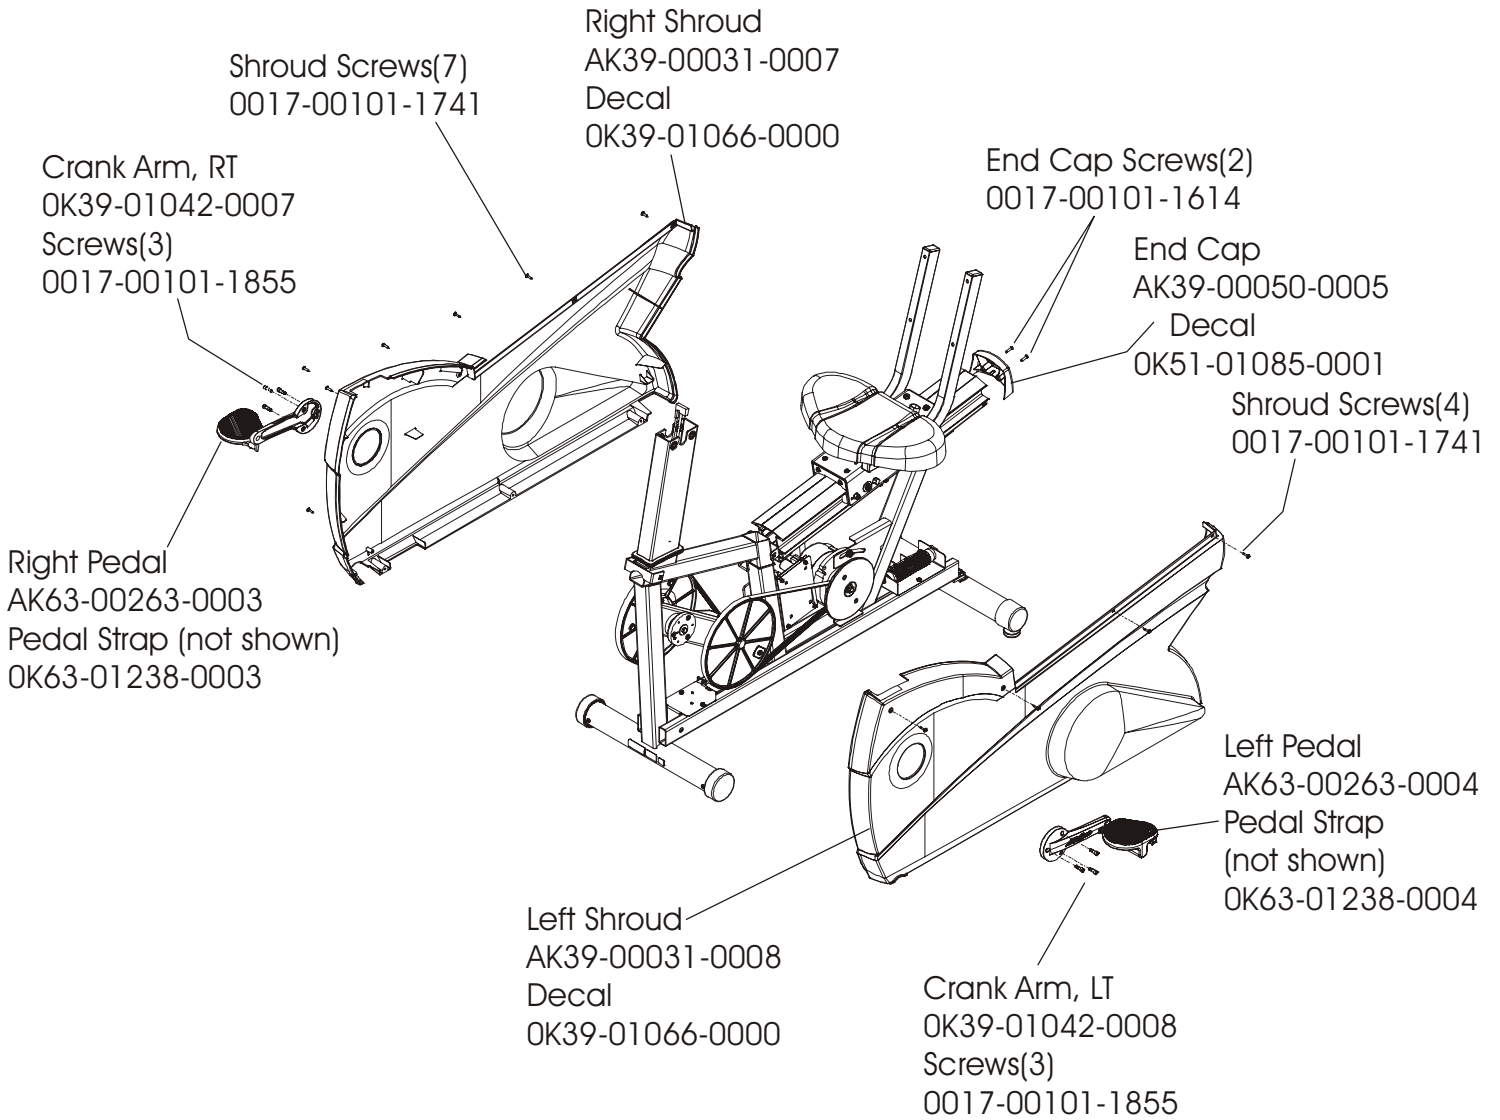


ARCTIC SILVER 95Ri
Belts and 6V Battery

 95R-0XXX-04
S/N 10000 and UP

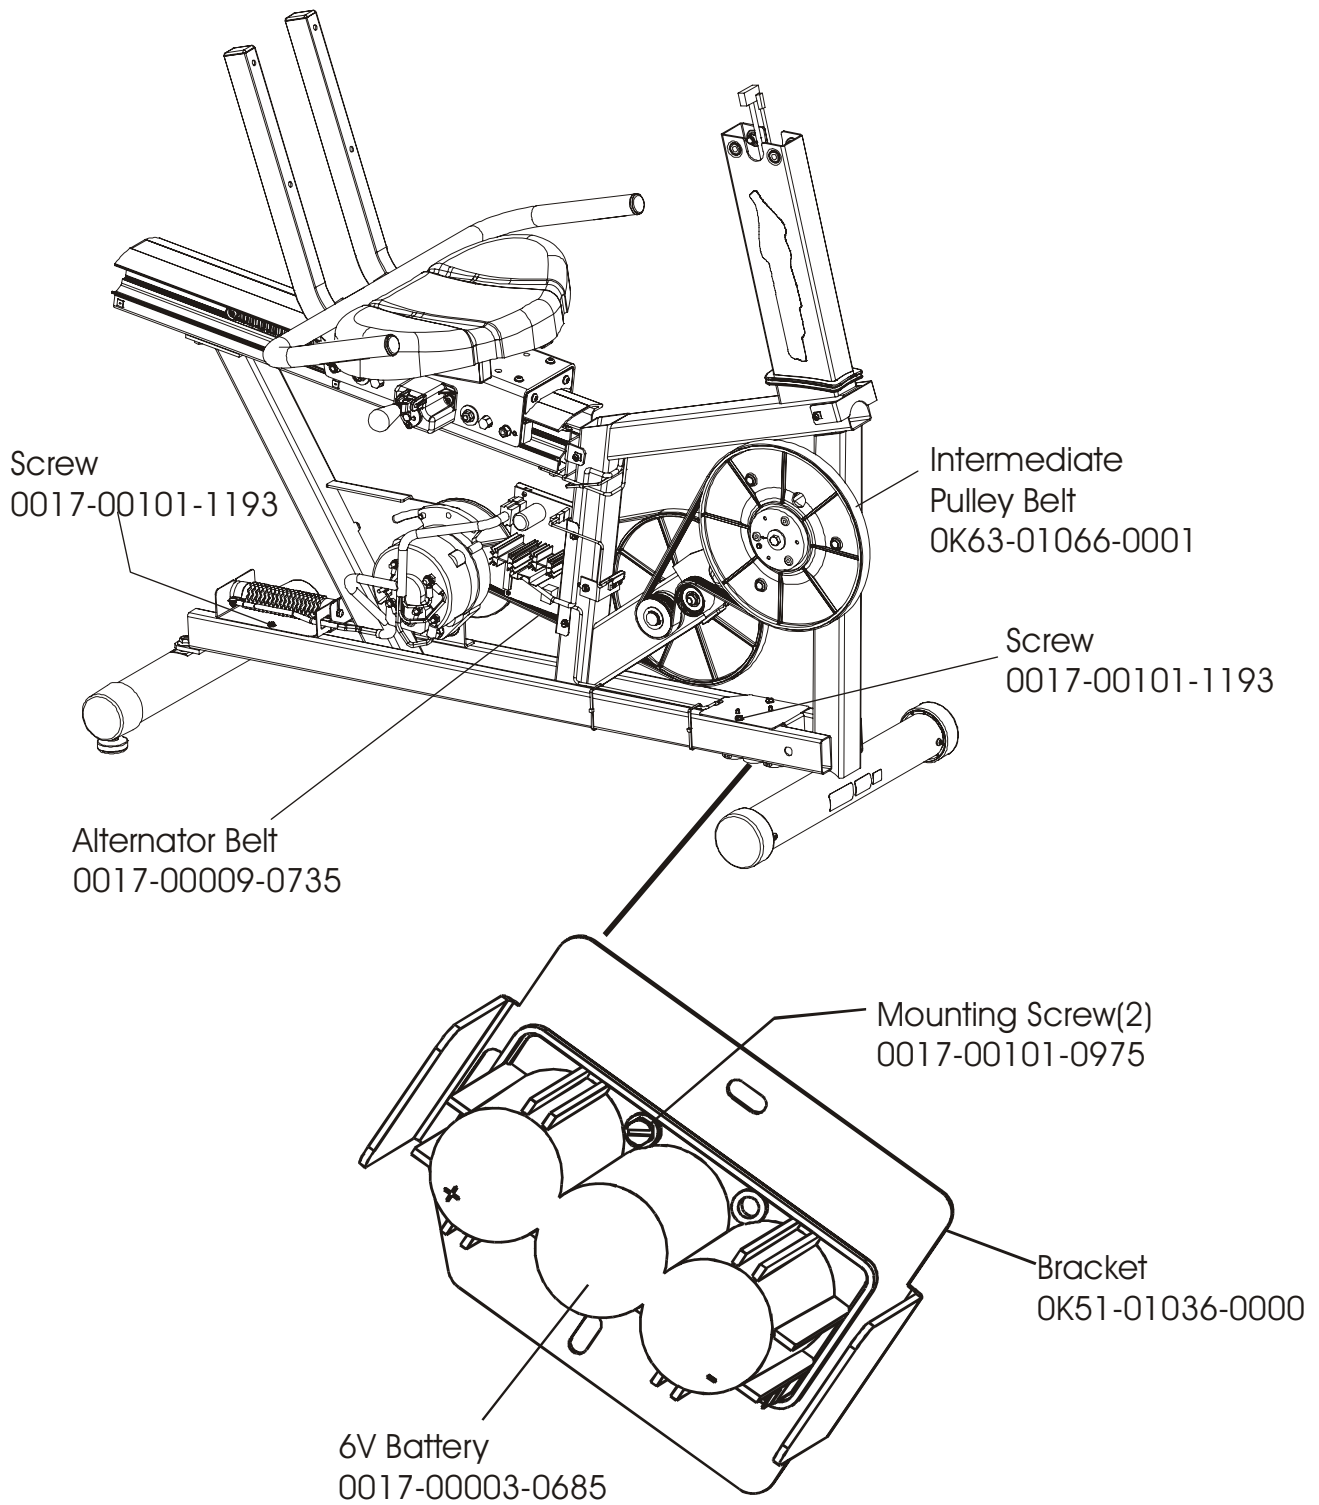

ARCTIC SILVER 95Ri
Resistor Assembly – AK39-00020-0001

 
95R-0XXX-04
S/N 100000 and UP

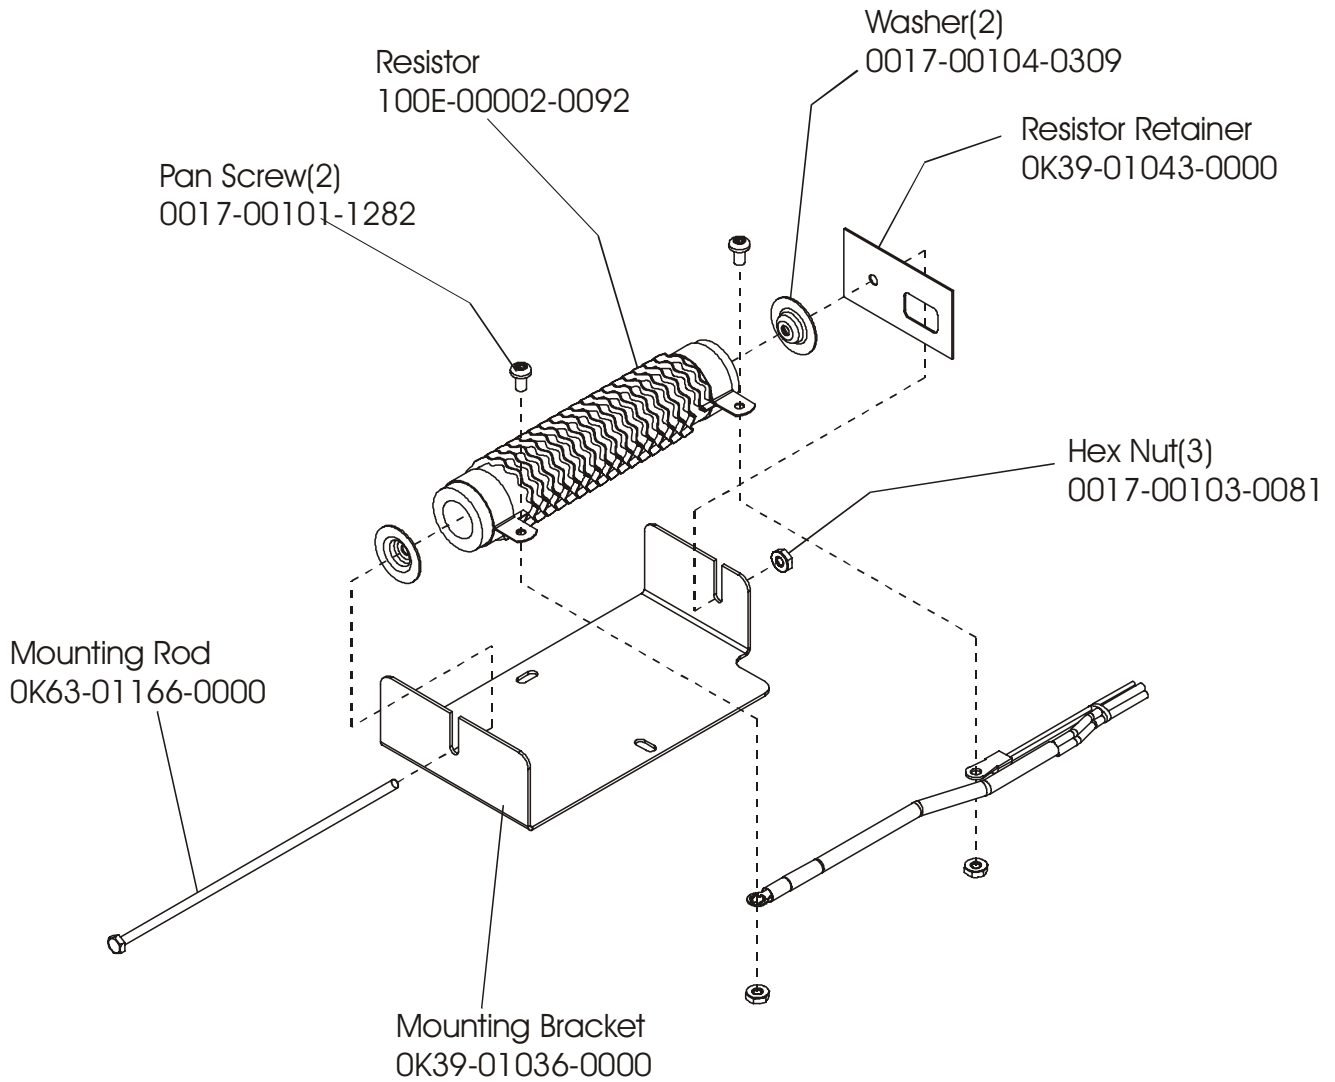

ARCTIC SILVER 95Ri
Power Control Board

95R-0XXX-04
S/N 10000 and UP

 
Assembly Number - AK39-00022-0001

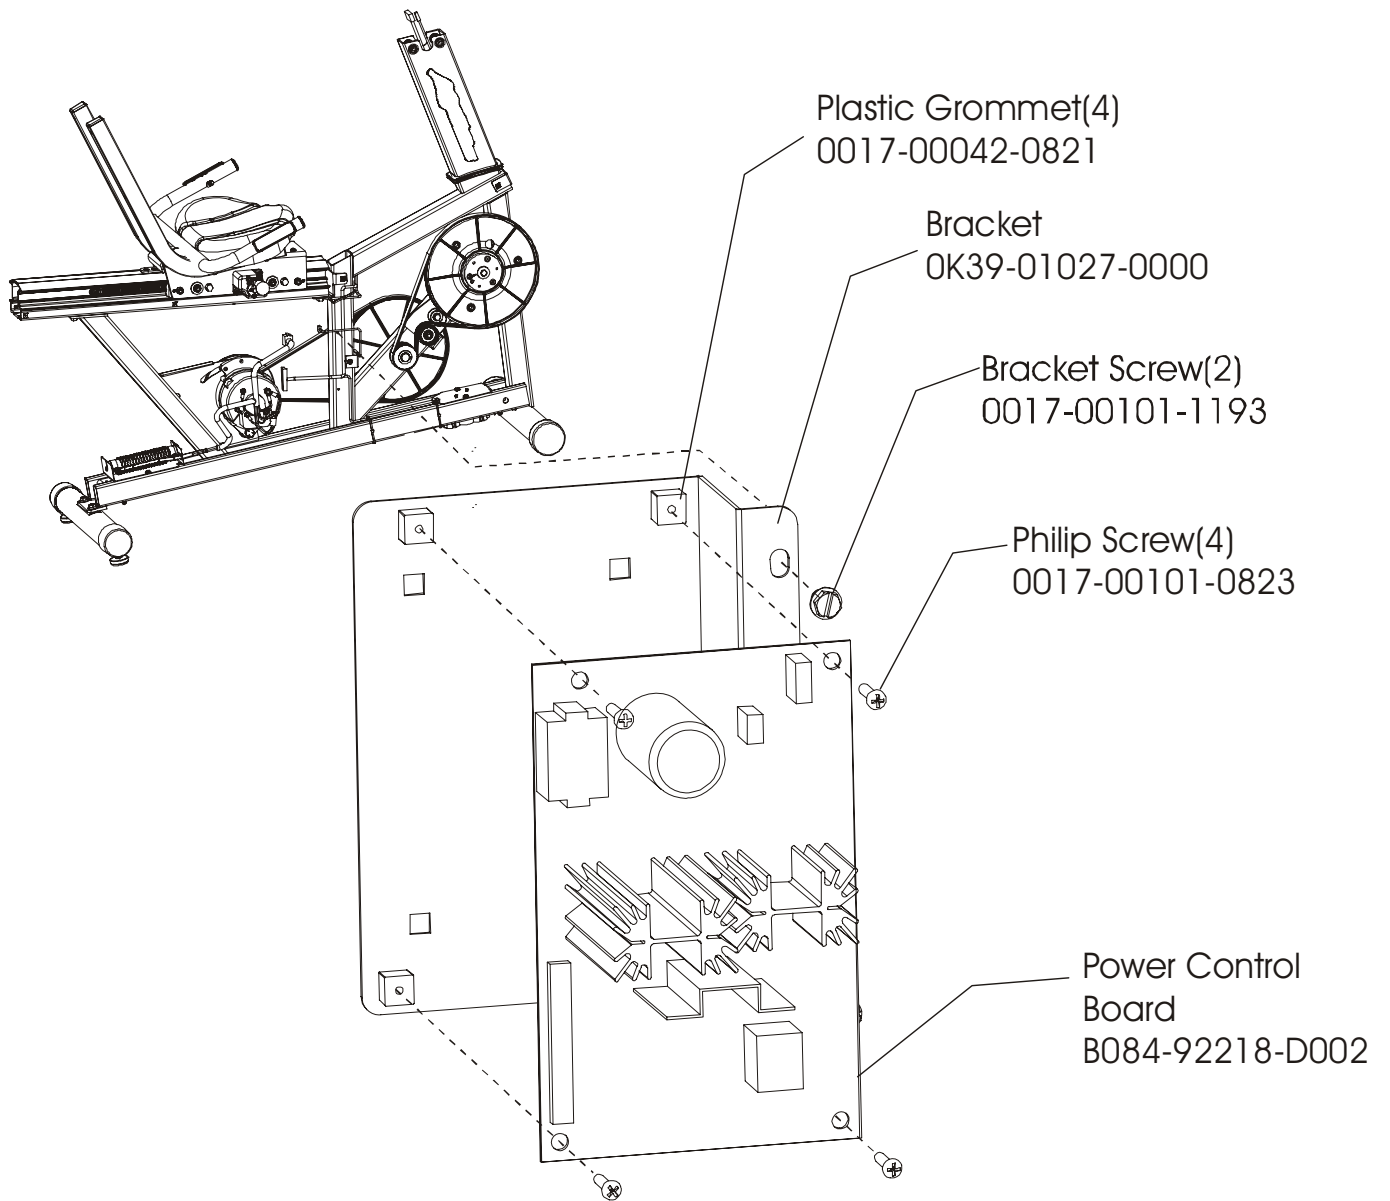

ARCTIC SILVER 95Ri
Alternator w/Pulley Assembly


95R-0XXX-04
S/N 10000 and UP

 Assembly Number – AK63-00093-0000

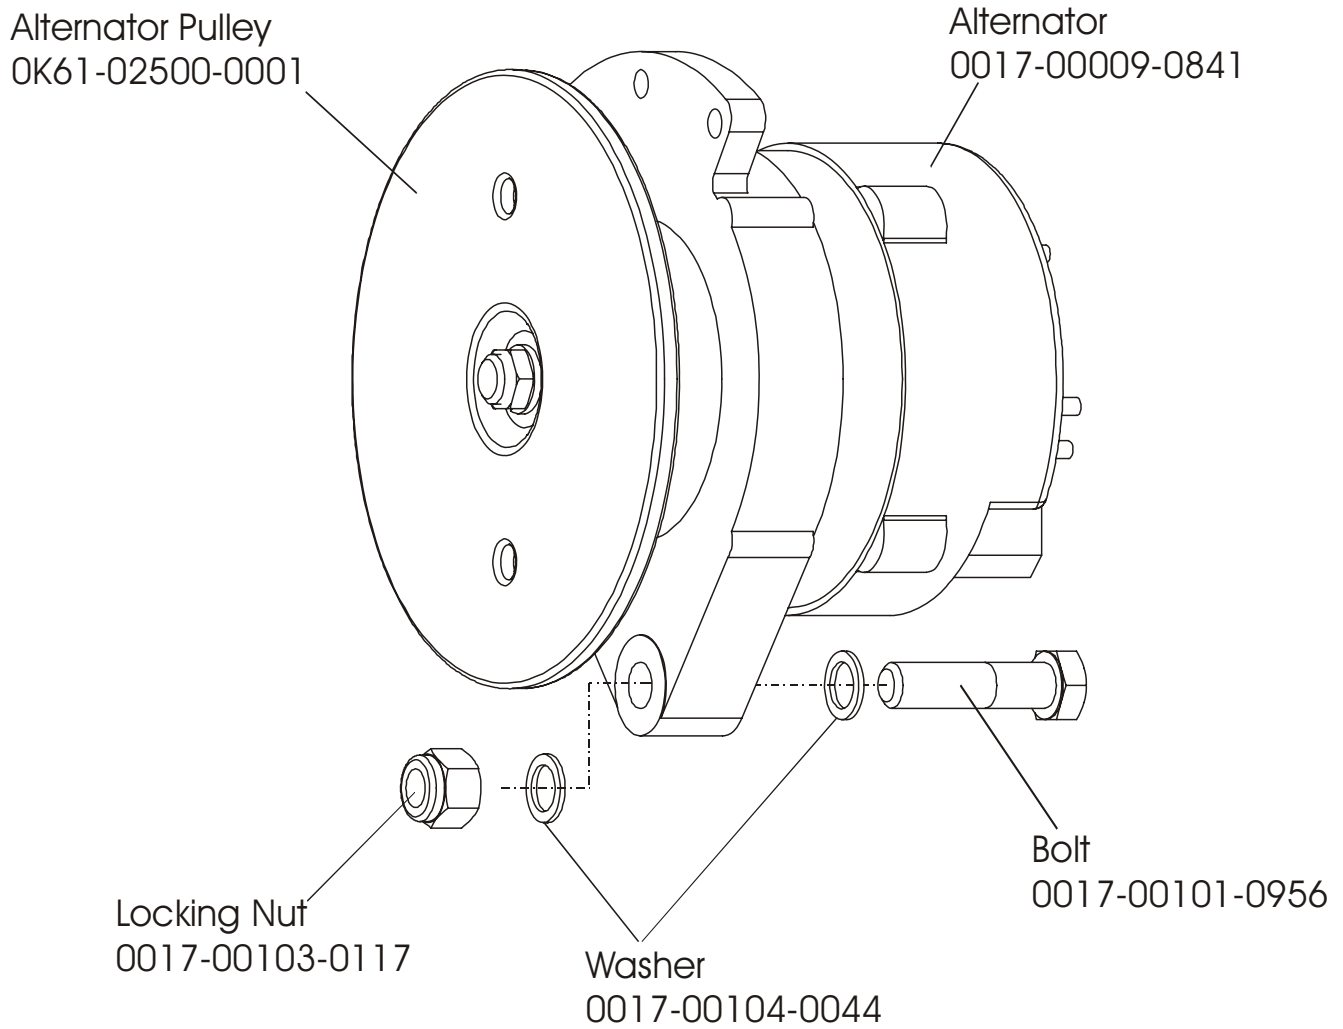

ARCTIC SILVER 95Ri
Crank Shaft and Bearing Assembly

 
95R-0XXX-04
S/N 10000 and UP

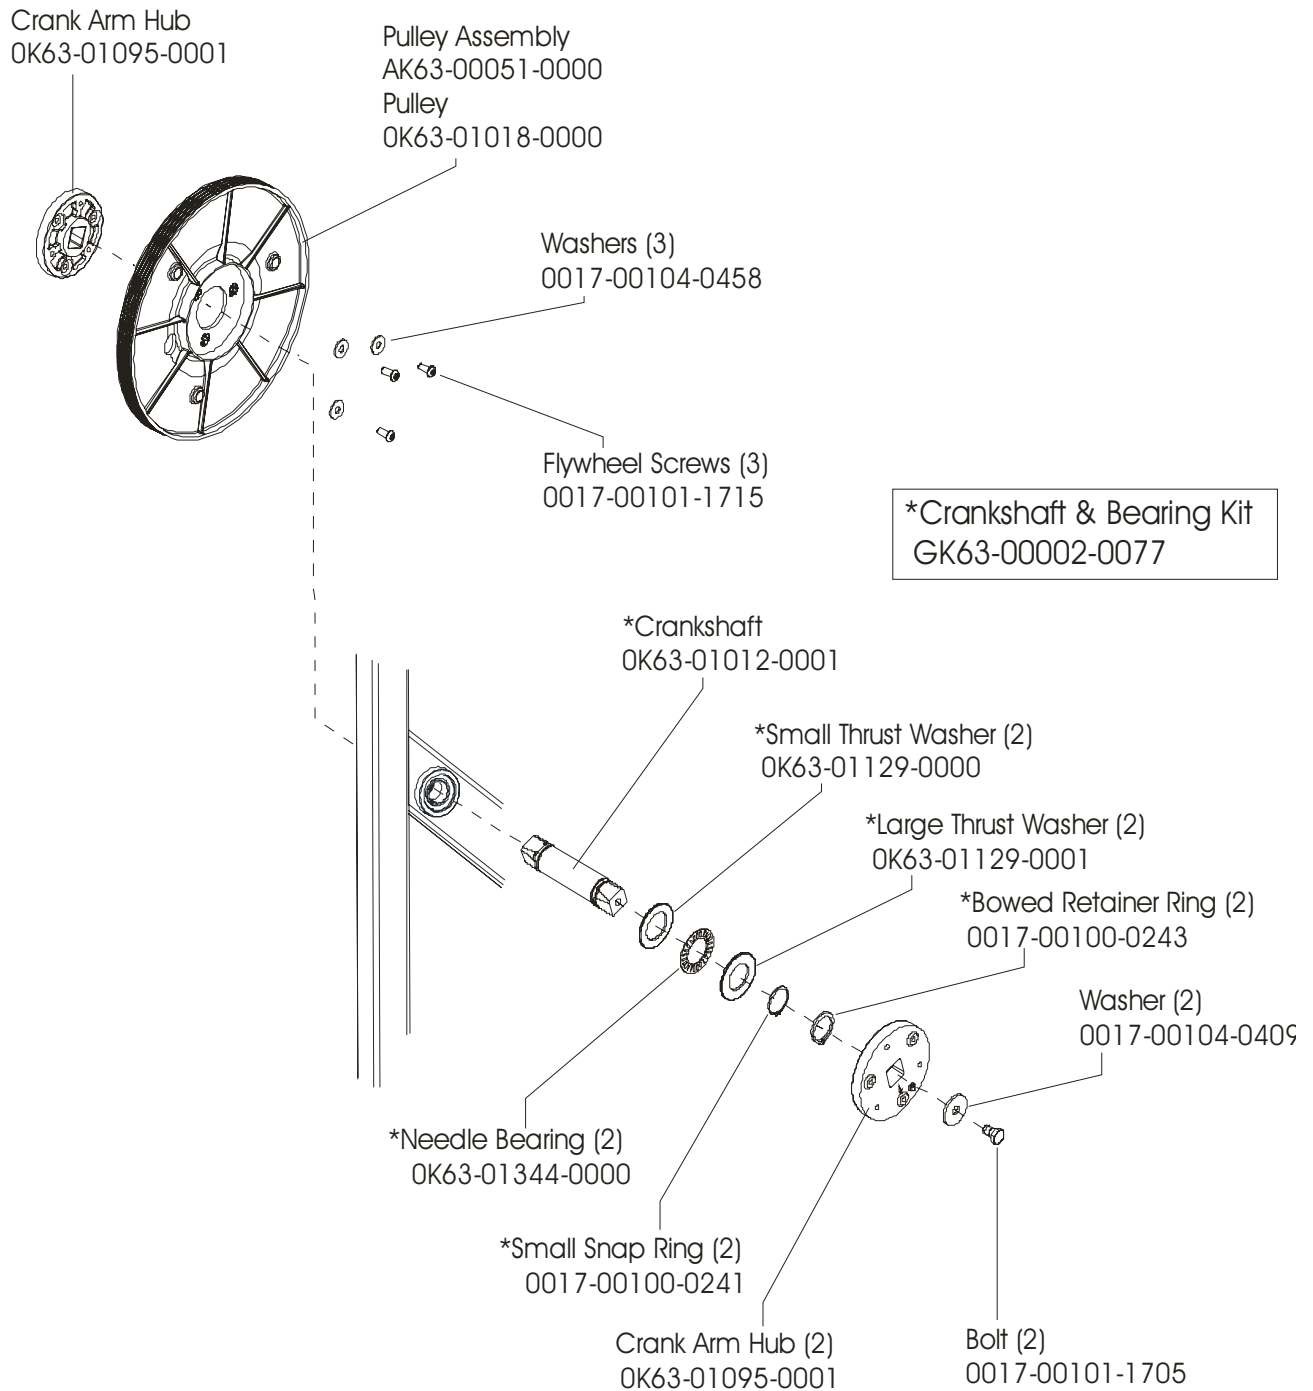


ARCTIC SILVER 95Ri
Intermediate Shaft and Bearing Assy.

95R-0XXX-04
S/N 10000 and UP

 Kit Number – GK63-00002-0007

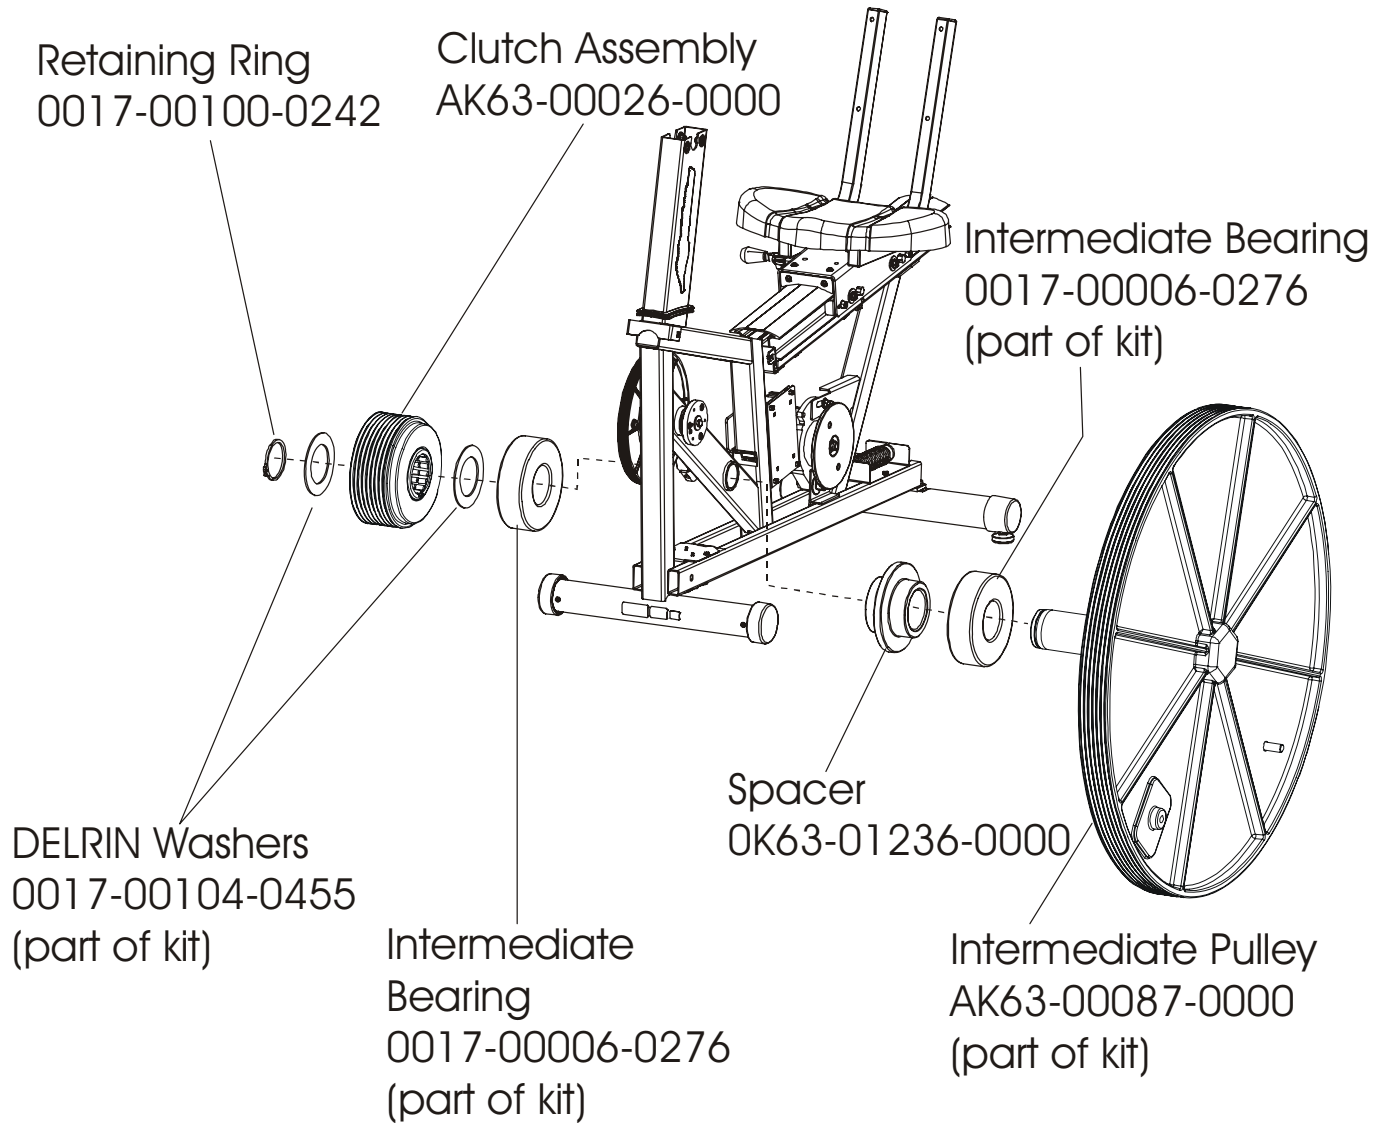


 Idler Bracket Assembly – AK63-00021-0000

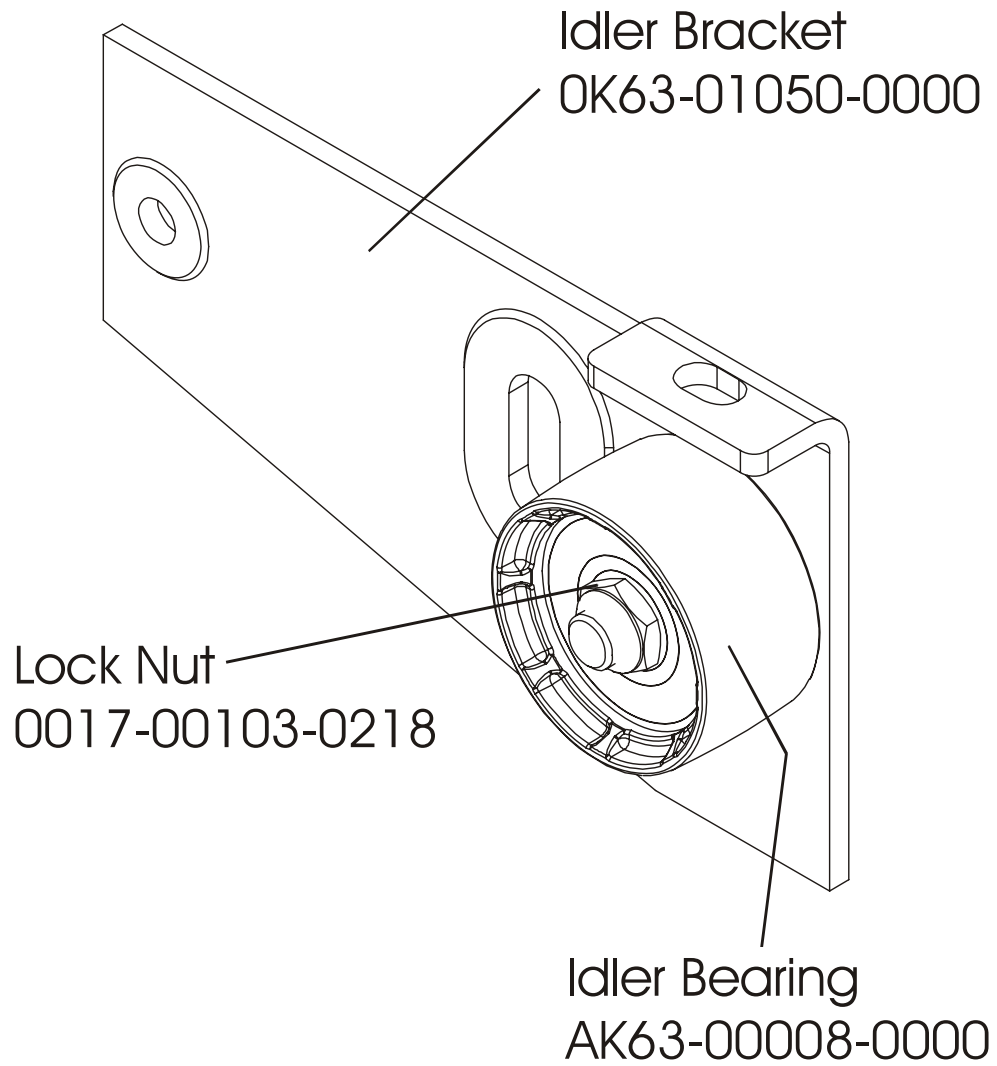


ARCTIC SILVER 95Ri
Seat Assembly

 95R-0XXX-04
S/N 10000 and UP

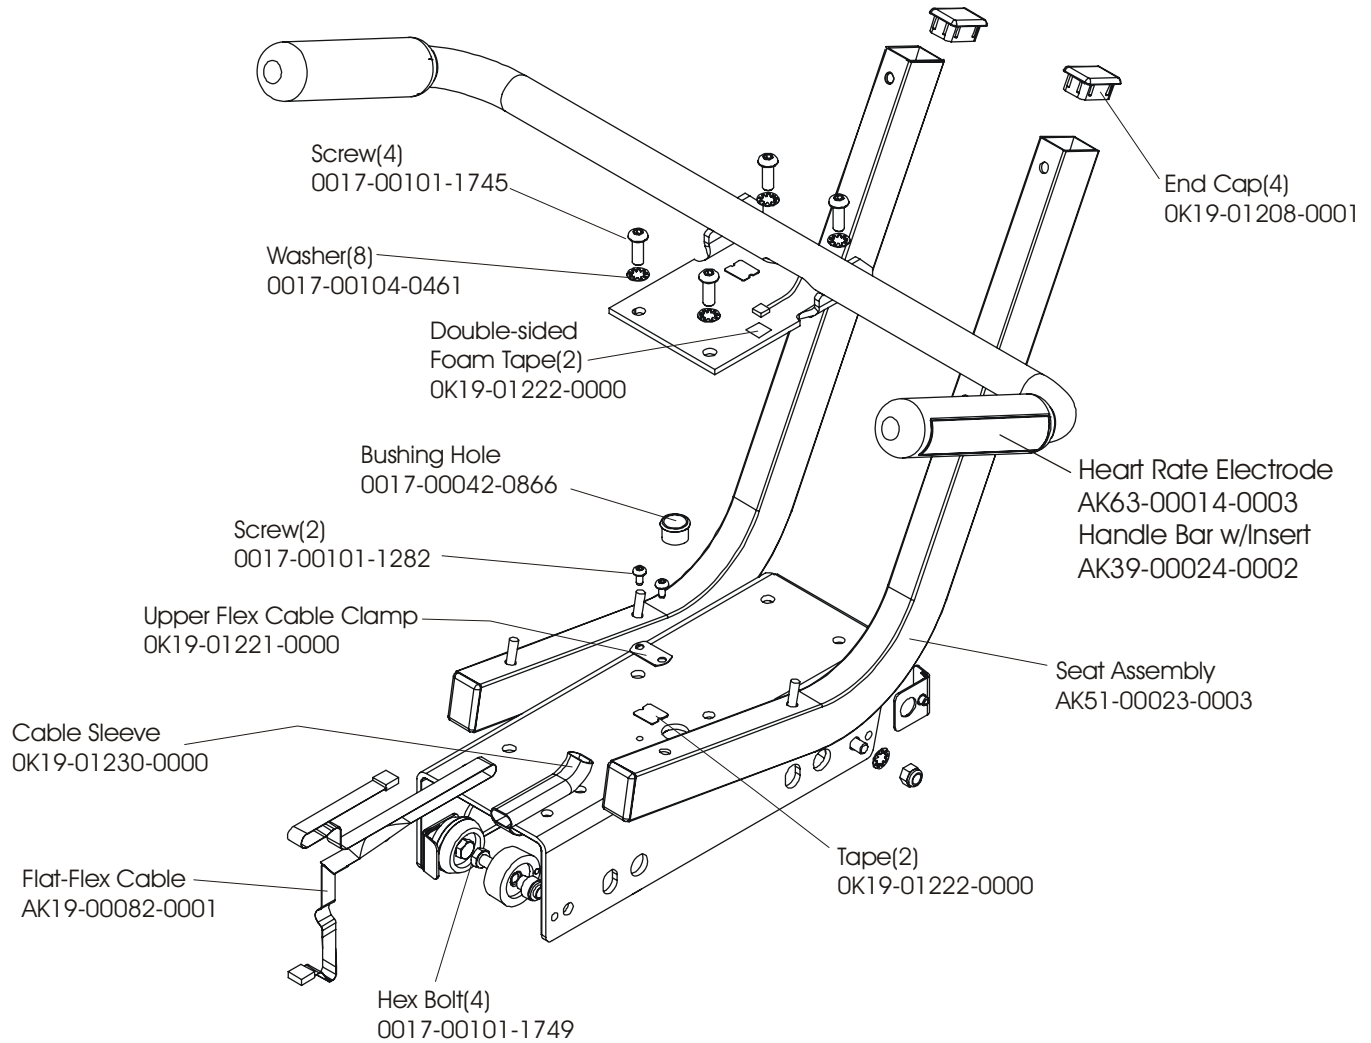


ARCTIC SILVER 95Ri
Seat Assembly - Bottom

 95R-0XXX-04
S/N 10000 and UP

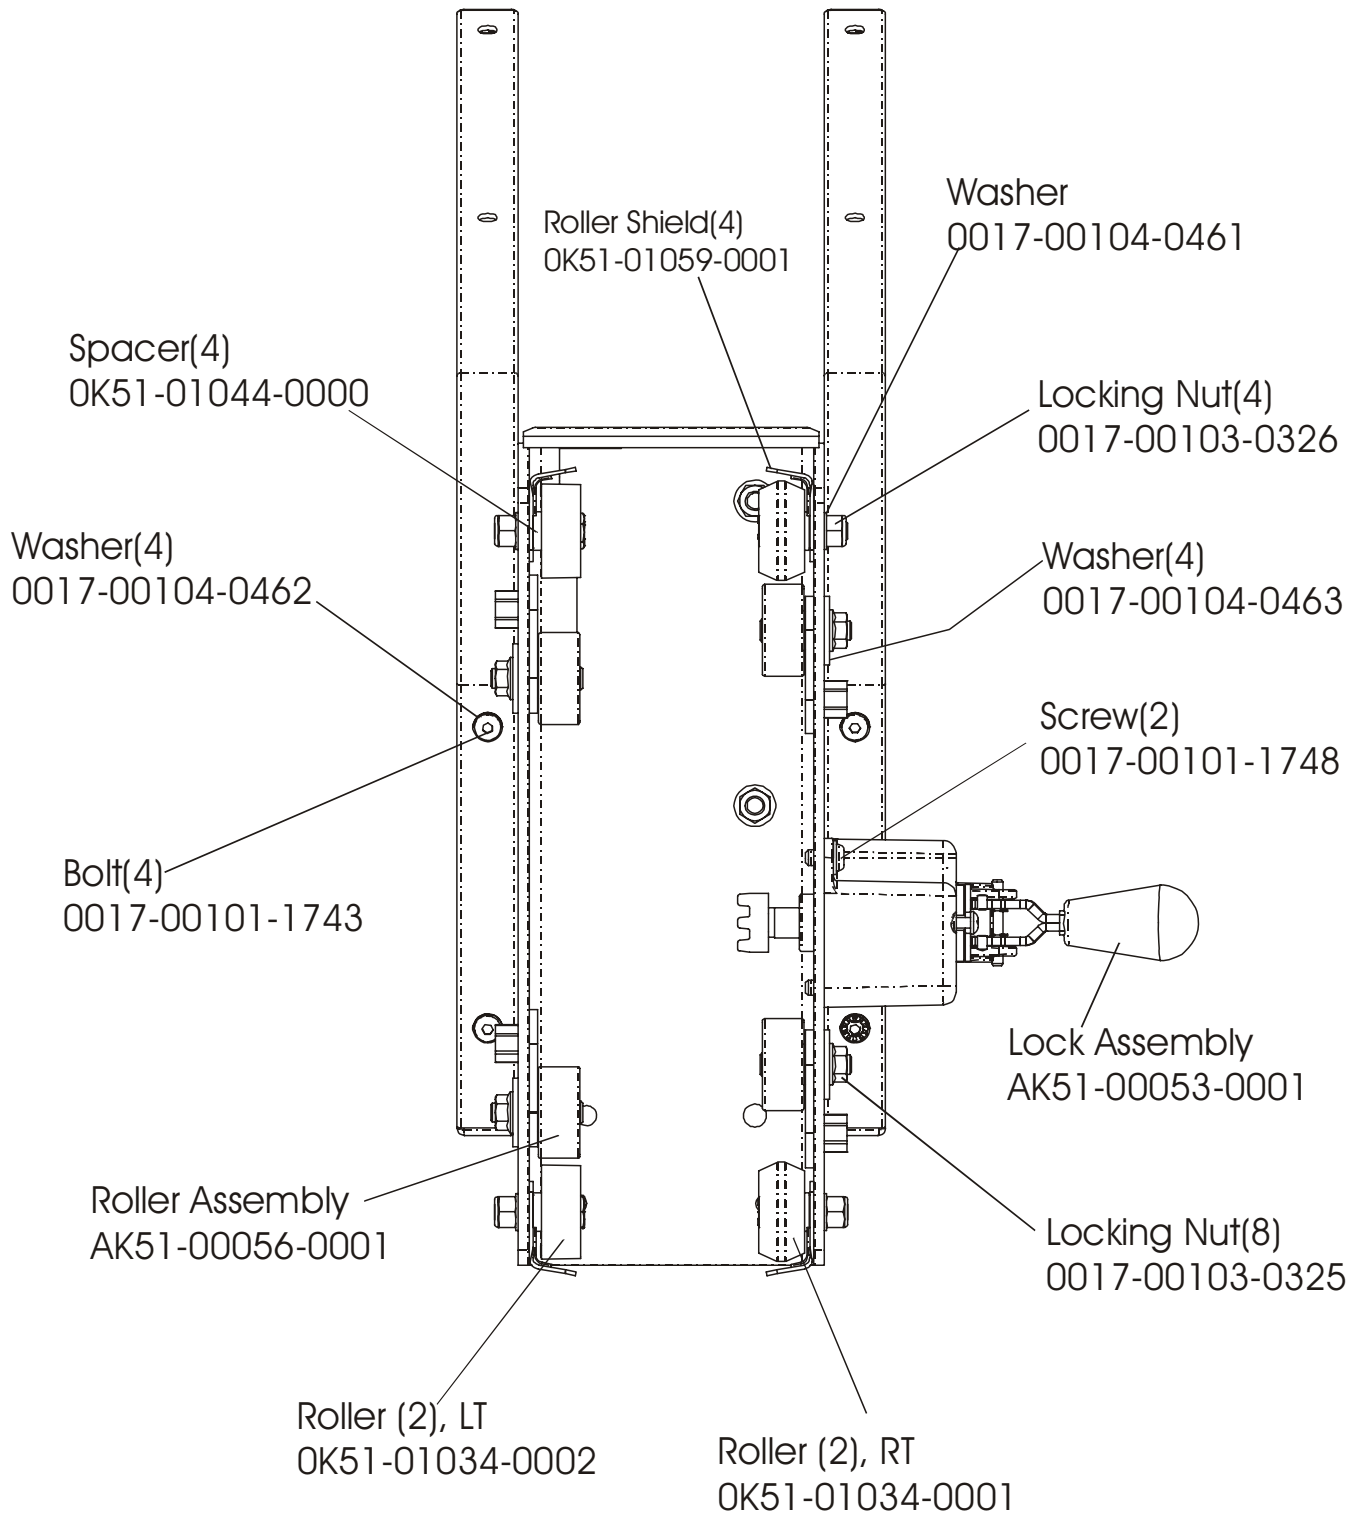


ARCTIC SILVER 95Ri
Seat Frame Assembly

 95R-0XXX-04
S/N 100000 and UP

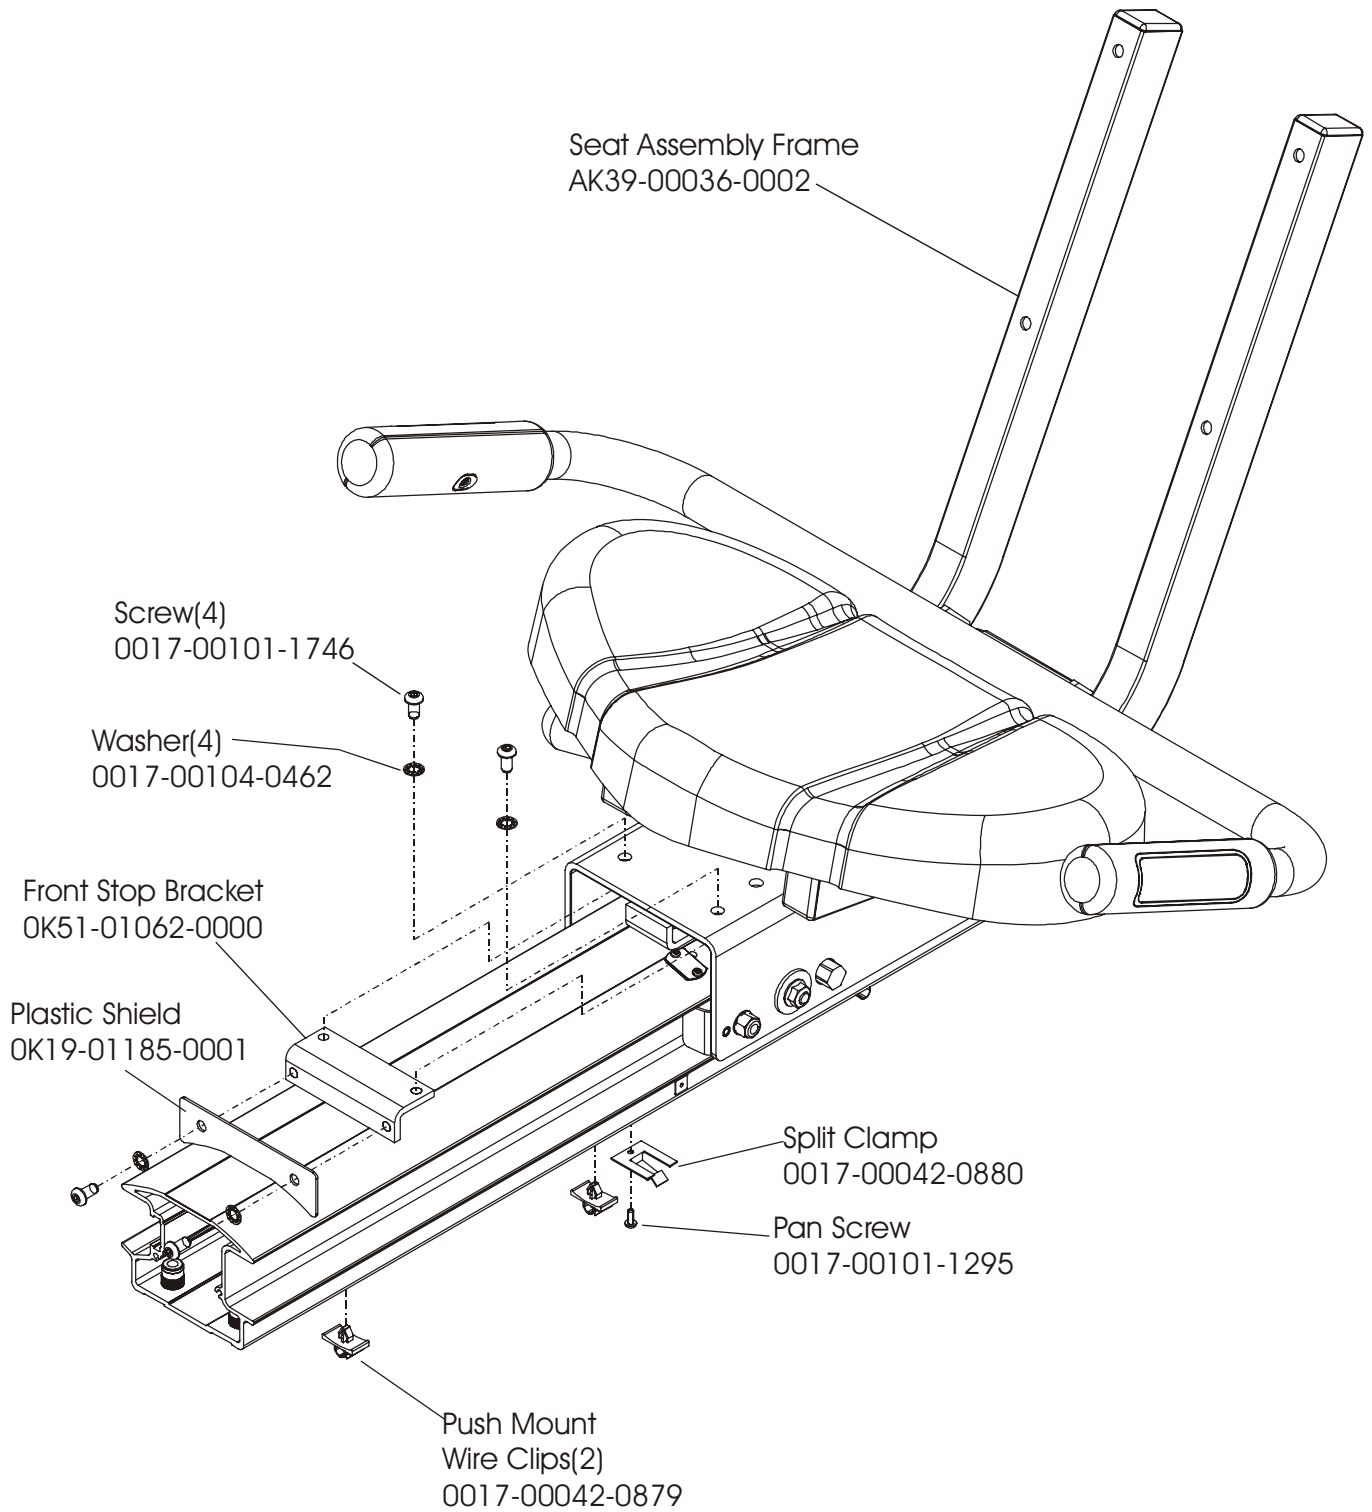


ARCTIC SILVER 95Ri
Seat Pads and Accessory Tray

 
95R-0XXX-04
S/N 100000 and UP

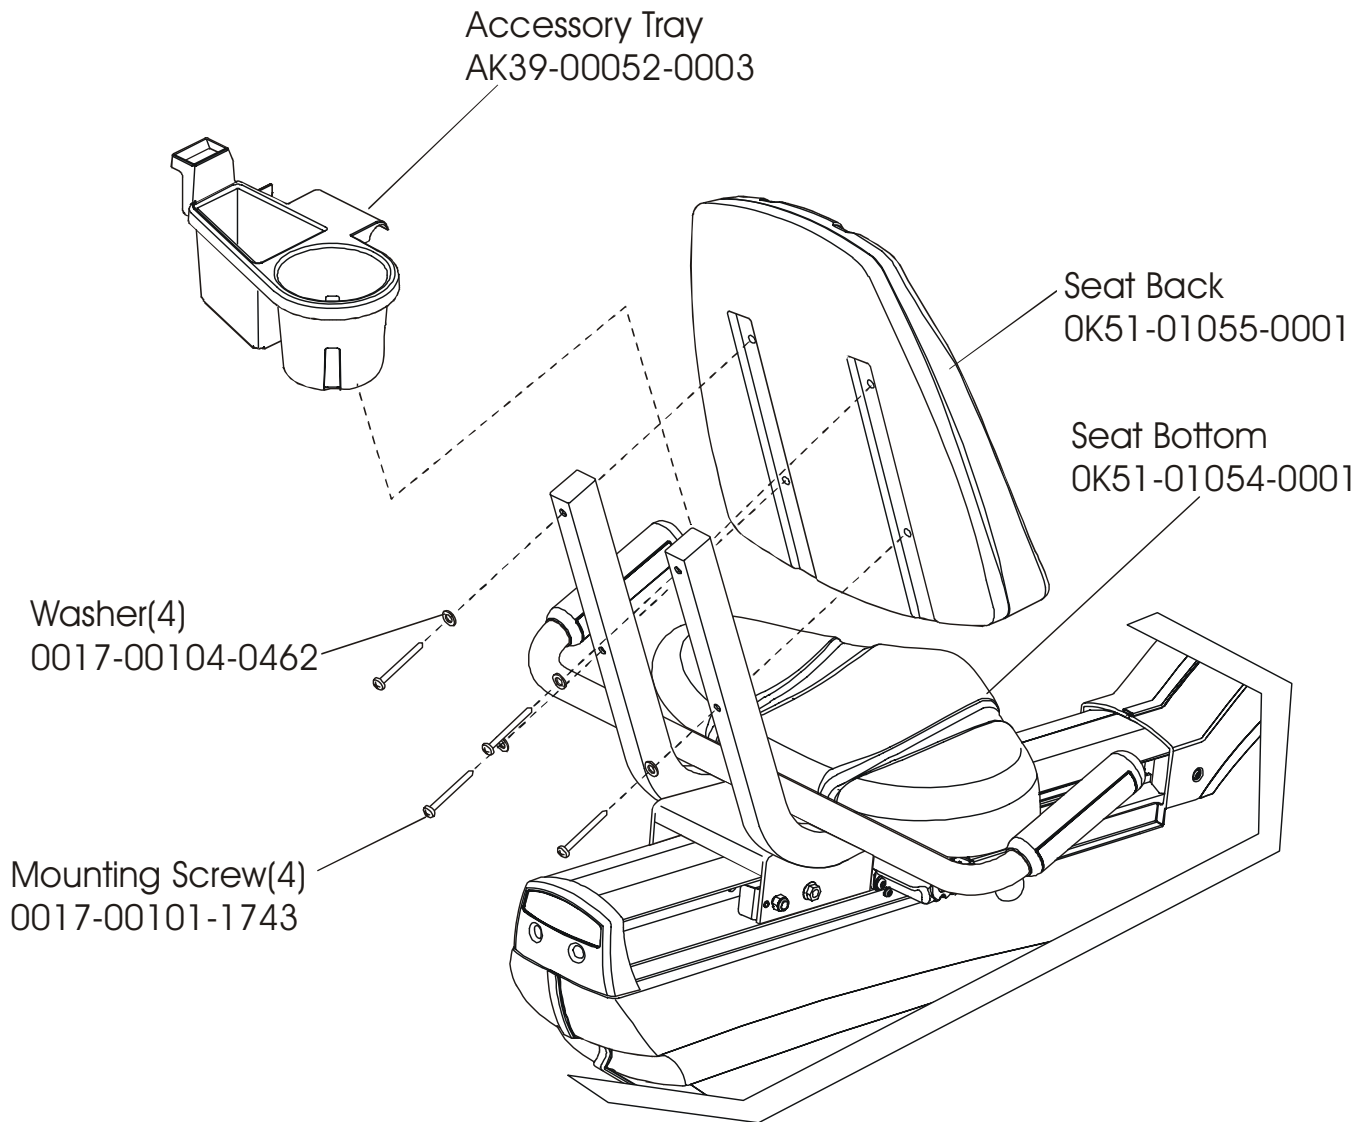

ARCTIC SILVER 95Ri
Extrusion Assy. – AK39-00027-0005

  
95R-0XXX-04
S/N 100000 and UP

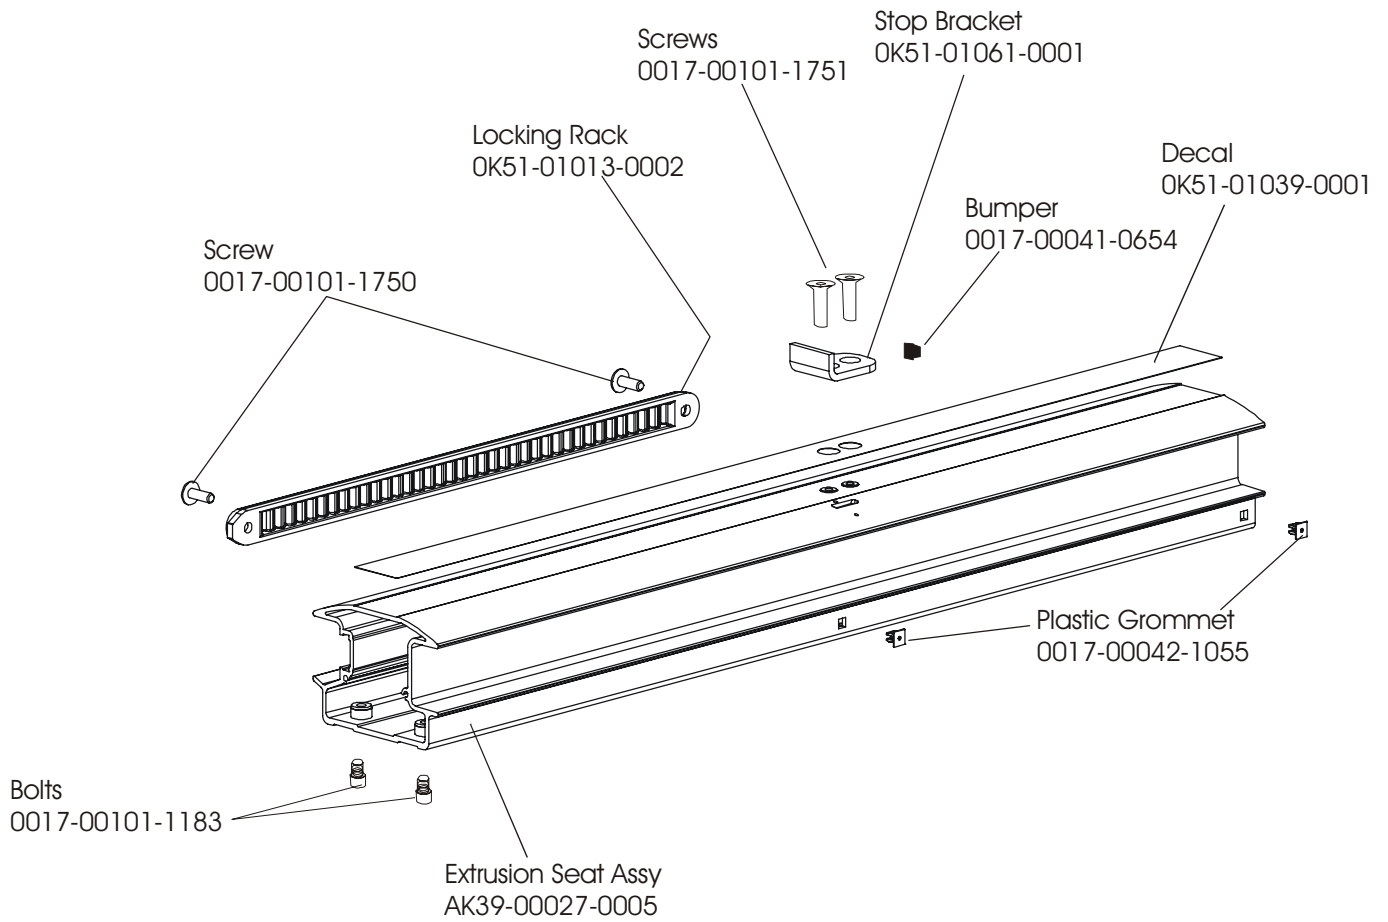


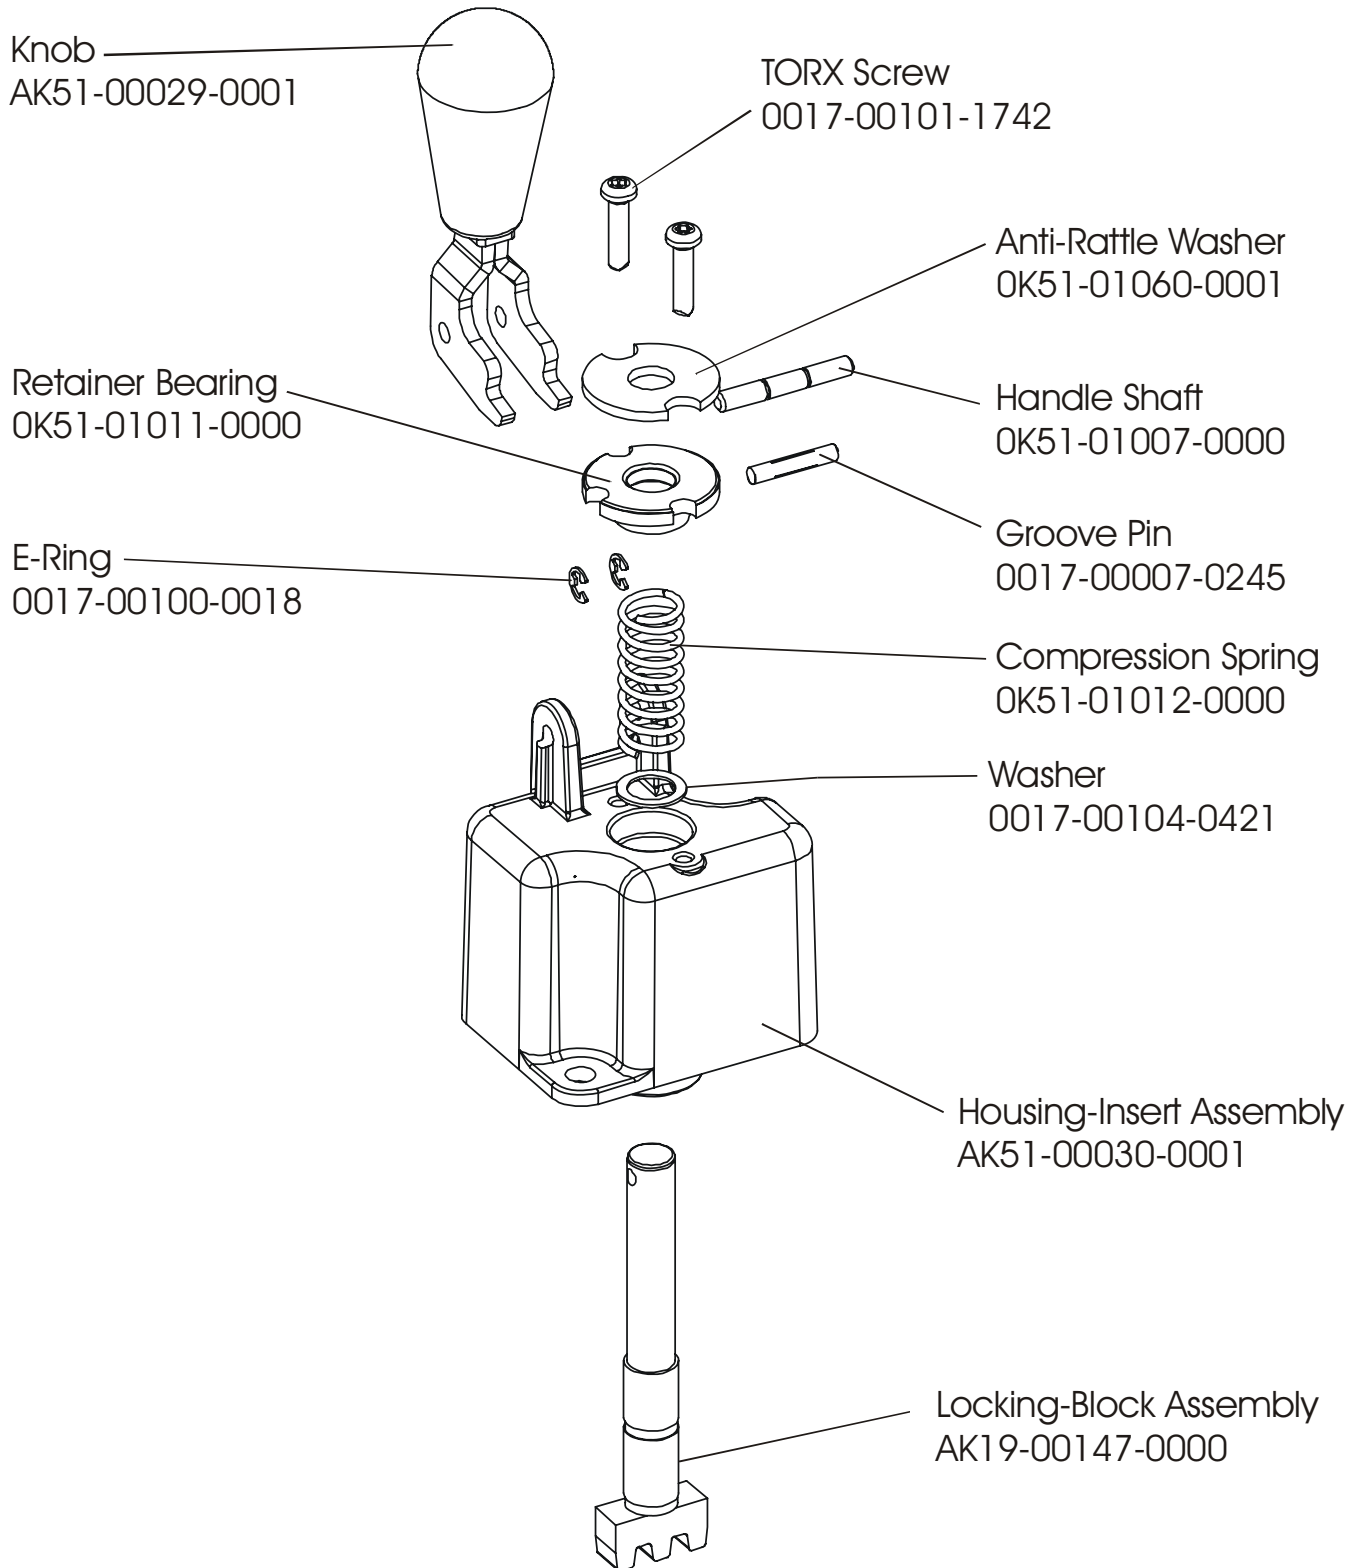

ARCTIC SILVER 95Ri
Wheel and Leveler

  95R-0XXX-04
S/N 10000 and UP

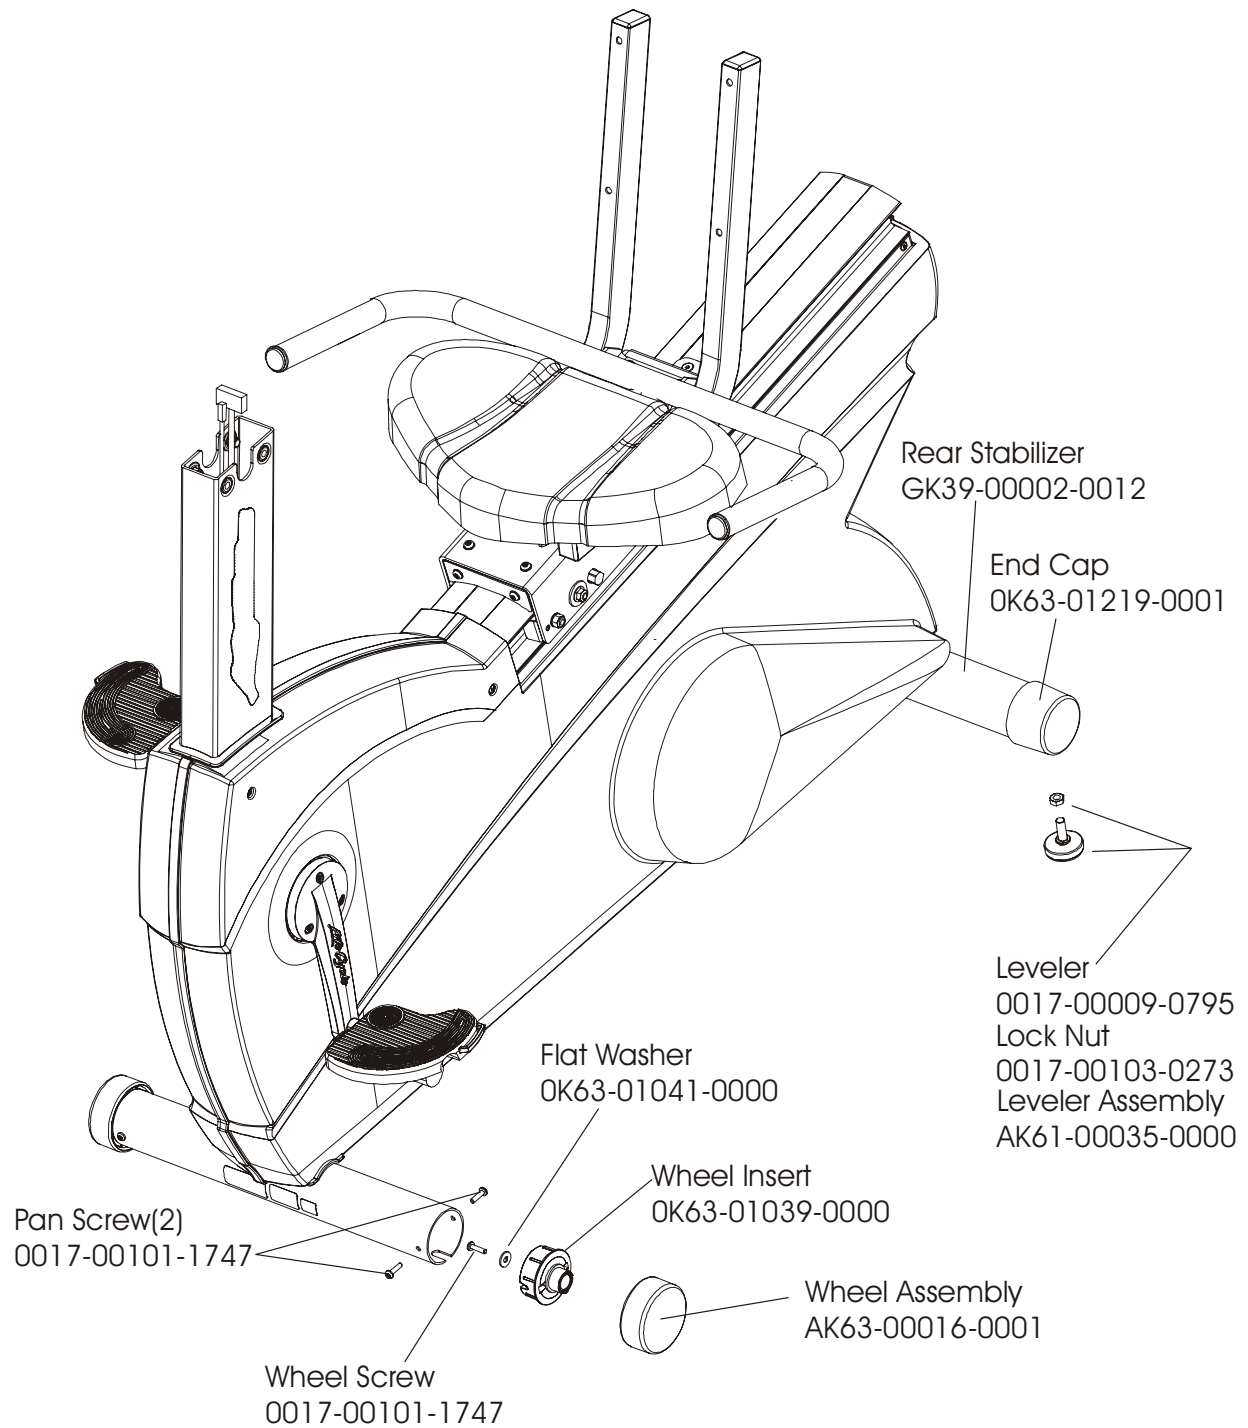

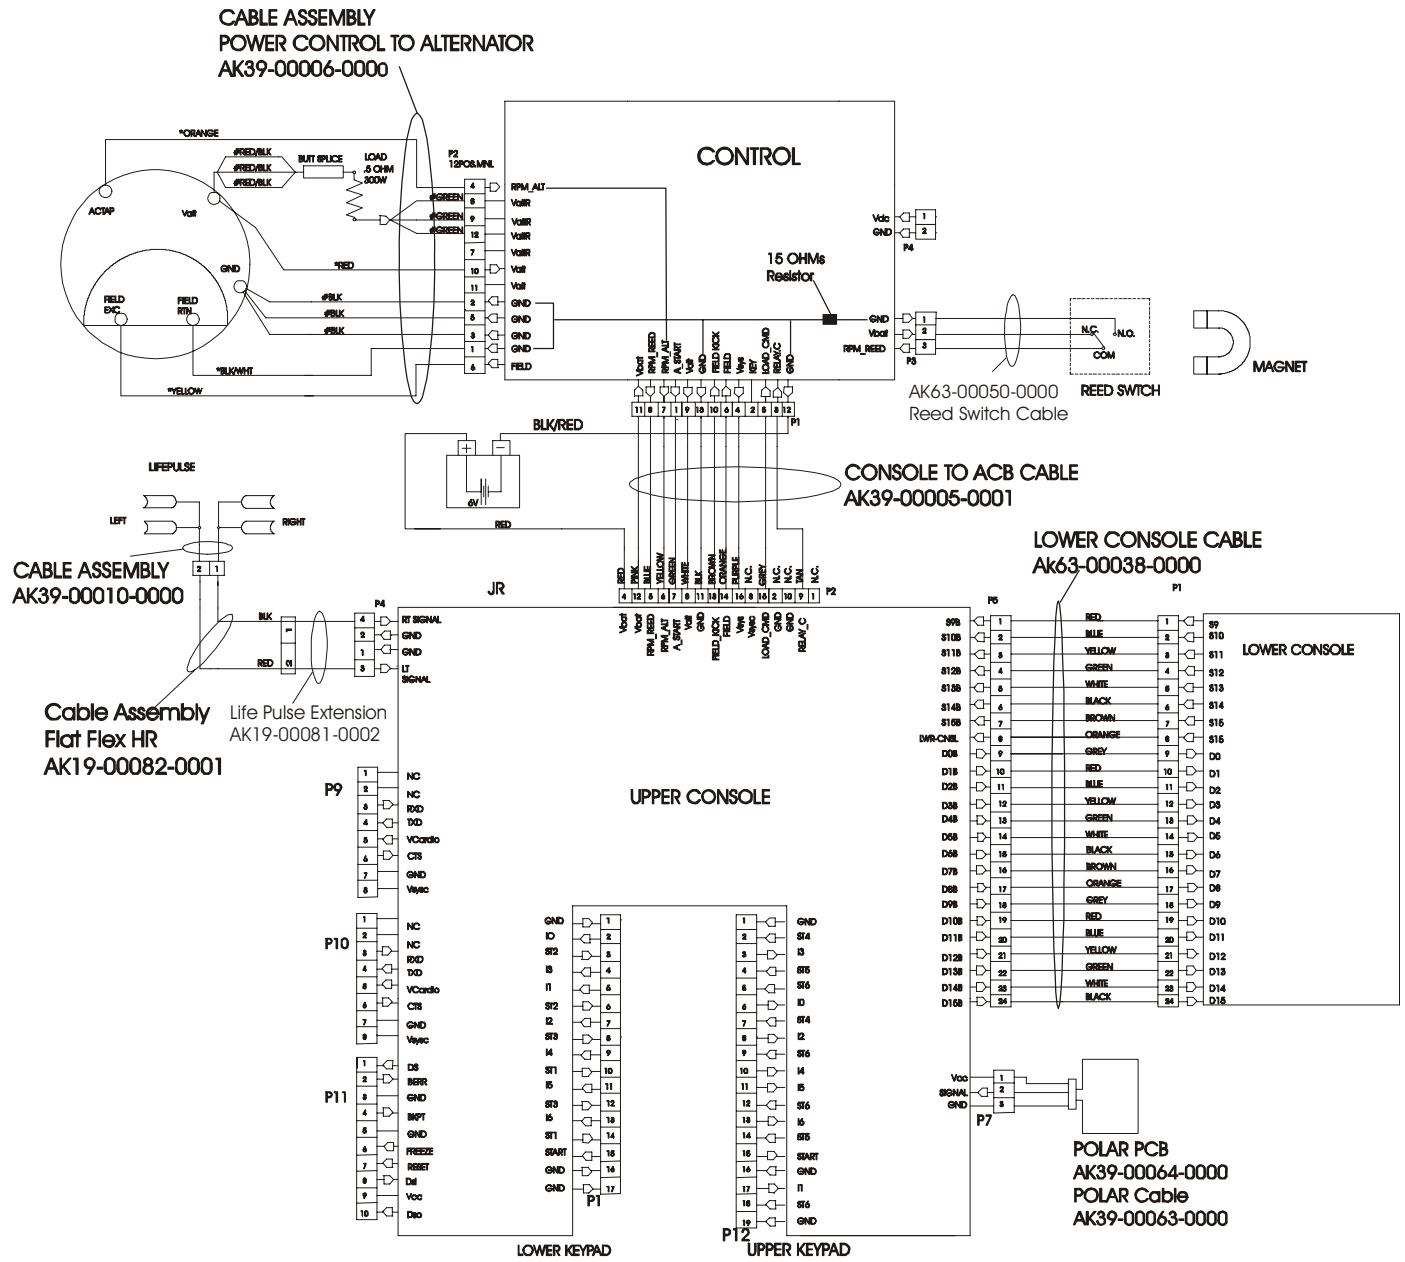

Cable Coax - AK32-00020-0001
Cable Power Ext - AK32-00078-0001