



## 300T Treadmill

PART #	DESCRIPTION
<b>BELTS</b>	
BD-15728	Belt, running
BD-10187	Belt, motor, drive
<b>CABLES</b>	
AW-14942	Cable, Cap jumper, Black
AW-14943	Cable, Cap jumper, White
AW-14899	Cable, Console, 300T
AW-14972	Cable, Opto Sensor, Long
<b>CONSOLE PARTS</b>	
AX-15030	Console Kit, 300T - (Display, DDM Cable)
PL-14883	Cup Holder, Plastic
AD-14835G1	Display Board, 300T w/ E-Prom
EC-14851	E-Prom, 300T V1.06
HX-14980	E-Stop Activator w/Tether Cord
PL-14979	E-Stop Mount
SW-14974	E-Stop Reed Switch W/ JST Conn.
AX-15411	Overlay, Keypad
	<b>Polar Heartrate</b>
AD-13930	Polar Transmitter/Chest Strap
AD-14177	Heart Rate Transmitter Belt with Watch
<b>DECK &amp; HARDWARE</b>	
DK-14879	Deck, Running
AF-14945	Deck Belt Guard, Left
AF-14946	Deck Belt Guard, Right
HX-14957	Deck Mount, Rubber 1" O.D. x 3/4", 50 Duro <b>(Quantity of 4 per Machine)</b>
<b>DRIVE MOTOR - DC : 60 Hz</b>	
MR-14803	Motor, Drive, 2HP 90VDC, open face
<b>DRIVE MOTOR PARTS</b>	
SK-15891	Brush kit, sold as a pair
CA-10432	Capacitor - Filter (7700 $\mu$ F)
PL-15017	Support block, Capacitor, Black plastic
AX-09848	Choke Assy, 60Hz
FM-14962	Drive pully, Flywheel <b>(all one unit)</b>
AF-14940	Plate, Motor Base
<b>ELEVATION MOTORS (ONLY)</b>	
MR-14859	Motor, Elevation, 115V, W/Reedswitch <b>(order label DE-10288)</b>
DE-10288	Decal, Belt Caution, <b>(Covers hole in frame where elevation motor mounts)</b>
<b>ELEVATION ASSEMBLY PARTS &amp; HARDWARE</b>	
HX-11203	Tube Nut, Elevation
FS-11201	Clamp, Trunion
HS-11485	Screw, Trunion Mnting, Tube Nut to Elevation: 10-32 x 3/8 hex
HP-10188	Cotter Pin
<b>FRAME</b>	
SK-15758	Frame Assy 300T
<b>FRONT HOOD COVER</b>	

PL-14860 Motor cover

#### FRONT ROLLER

AL-14829 Roller, front W/sheave, 2.5"

HS-15572 Bolt, 1/4-20 x 7/8"- Sheave Mounting

#### HANDRAILS

HX-14875 Grips Handlebars

AX-15028 Handlebar Assy w/Grips

AF-15012 Pedestal, left

AF-15013 Pedestal,Right

PL-14773 Pedestal Insert, Plastic, left

PL-14776 Pedestal Insert, Plastic, right

#### HARDWARE

AX-15040 Hardware Pack, 300T

#### LABELS (FRAME)

DE-14573-9 Lable,Side,300T

DE-14572-1 Lable,Trotter by Cybex,Consumer

#### MANUALS

LT-14891 Manual, Owners, 300T

#### PAINT

PT-10880 Touch Up, Bottle, Dark Grey. - Powder Coat

PT-10167 Spray Touch Up Paint, Dark Gray (Frame) - 532 U, 16 oz.

PT-00993 Spray Touch Up Paint, Black, 16 oz.

#### REAR ROLLER

AL-09620 Roller,Rear 2.5"

#### LOWER ELECTRONICS

AR-14857 Lower, PCB Assy, 300T

EF-12367 Fuse, 20 Amp slo-blo

AW-13853 Power cord

SCR Bridge, PCB Mount - This component requires soldering for installation. This should be performed by someone with the proper tools and experience with

soldering

#### SPEED SENSORS AND PARTS

AW-14972 Speed sensor, with cable

FS-14140 Speed sensor bracket

DE-14260 Speed sensor Target Disc

#### TROTTER TOOLS

FS-12263 Tool: Brush Cap Removal

EH-14257 Brush Seater/Commutator Cleaner, Box of 4