



Life Cycle 93R
General Assembly


93R-0XXX-01
S/N LRB10001

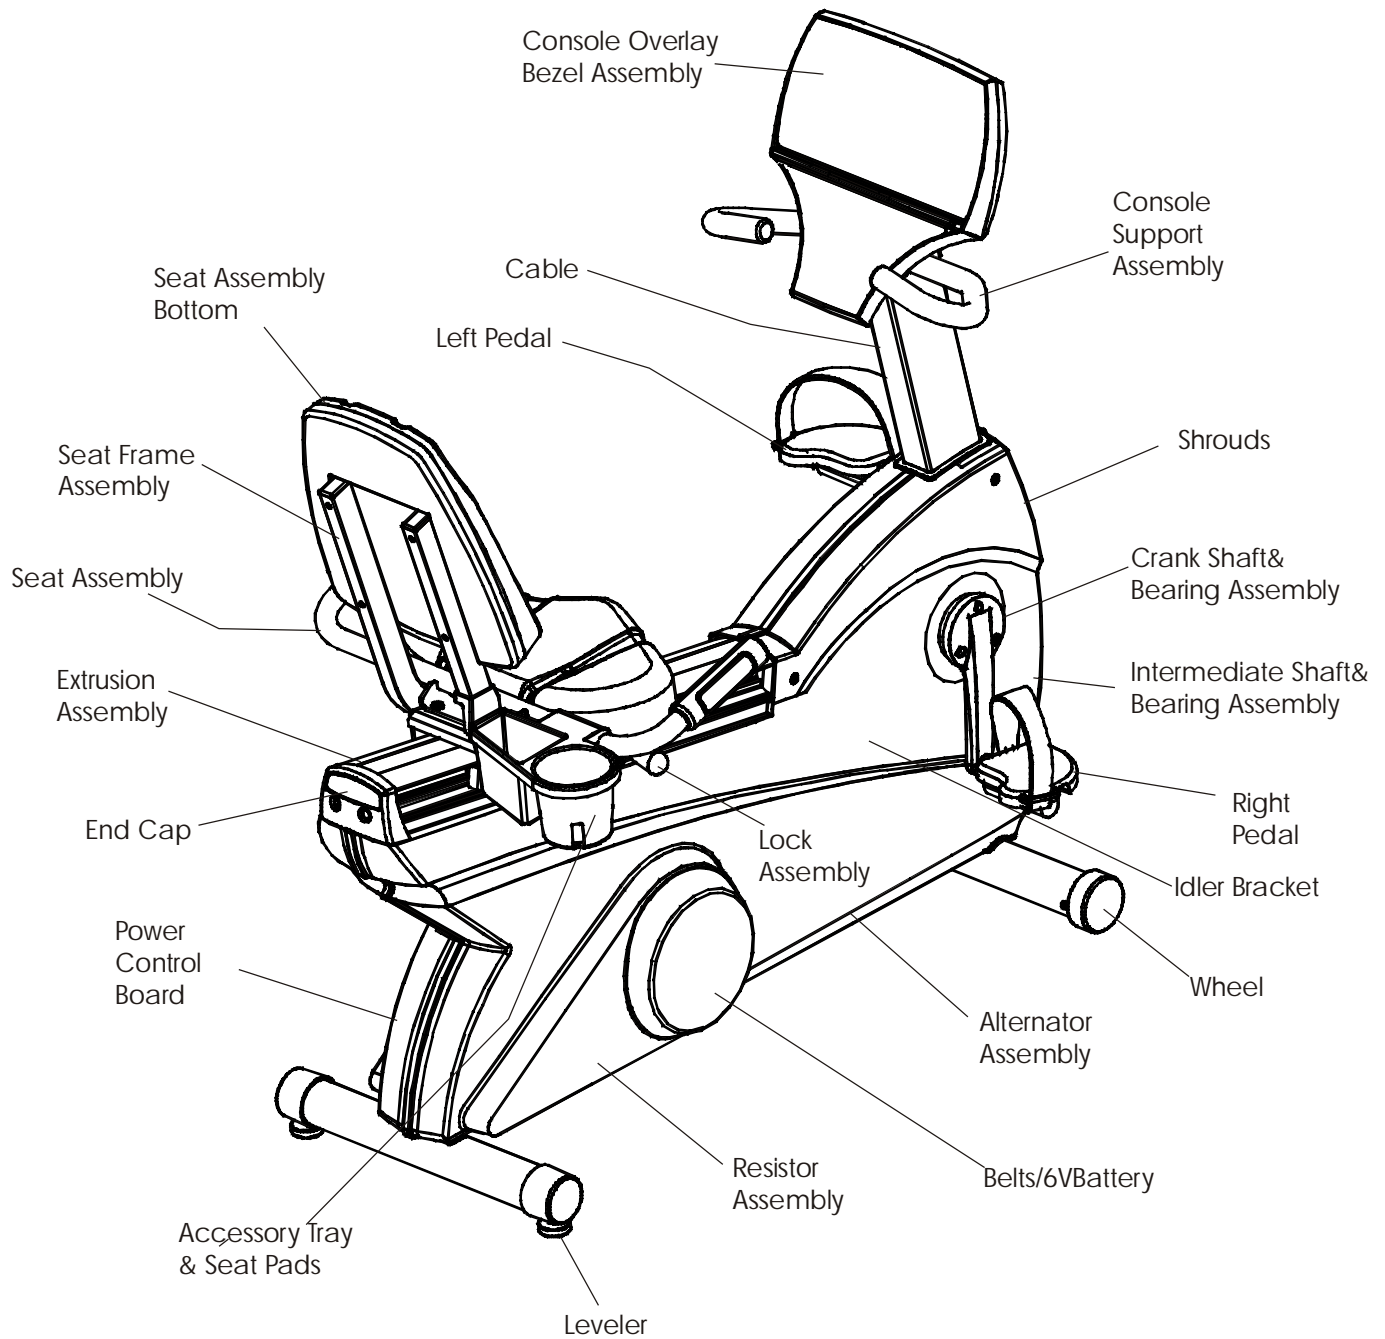

Description	Part Number
Service Manual	M051-00K39-A012
Operation Manual	M051-00K39-A020
Hardware Bag	GK39-00002-00008
Network C-Safe Kit	GK63-00002-0003

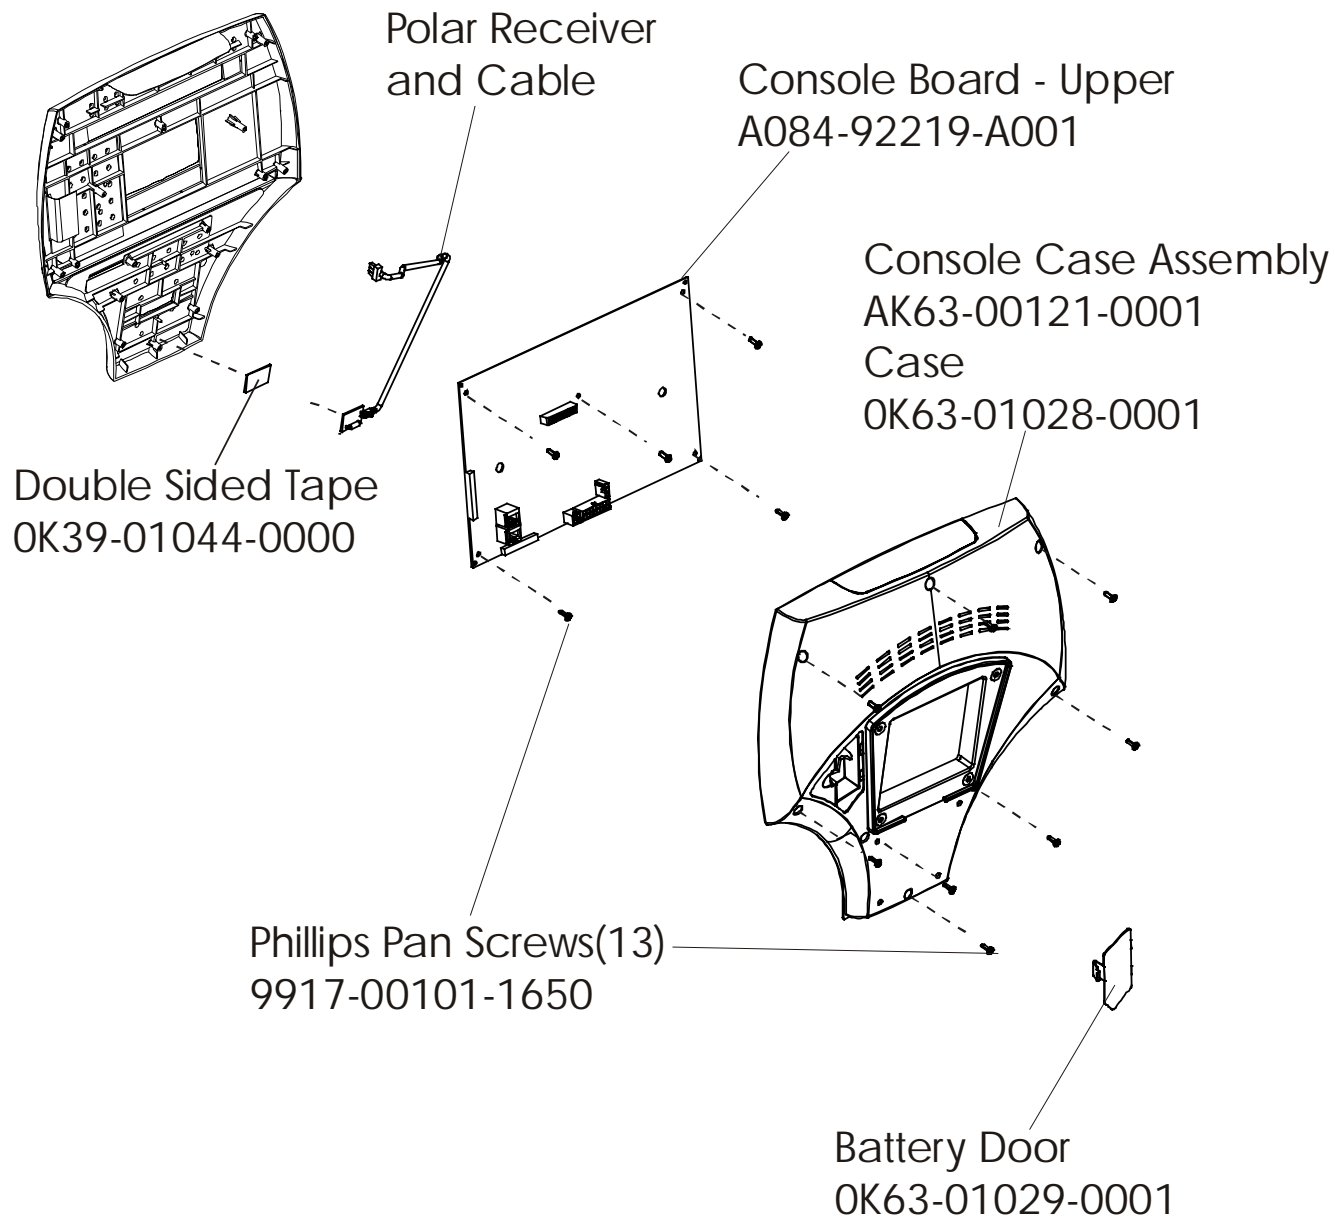



Console Assembly	Overlay Bezel
AK39-00072-0001 Eng Met	AK63-00167-0001 Eng Met
AK39-00072-0002 Eng Met	
AK39-00072-0003 Ger Met	AK63-00167-0003 Ger Met
AK39-00072-0004 Spn Met	AK63-00167-0004 Spn Met
AK39-00072-0006 Jap Met	AK63-00167-0006 Jap Met
AK39-00072-0007 Frn Met	AK63-00167-0007 Frn Met
AK39-00072-0008 Itl Met	AK63-00167-0008 Itl Met
AK39-00072-0009 Dut Met	AK63-00167-0009 Dut Met

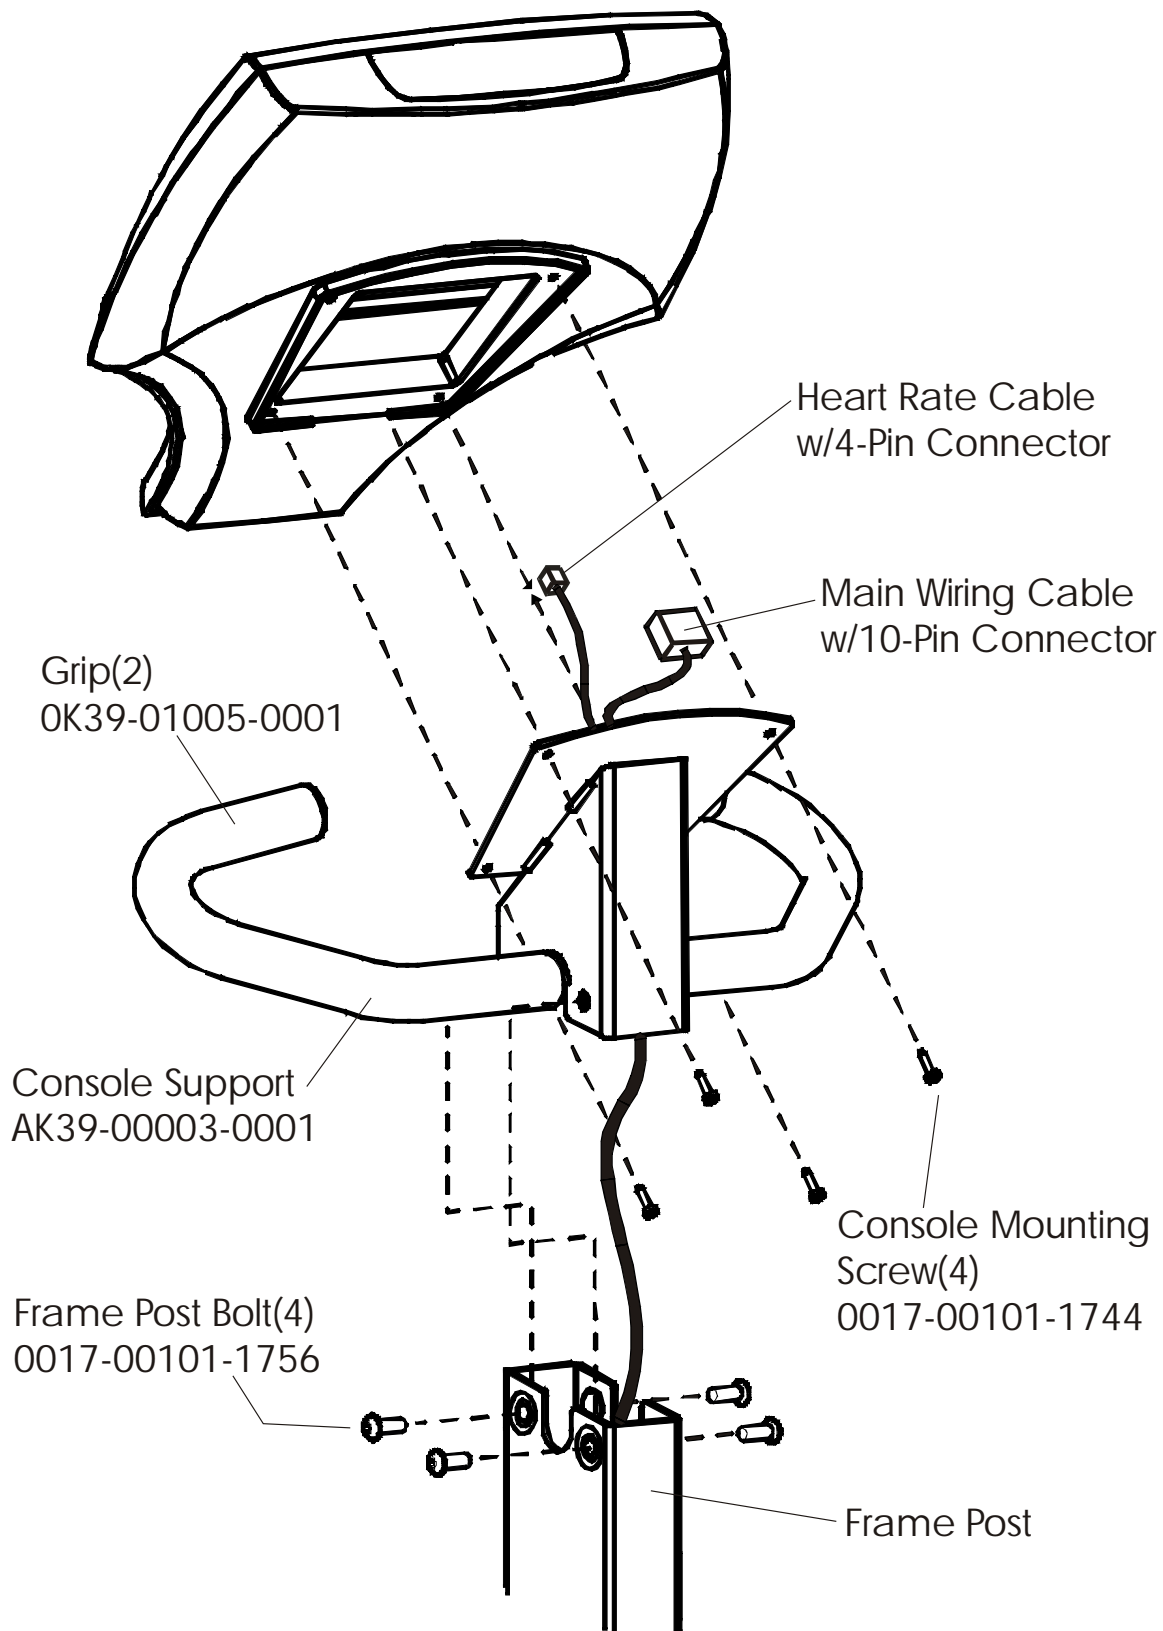



Life Cycle 93R
Shrouds, End Cap, Crank Arm


93R-0XXX-01
S/N LRB10001

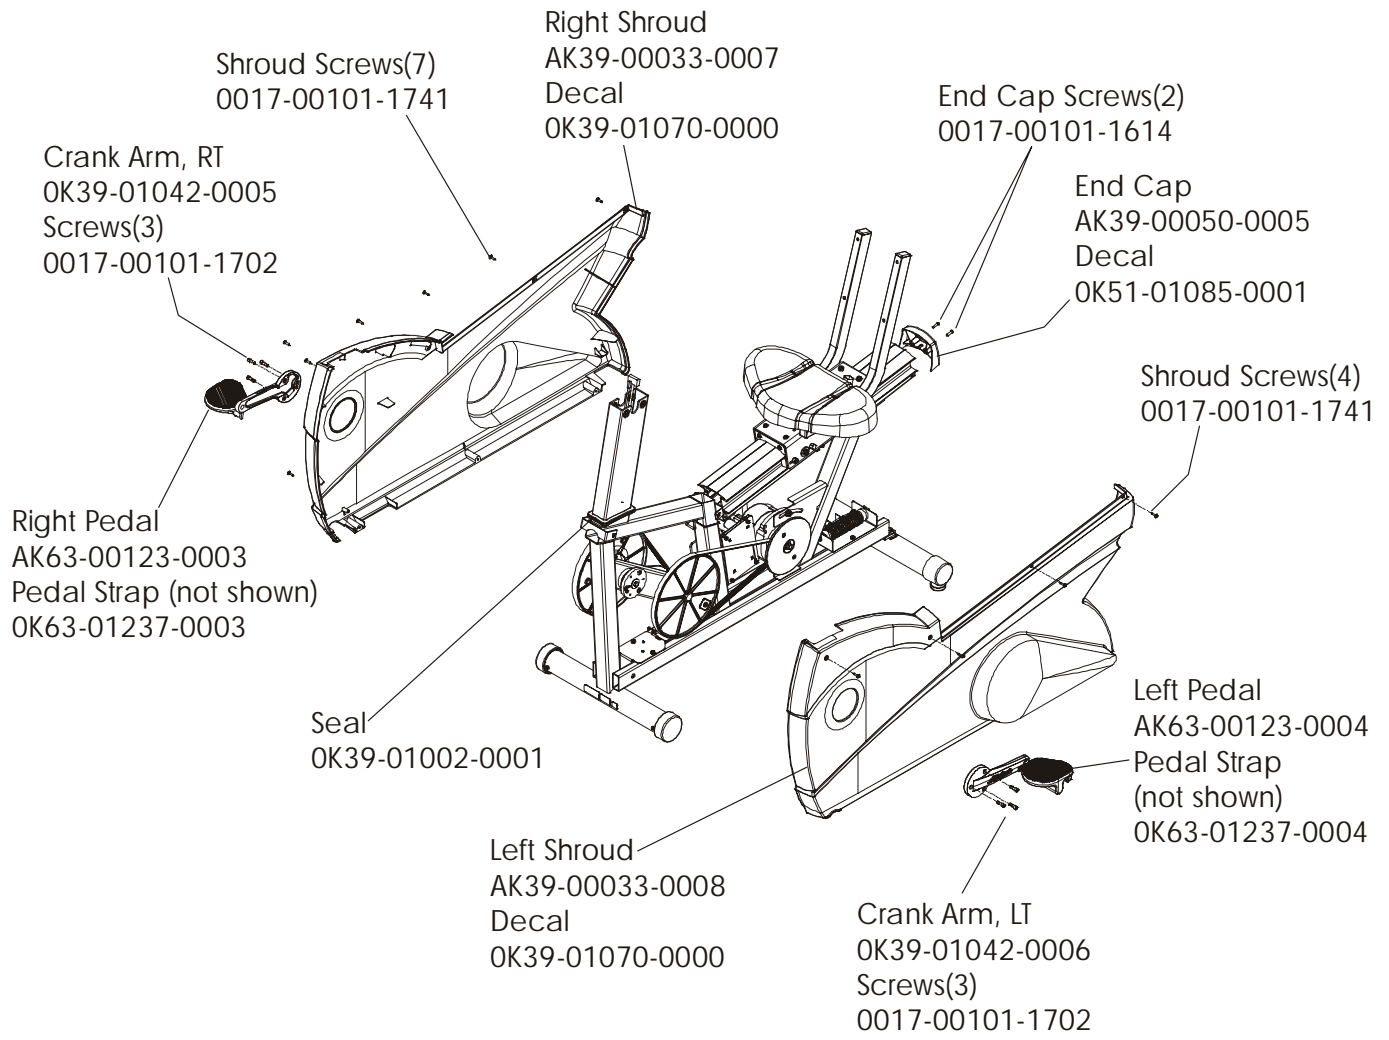

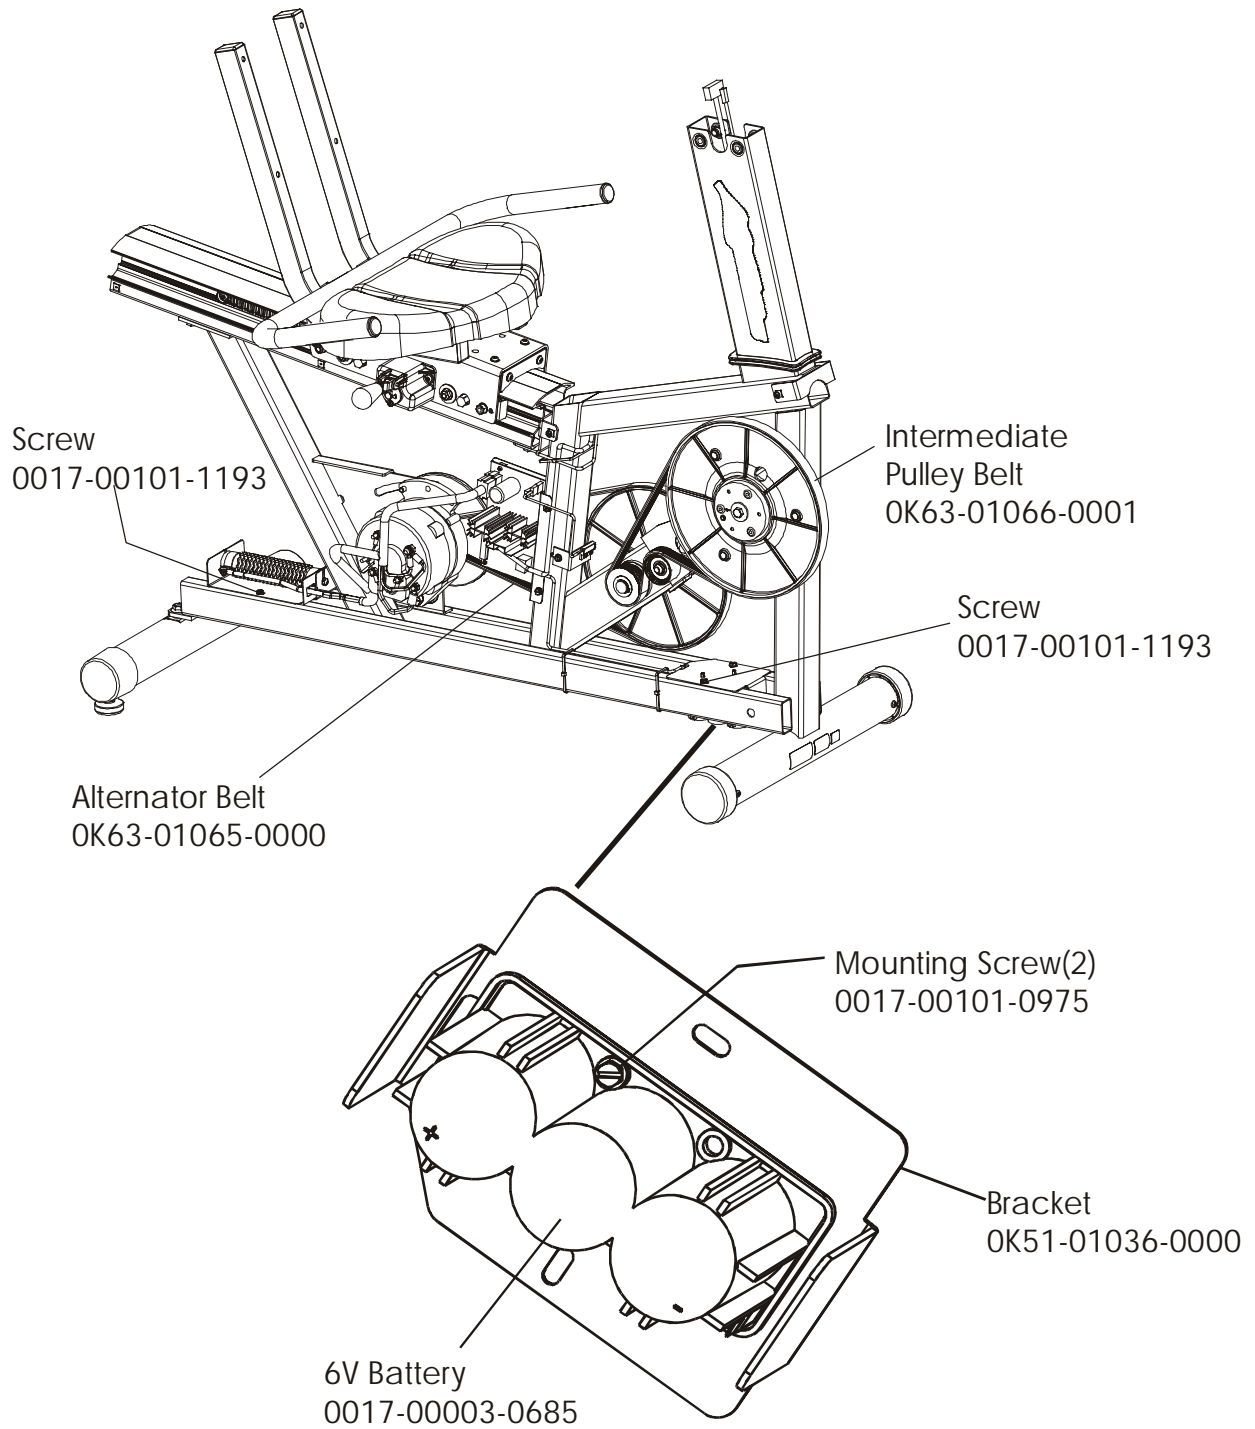

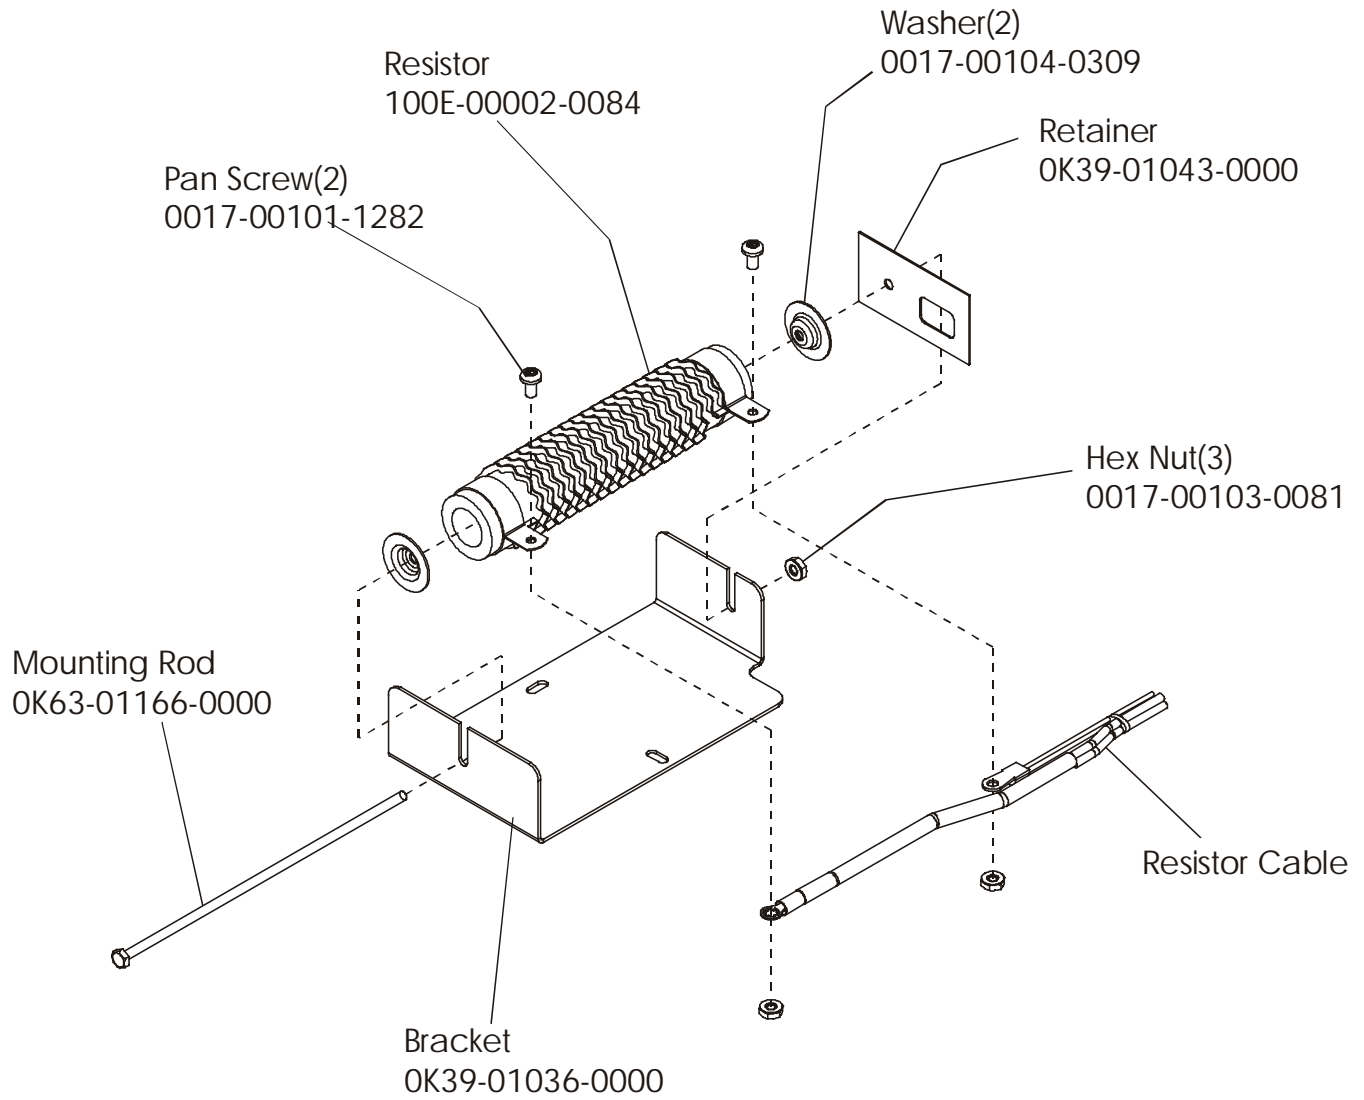

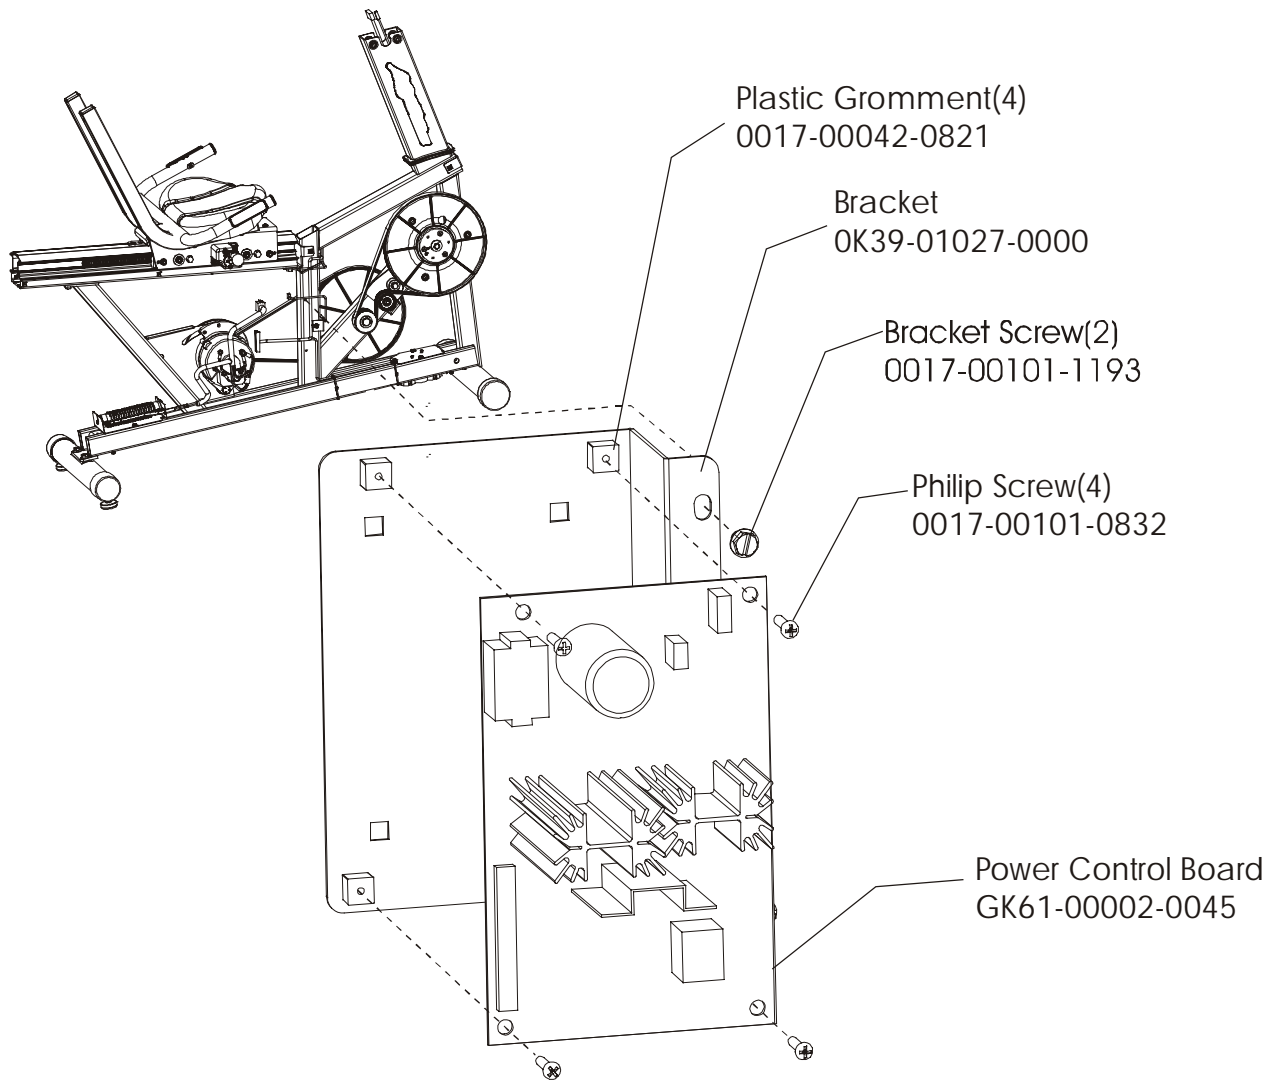

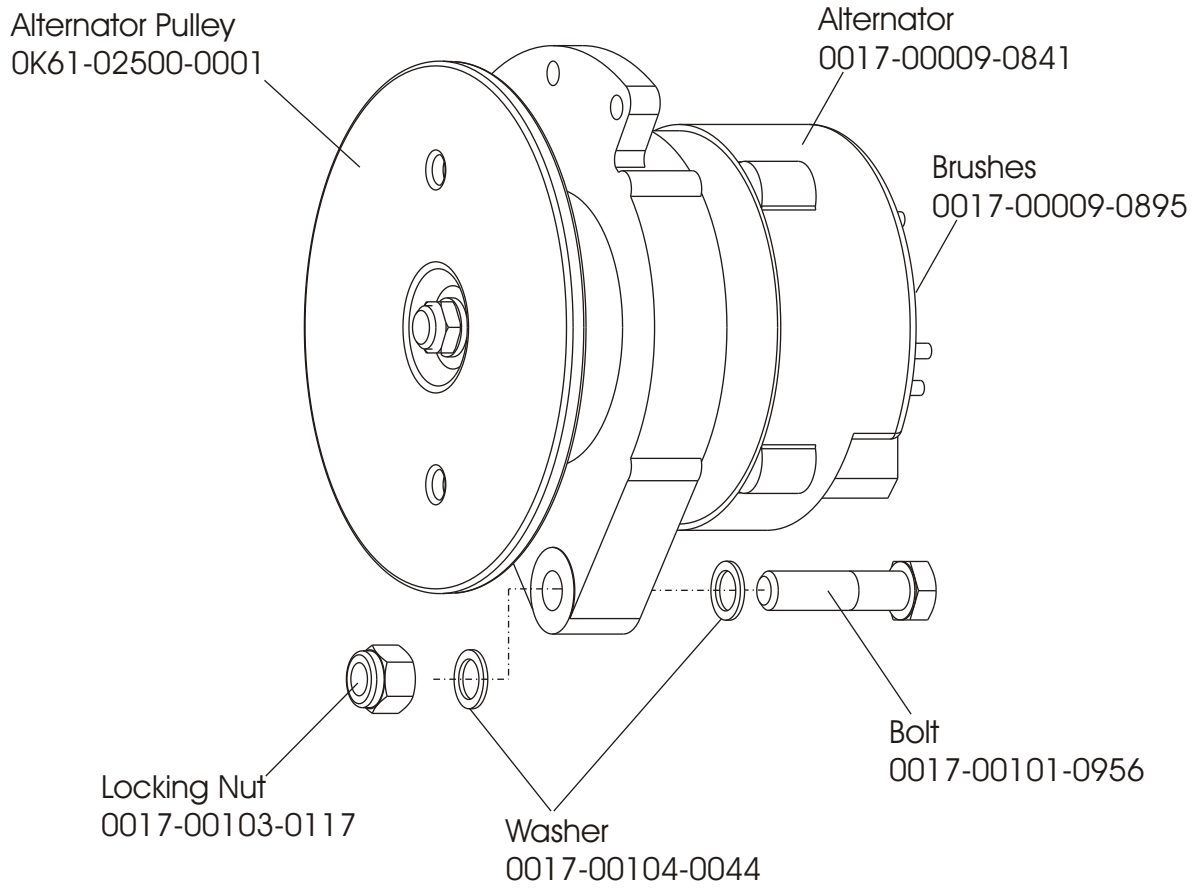

Life Cycle 93R
Crank Shaft and Bearing Assembly
GK-63-00002-0006

93R-0XXX-01
S/N LRB10001

