


Life Fitness

Arctic Silver 93R Recumbent Bike

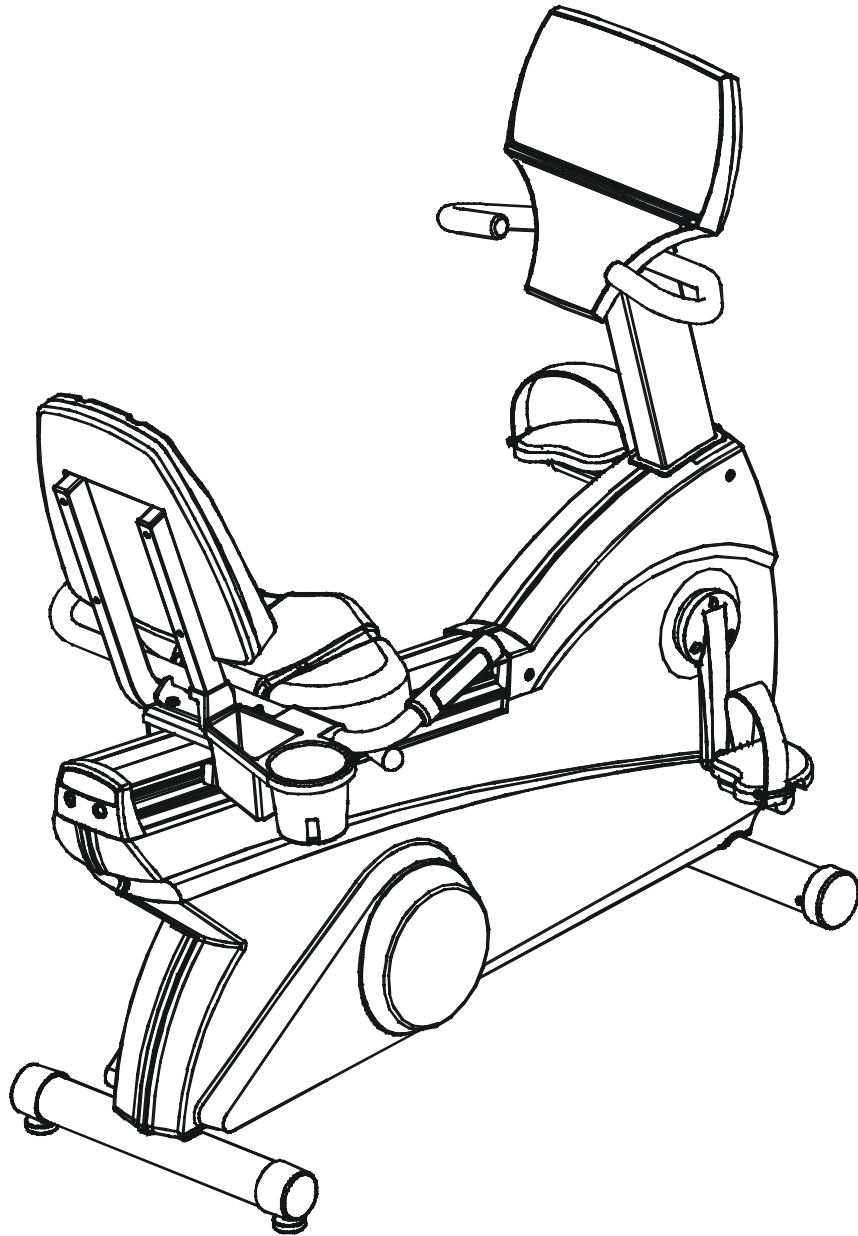

Customer Support Services
PARTS MANUAL

ARCTIC SILVER 93R
REFERENCES


93R-0XXX-02
S/N CCN100000 and UP

OPERATION MANUAL	M051-00K39-A020
NETWORK C-SAFE KIT	GK63-00002-0003
HARDWARE BAG	GK39-00002-0008
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K39-A012


	Page
CONSOLE COMPONENTS	4
CONSOLE SUPPORT ASSEMBLY	5
SHROUDS, END CAP, CRANKARMS AND PEDALS	6
BELTS AND 6V BATTERY	7
RESISTOR ASSEMBLY	8
POWER CONTROL BOARD	9
ALTERNATOR W/PULLEY	10
CRANKSHAFT AND BEARING ASSEMBLY	11
INTERMEDIATE SHAFT AND BEARING ASSEMBLY	12
IDLER BRACKET ASSEMBLY	13
SEAT ASSEMBLY	14
SEAT BOTTOM ASSEMBLY	15
SEAT FRAME ASSEMBLY	16
SEAT PADS AND ACCESSORY TRAY	17
EXTRUSION ASSEMBLY	18
SEAT LOCKING ASSEMBLY	19
WHEEL AND LEVELER	20
CABLES	21

ARCTIC SILVER 93R
Console Components

93R-0XXX-02
S/N CCN100000 and UP

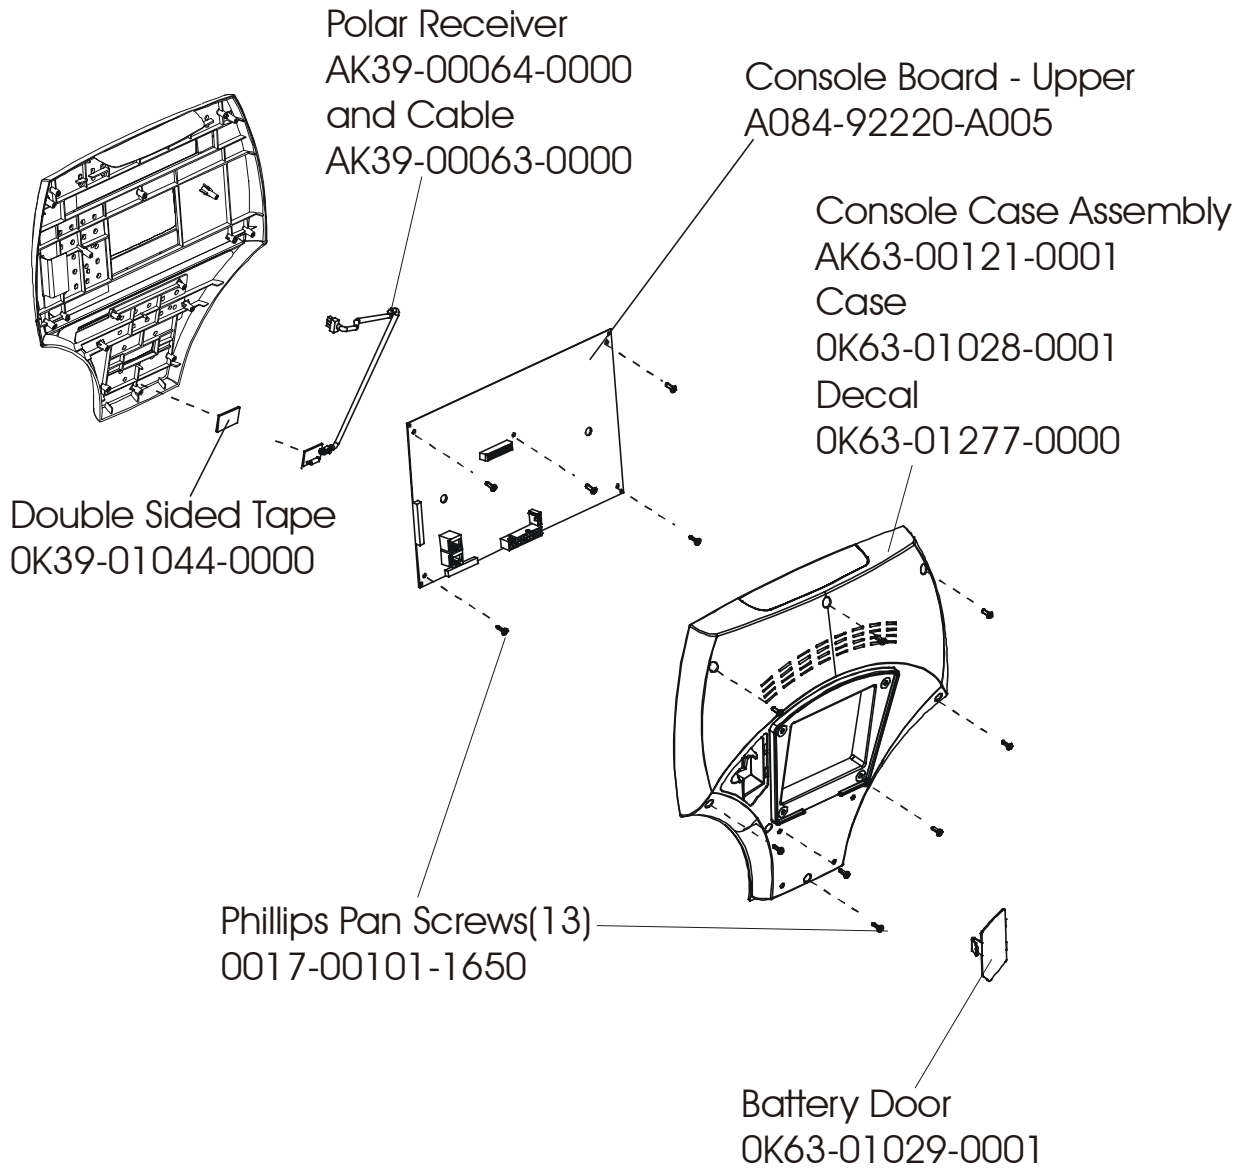


Console Assembly	Overlay/Bezel/Switch Assy.	Upper Overlay	Lower Overlay
AK39-00071-0001 Eng Met	AK63-00166-0001 Eng Met	0K63-01284-0001 Eng Met	0K63-01286-0001 Eng Met
AK39-00071-0003 Ger Met	AK63-00166-0003 Ger Met	0K63-01284-0003 Ger Met	0K63-01286-0003 Ger Met
AK39-00071-0004 Spn Met	AK63-00166-0004 Spn Met	0K63-01284-0004 Spn Met	0K63-01286-0004 Spn Met
AK39-00071-0006 Jap Met	AK63-00166-0006 Jap Met	0K63-01284-0006 Jap Met	0K63-01286-0006 Jap Met
AK39-00071-0007 Frn Met	AK63-00166-0007 Frn Met	0K63-01284-0007 Frn Met	0K63-01286-0007 Frn Met
AK39-00071-0008 Itl Met	AK63-00166-0008 Itl Met	0K63-01284-0008 Itl Met	0K63-01286-0008 Itl Met
AK39-00071-0009 Dut Met	AK63-00166-0009 Dut Met	0K63-01284-0009 Dut Met	0K63-01286-0009 Dut Met
AK39-00071-0010 Por Met	AK63-00166-0010 Por Met	0K63-01284-0010 Por Met	0K63-01286-0010 Por Met

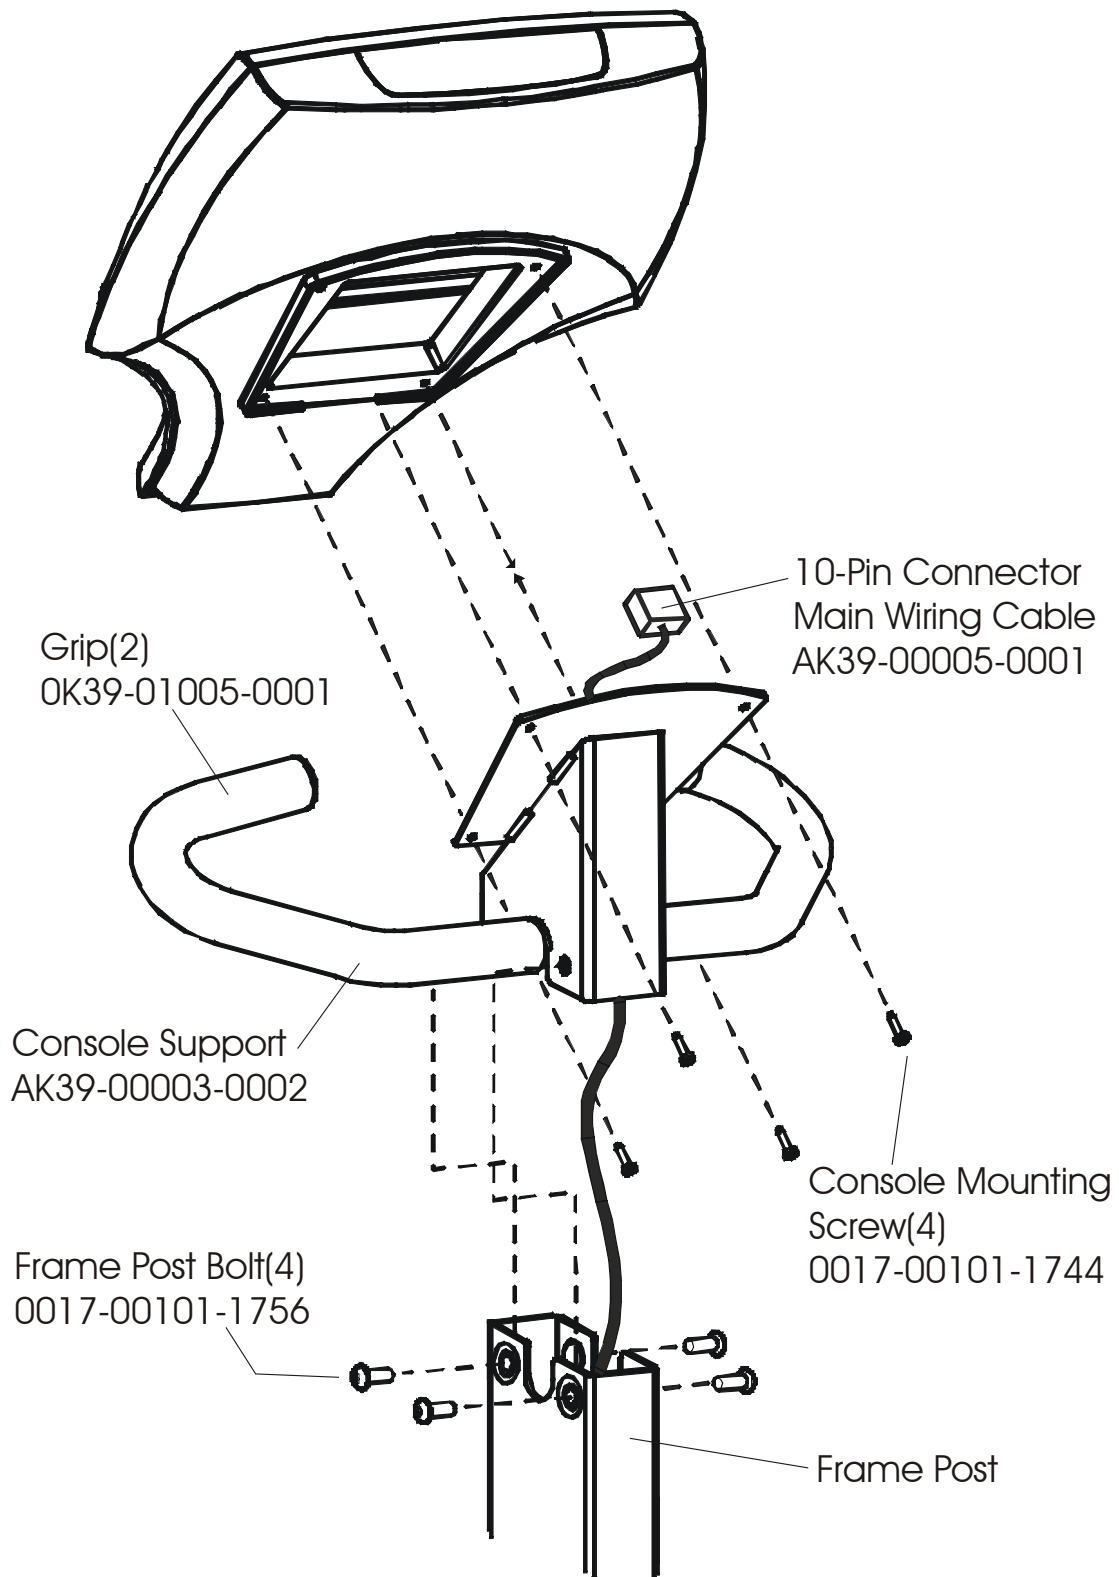

ARCTIC SILVER 93R
Shrouds, End Cap and Pedals

93R-0XXX-02
S/N CCN100000 and UP

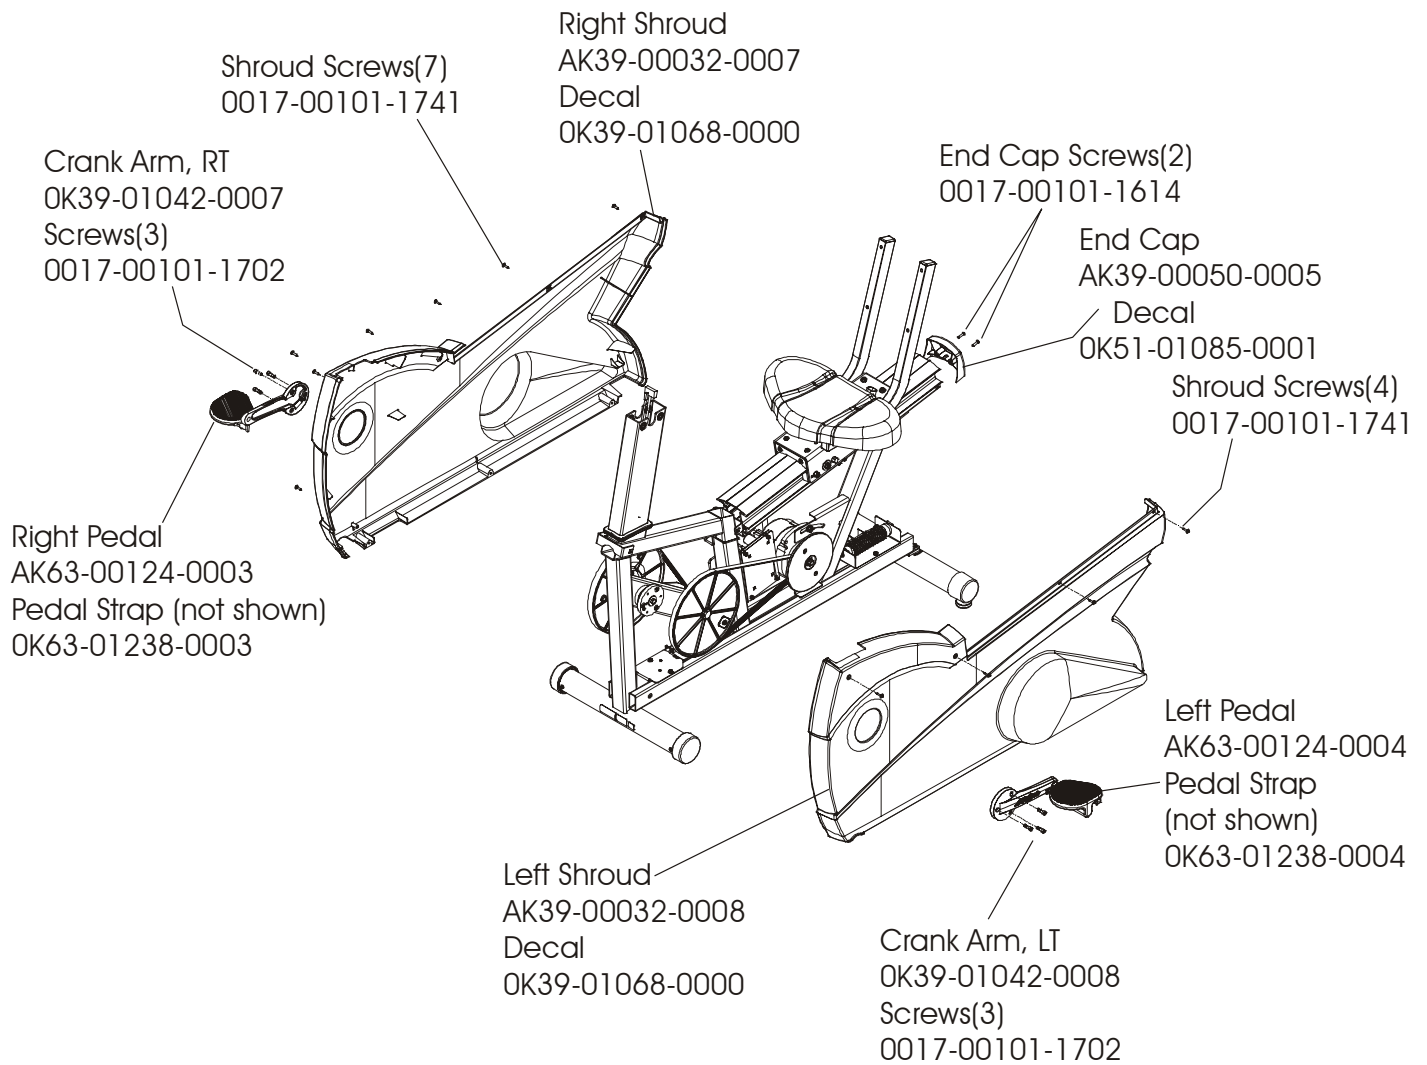


ARCTIC SILVER 93R

Belts


93R-0XXX-02

S/N CCN100000 and UP

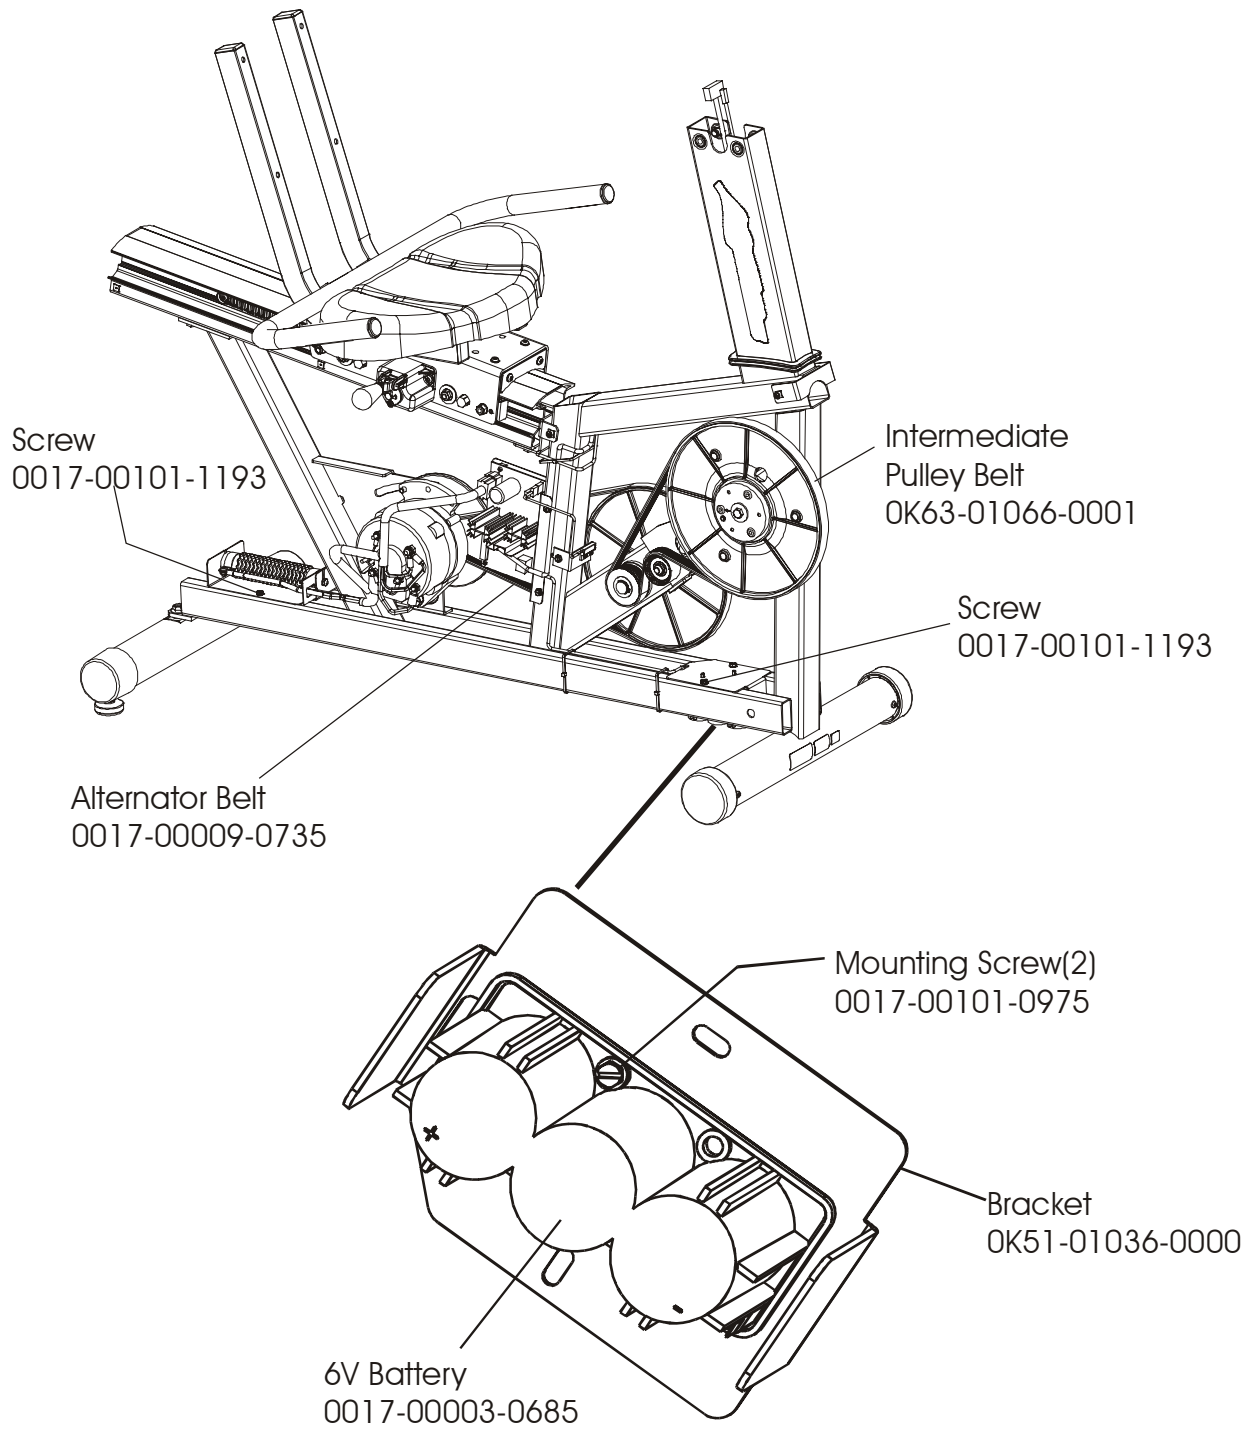

ARCTIC SILVER 93R
Resistor Assembly


93R-0XXX-02
S/N CCN100000 and UP

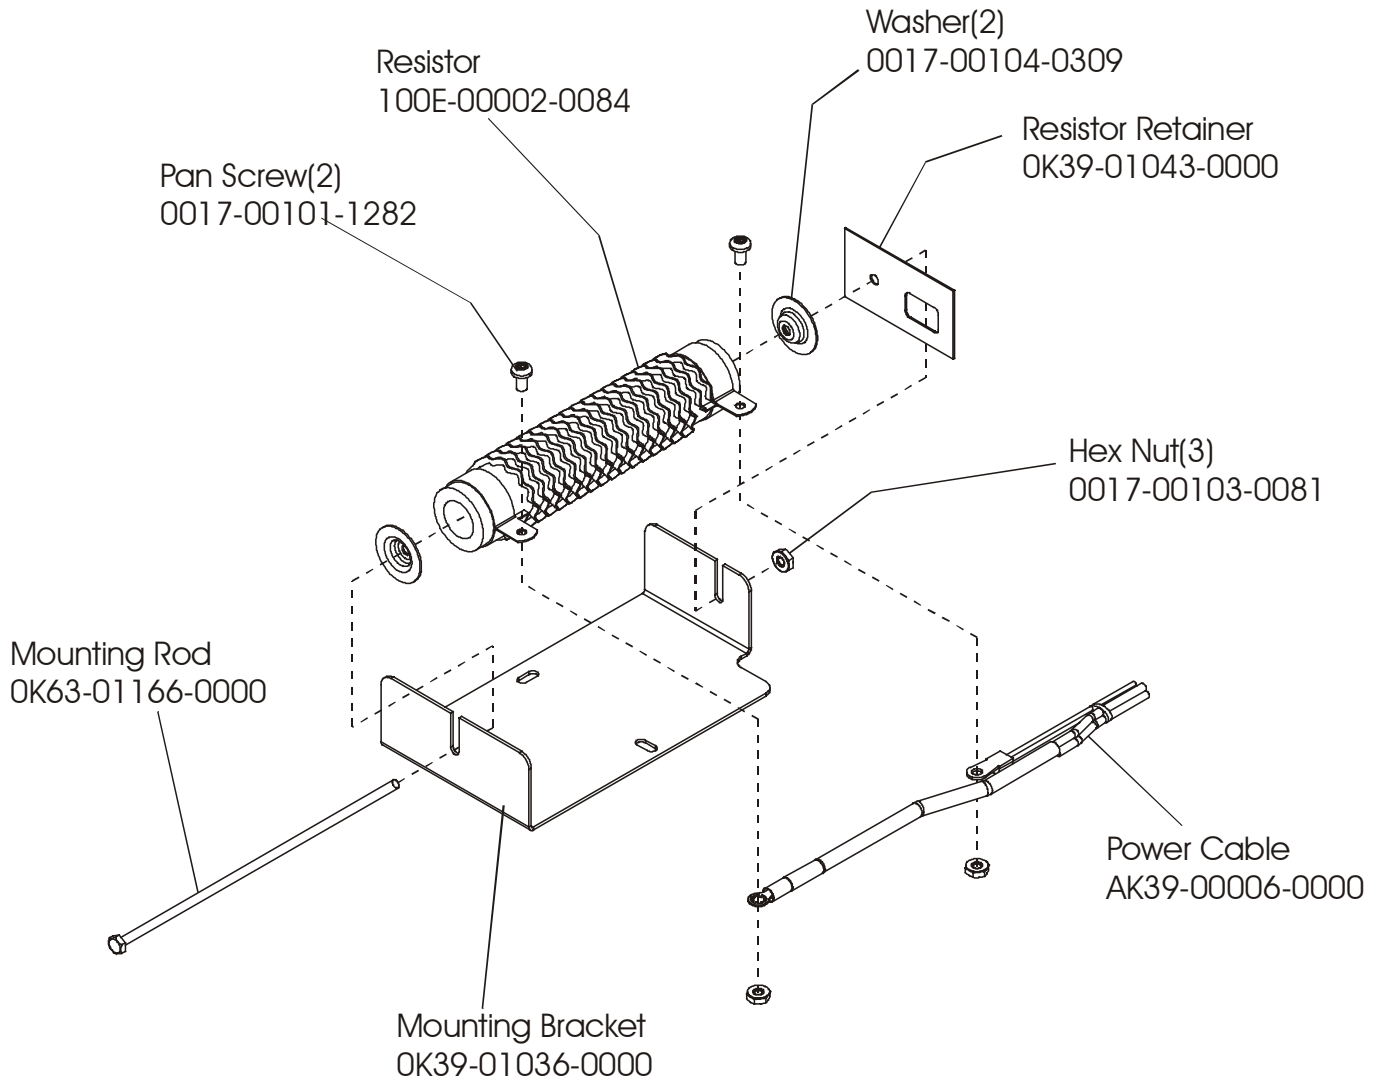

ARCTIC SILVER 93R
Power Control Board

93R-0XXX-02
S/N CCN100000 and UP


Assembly Number - AK39-00022-0001

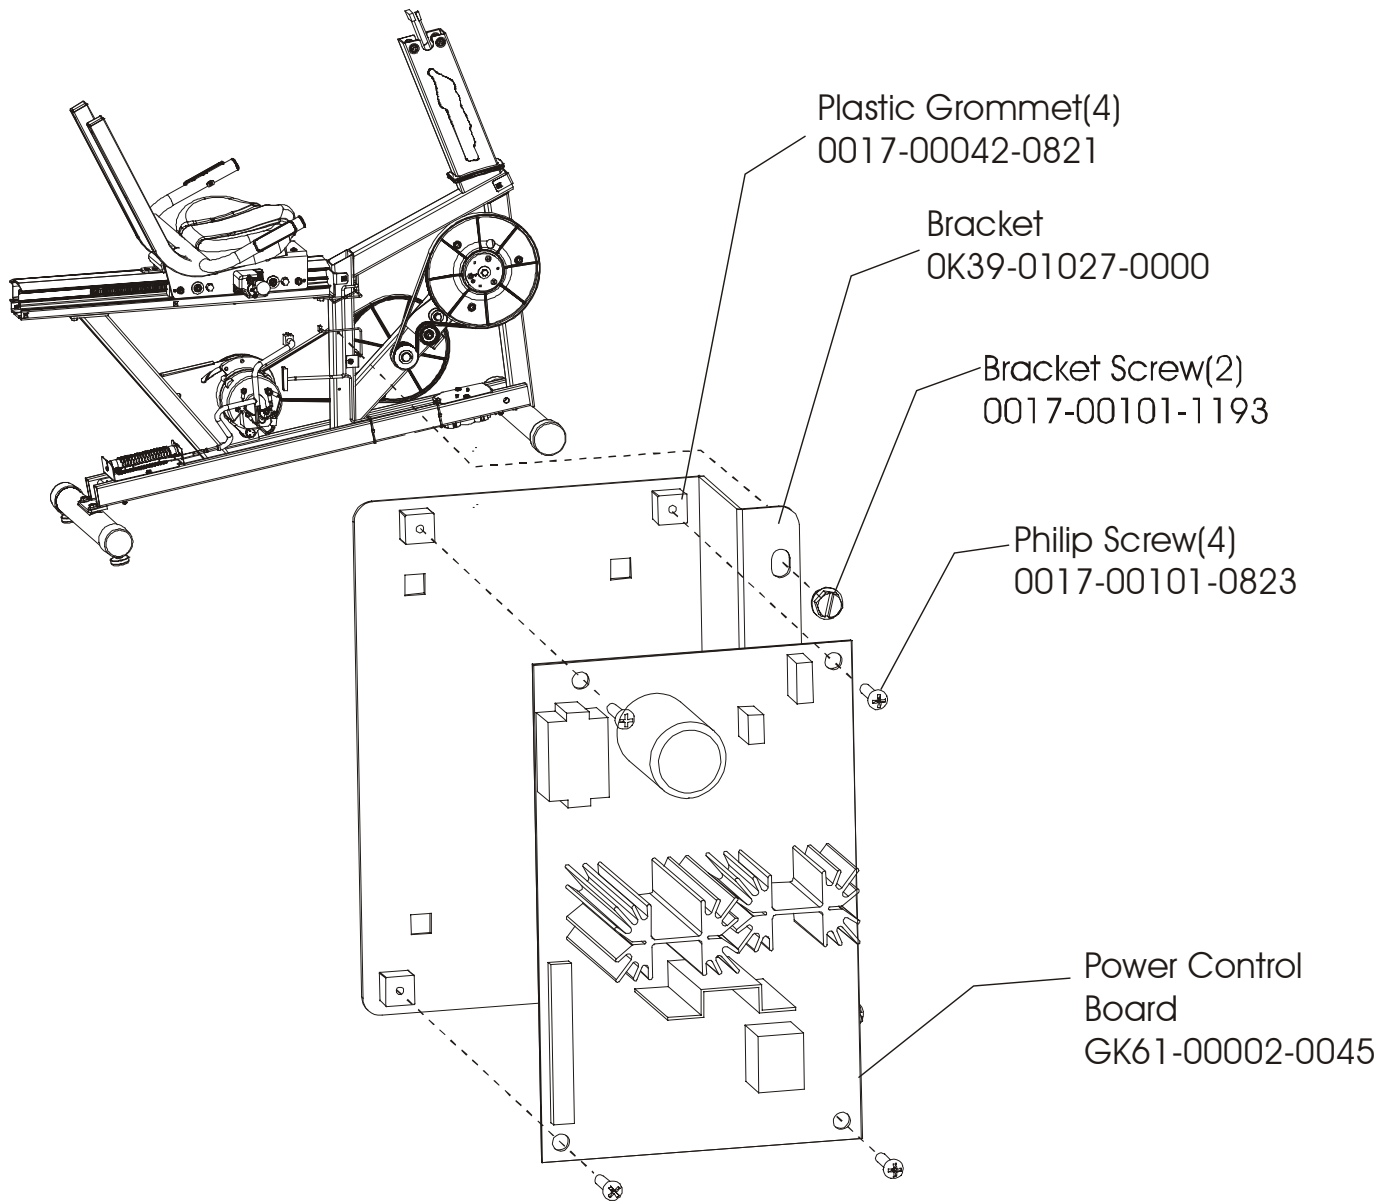

ARCTIC SILVER 93R
Alternator w/Pulley Assembly

93R-0XXX-02
S/N CCN100000 and UP


Assembly Number – AK63-00093-0000

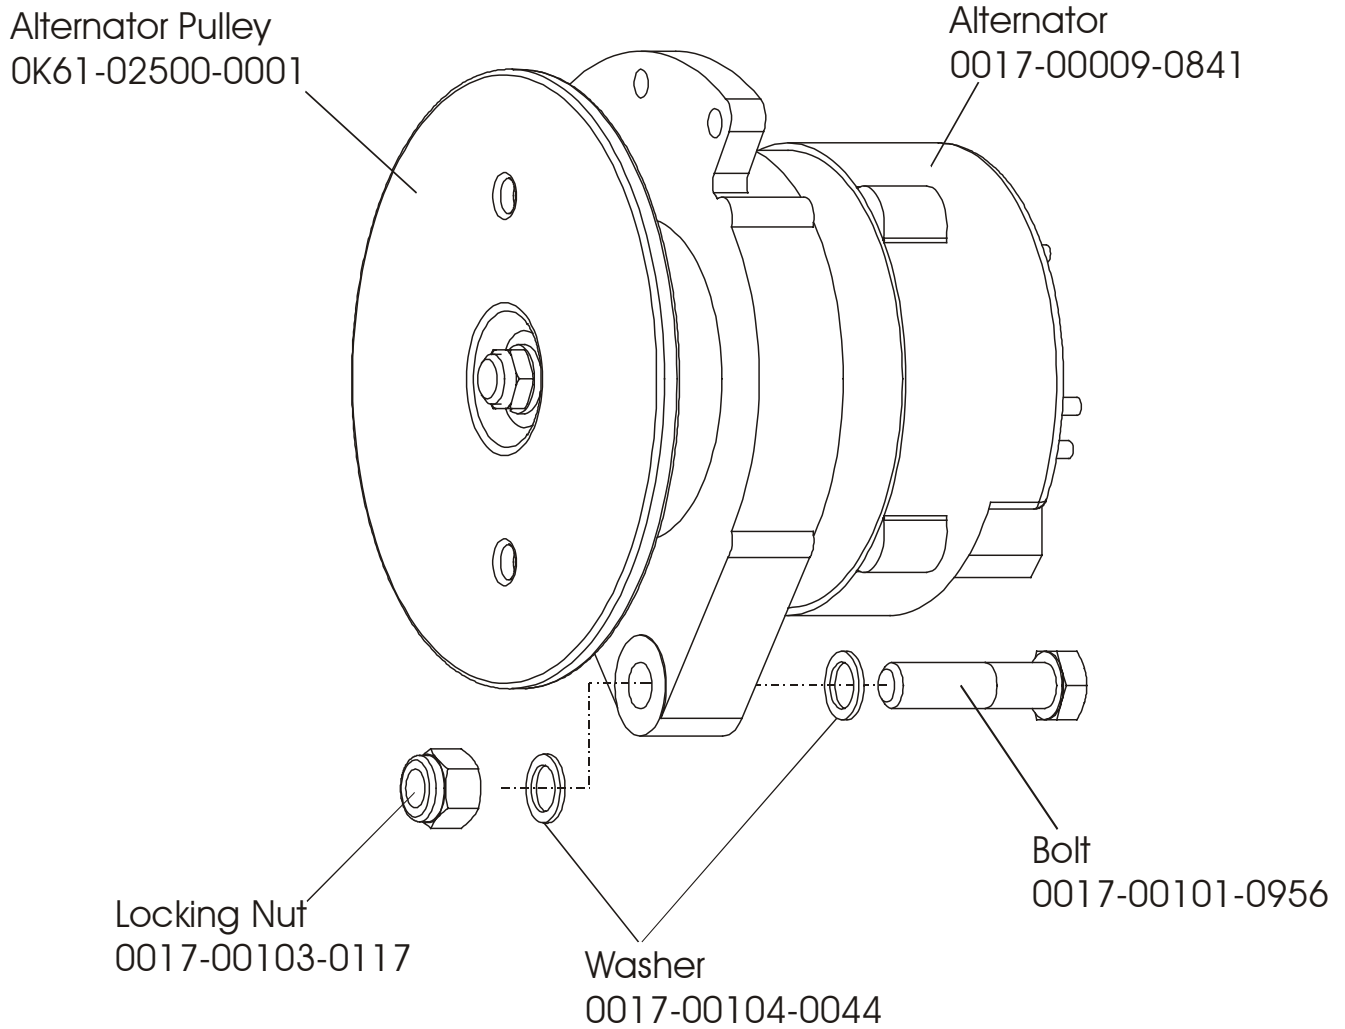

ARCTIC SILVER 93R
Crank Shaft and Bearing Assembly

93R-0XXX-02
S/N CCN100000 and UP


Kit Number – GK63-00002-0006

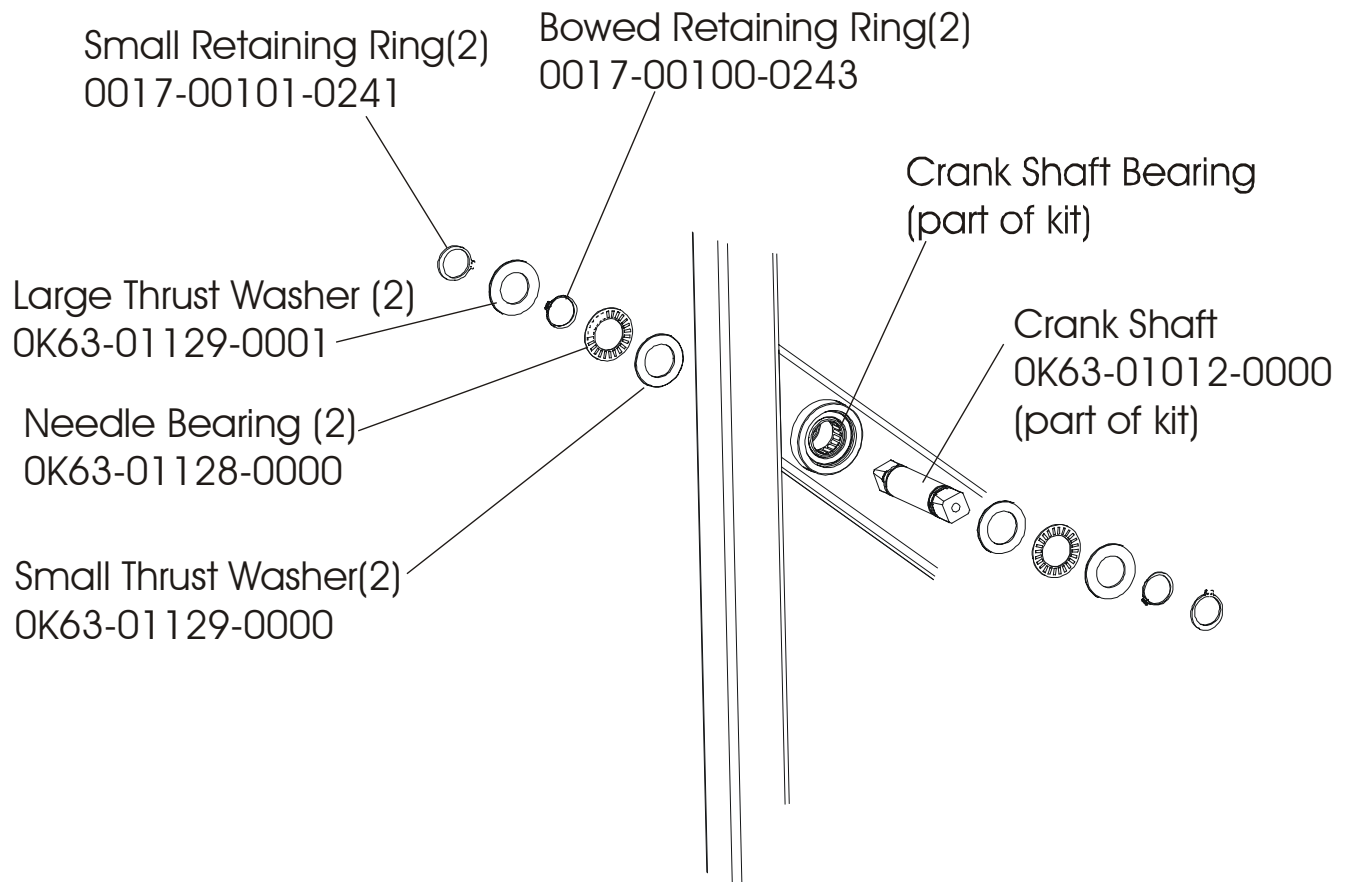


ARCTIC SILVER 93R
Intermediate Shaft and Bearing Assembly

93R-0XXX-02
S/N CCN100000 and UP

Kit Number – GK63-00002-0007

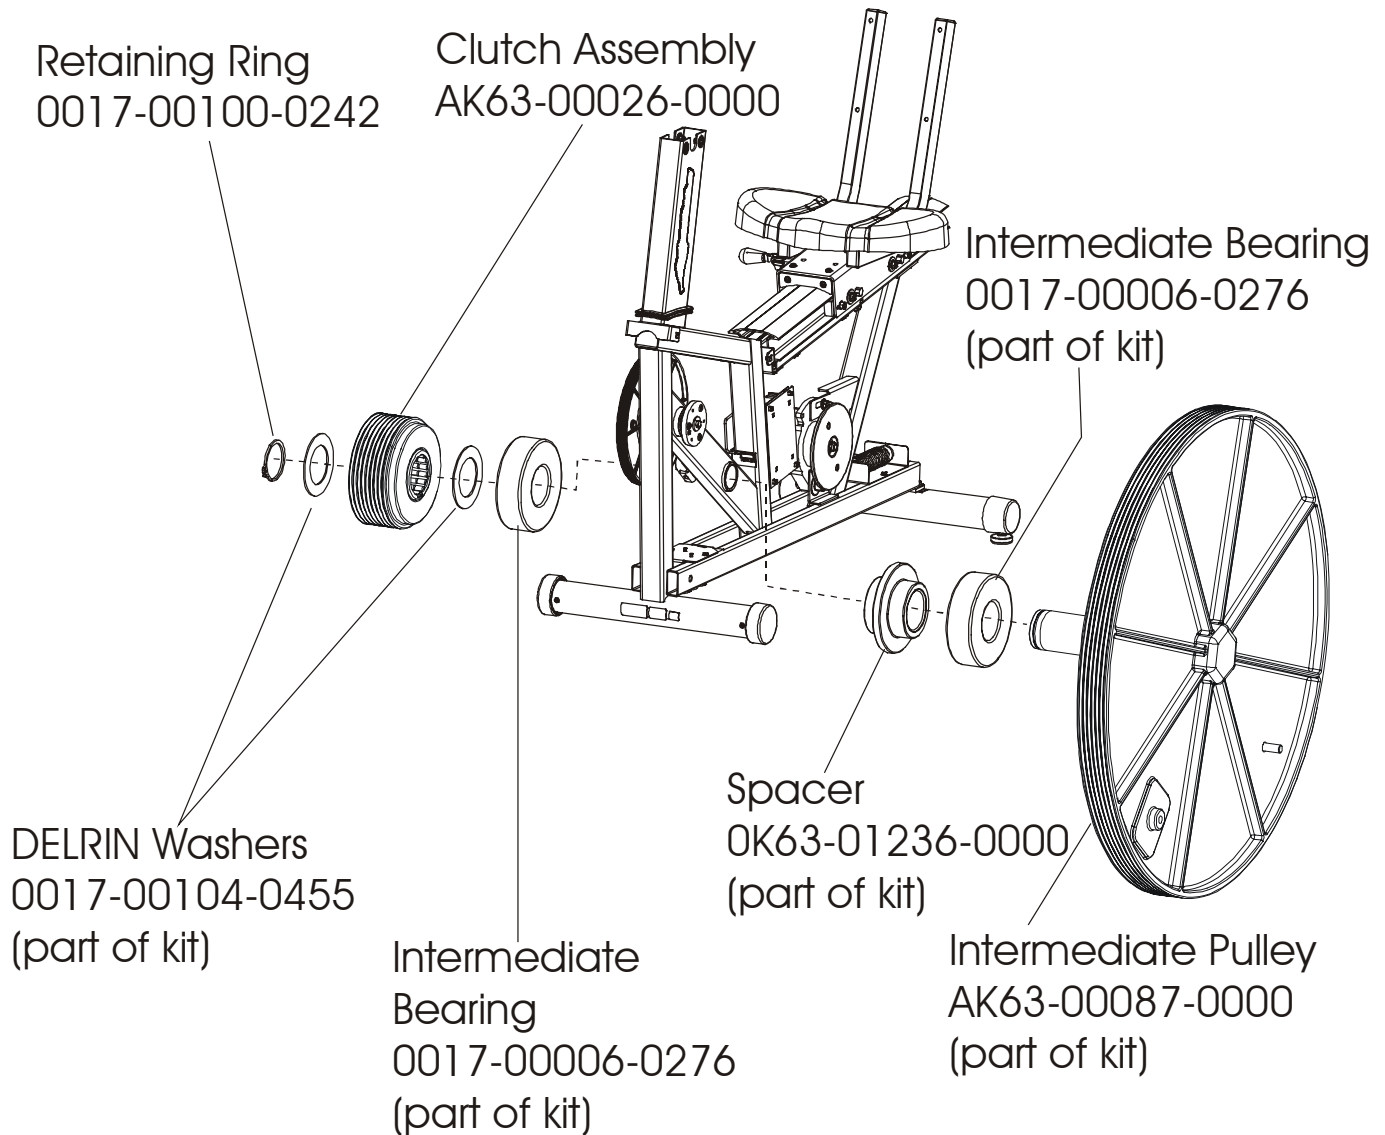


Idler Bracket Assembly – AK63-00021-0000

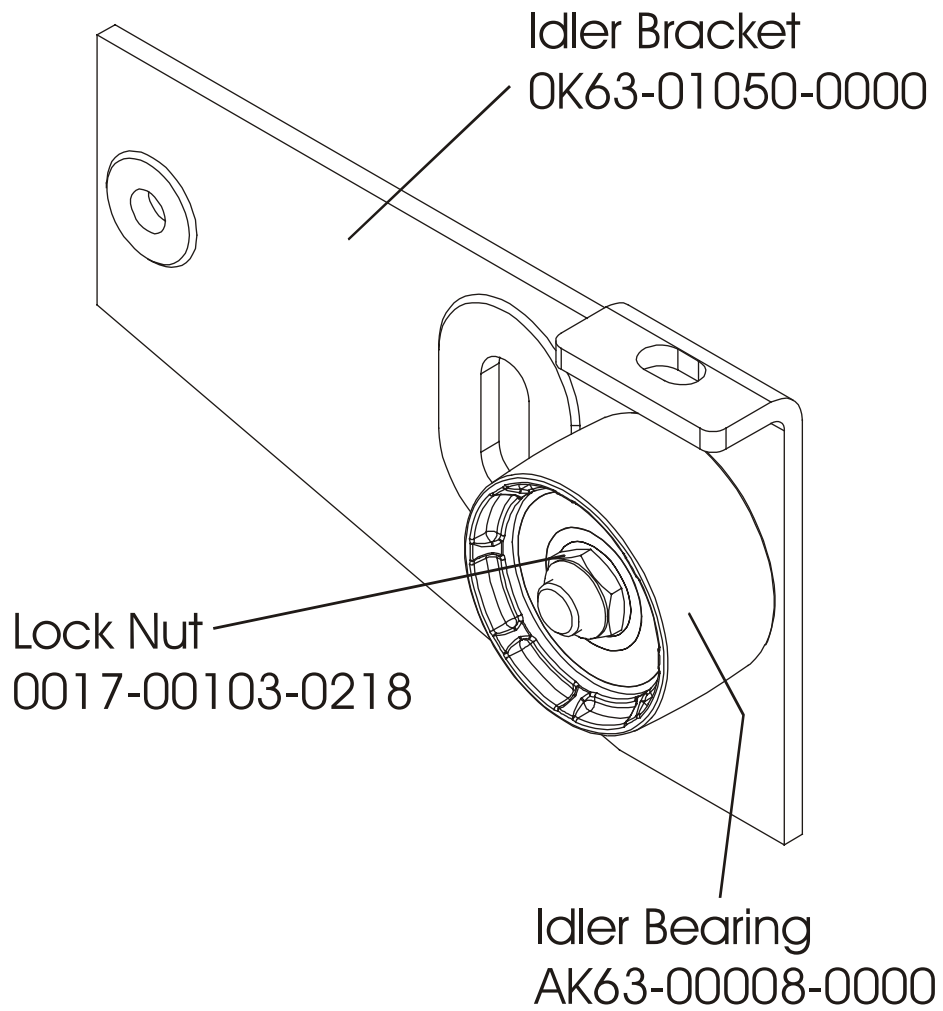


ARCTIC SILVER 93R
Seat Assembly

93R-0XXX-02
S/N CCN10000 and UP

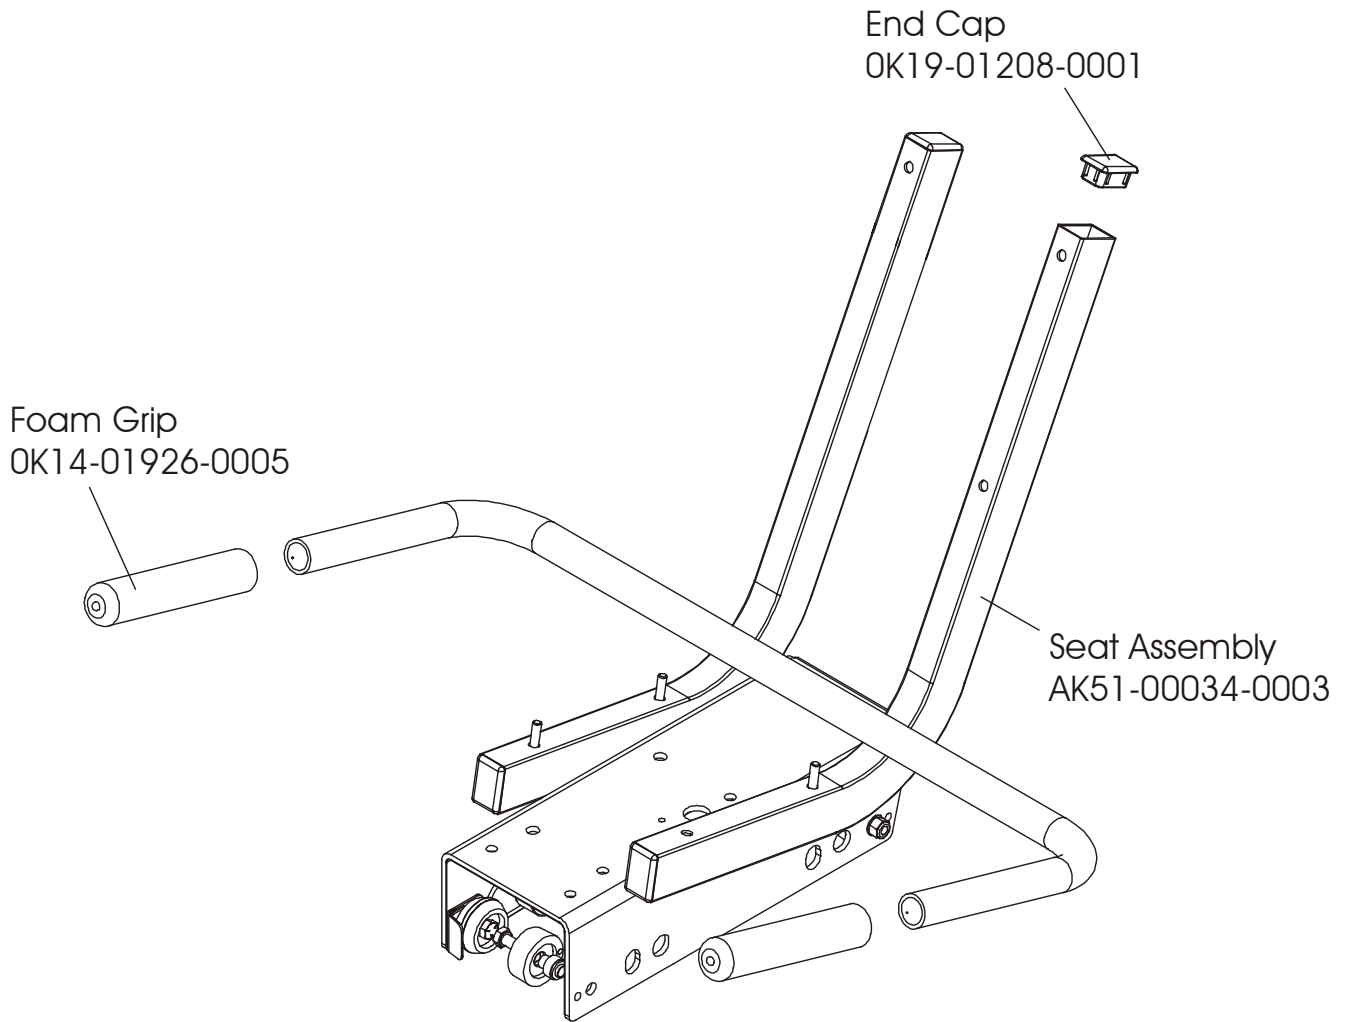


ARCTIC SILVER 93R
Seat Assembly - Bottom

93R-0XXX-02
S/N CCN10000 and UP

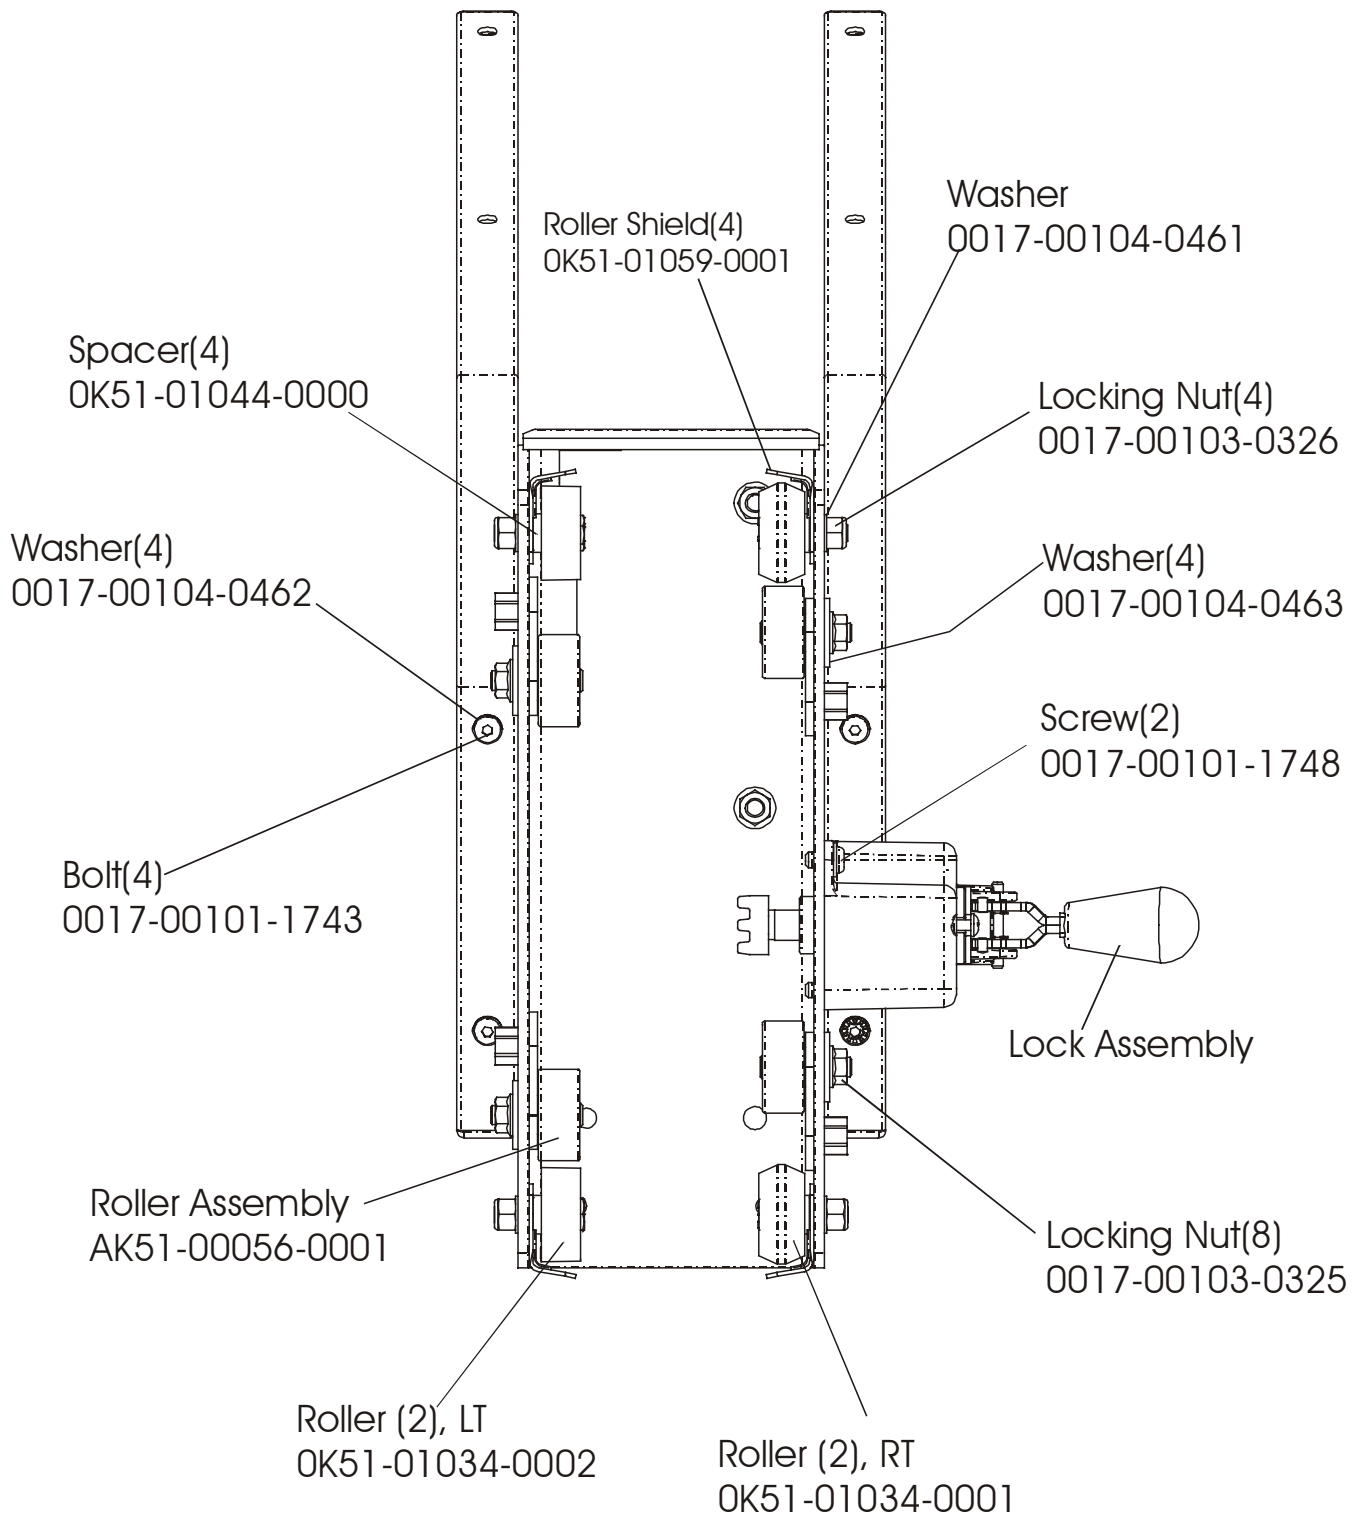


ARCTIC SILVER 93R
Seat Frame Assembly

93R-0XXX-02
S/N CCN100000 and UP

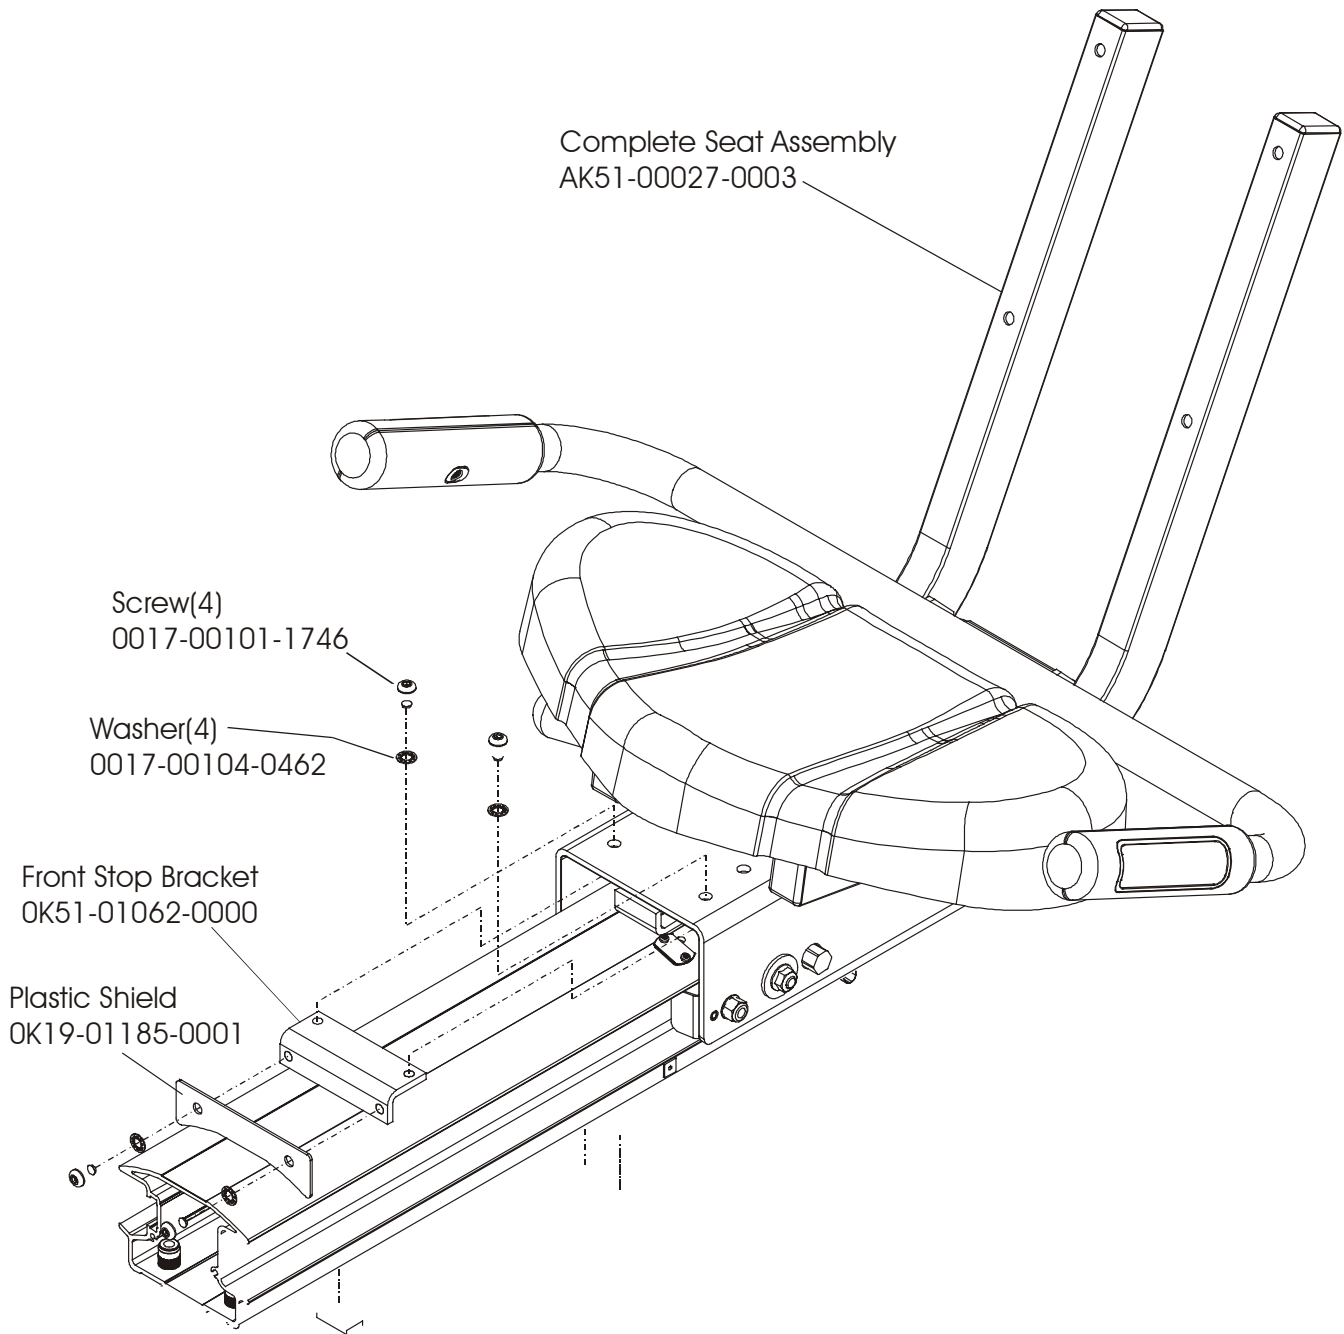

ARCTIC SILVER 93R
Seat Pads and Accessory Tray

93R-0XXX-02
S/N CCN100000 and UP

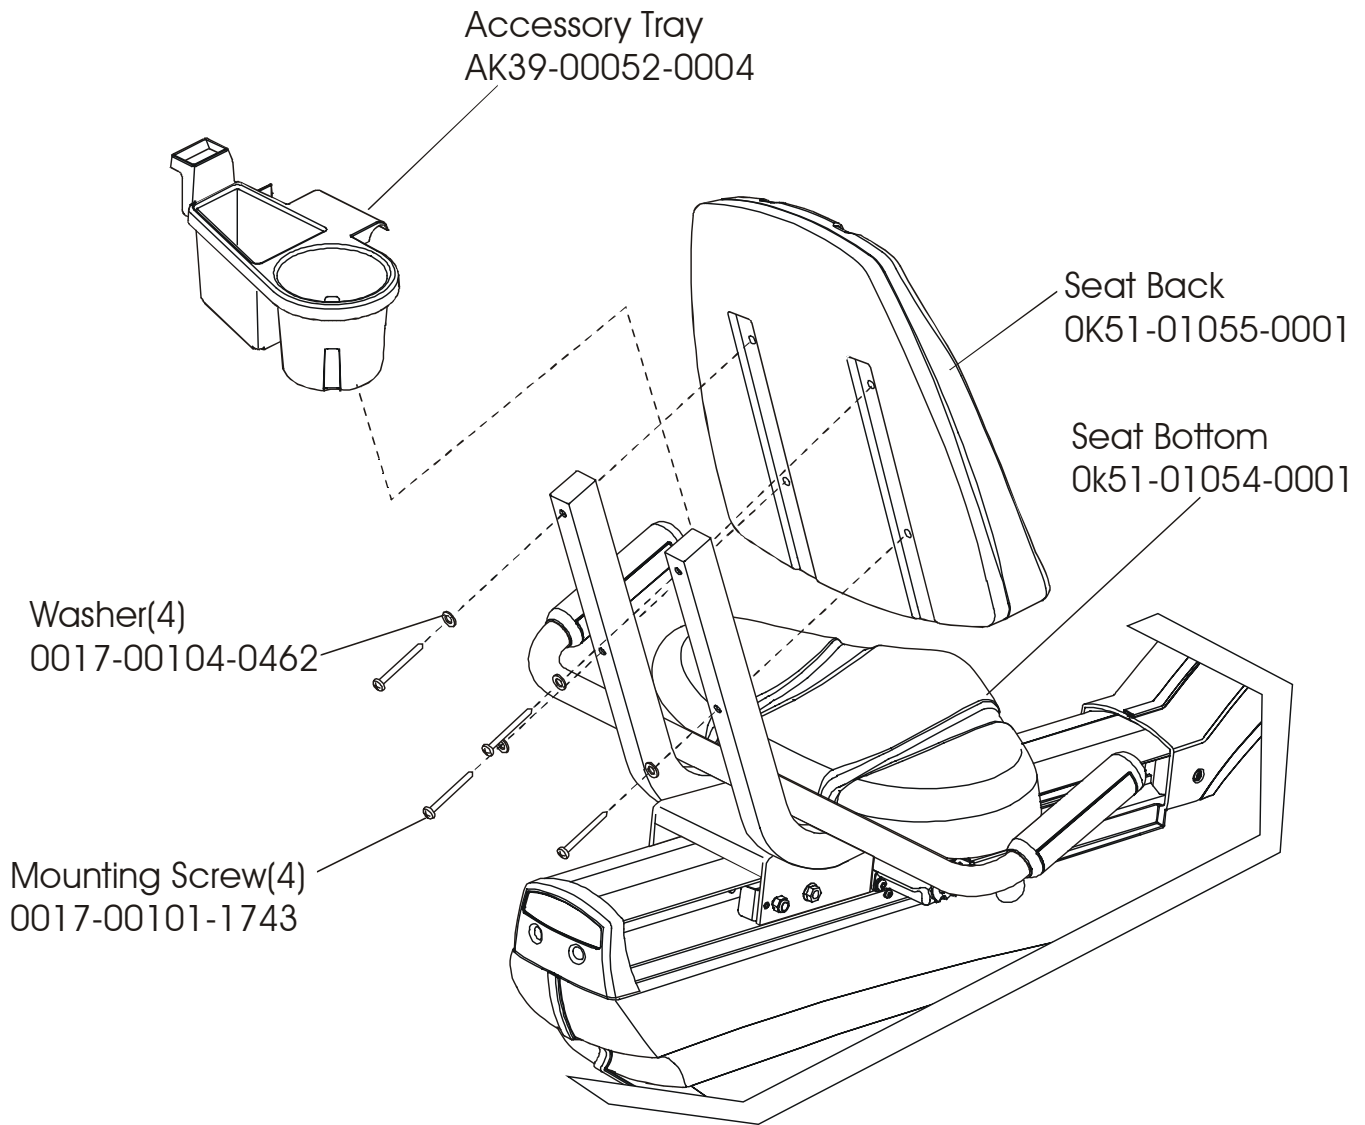


ARCTIC SILVER 93R

Extrusion Assembly – AK39-00027-0006

93R-0XXX-02

S/N CCN100000 and UP

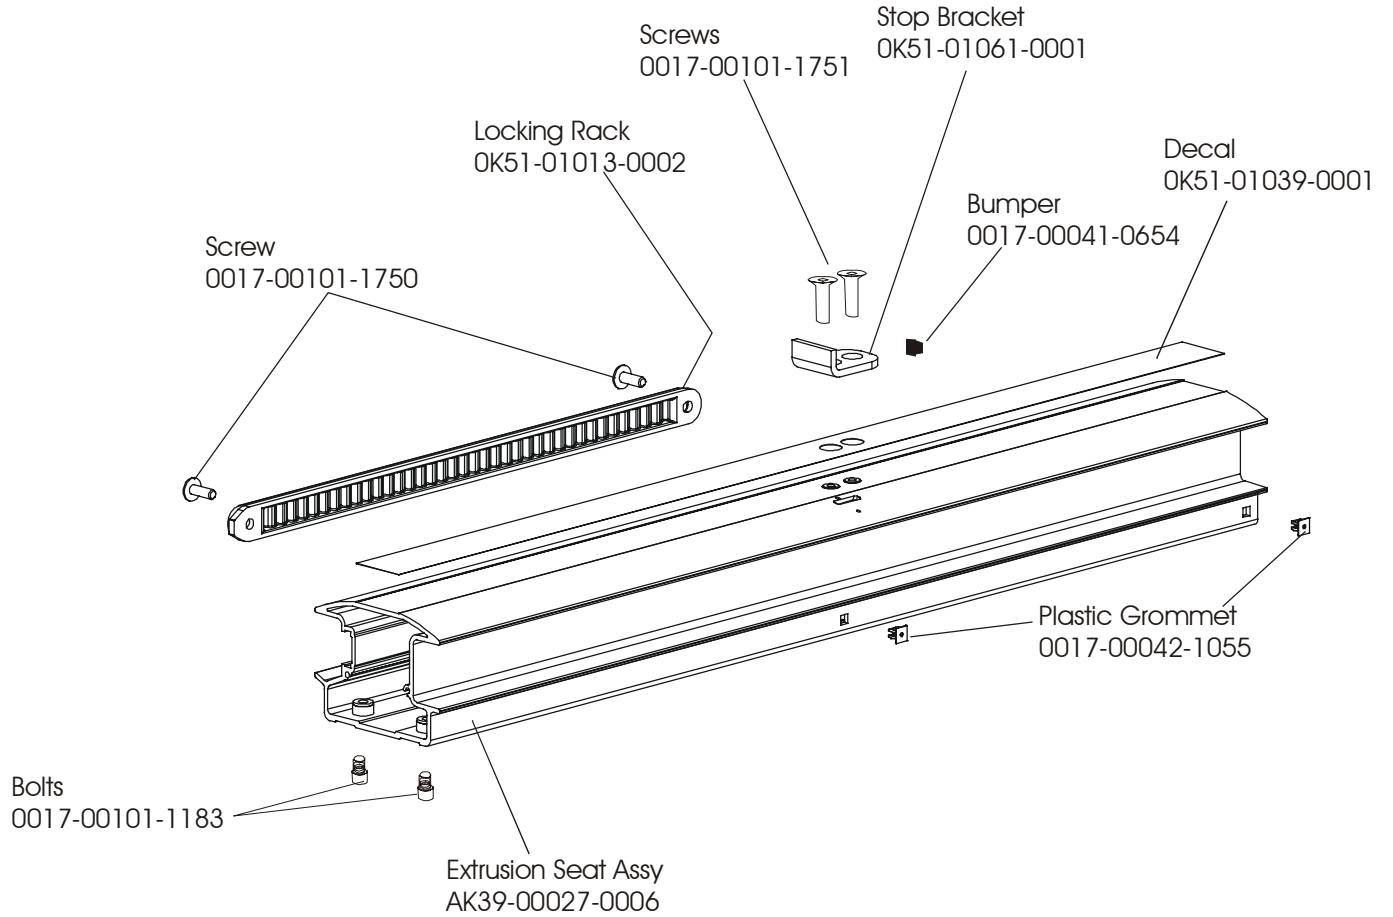


ARCTIC SILVER 93R

Locking Assembly – AK51-00053-0001


93R-0XXX-02

S/N CCN100000 and UP

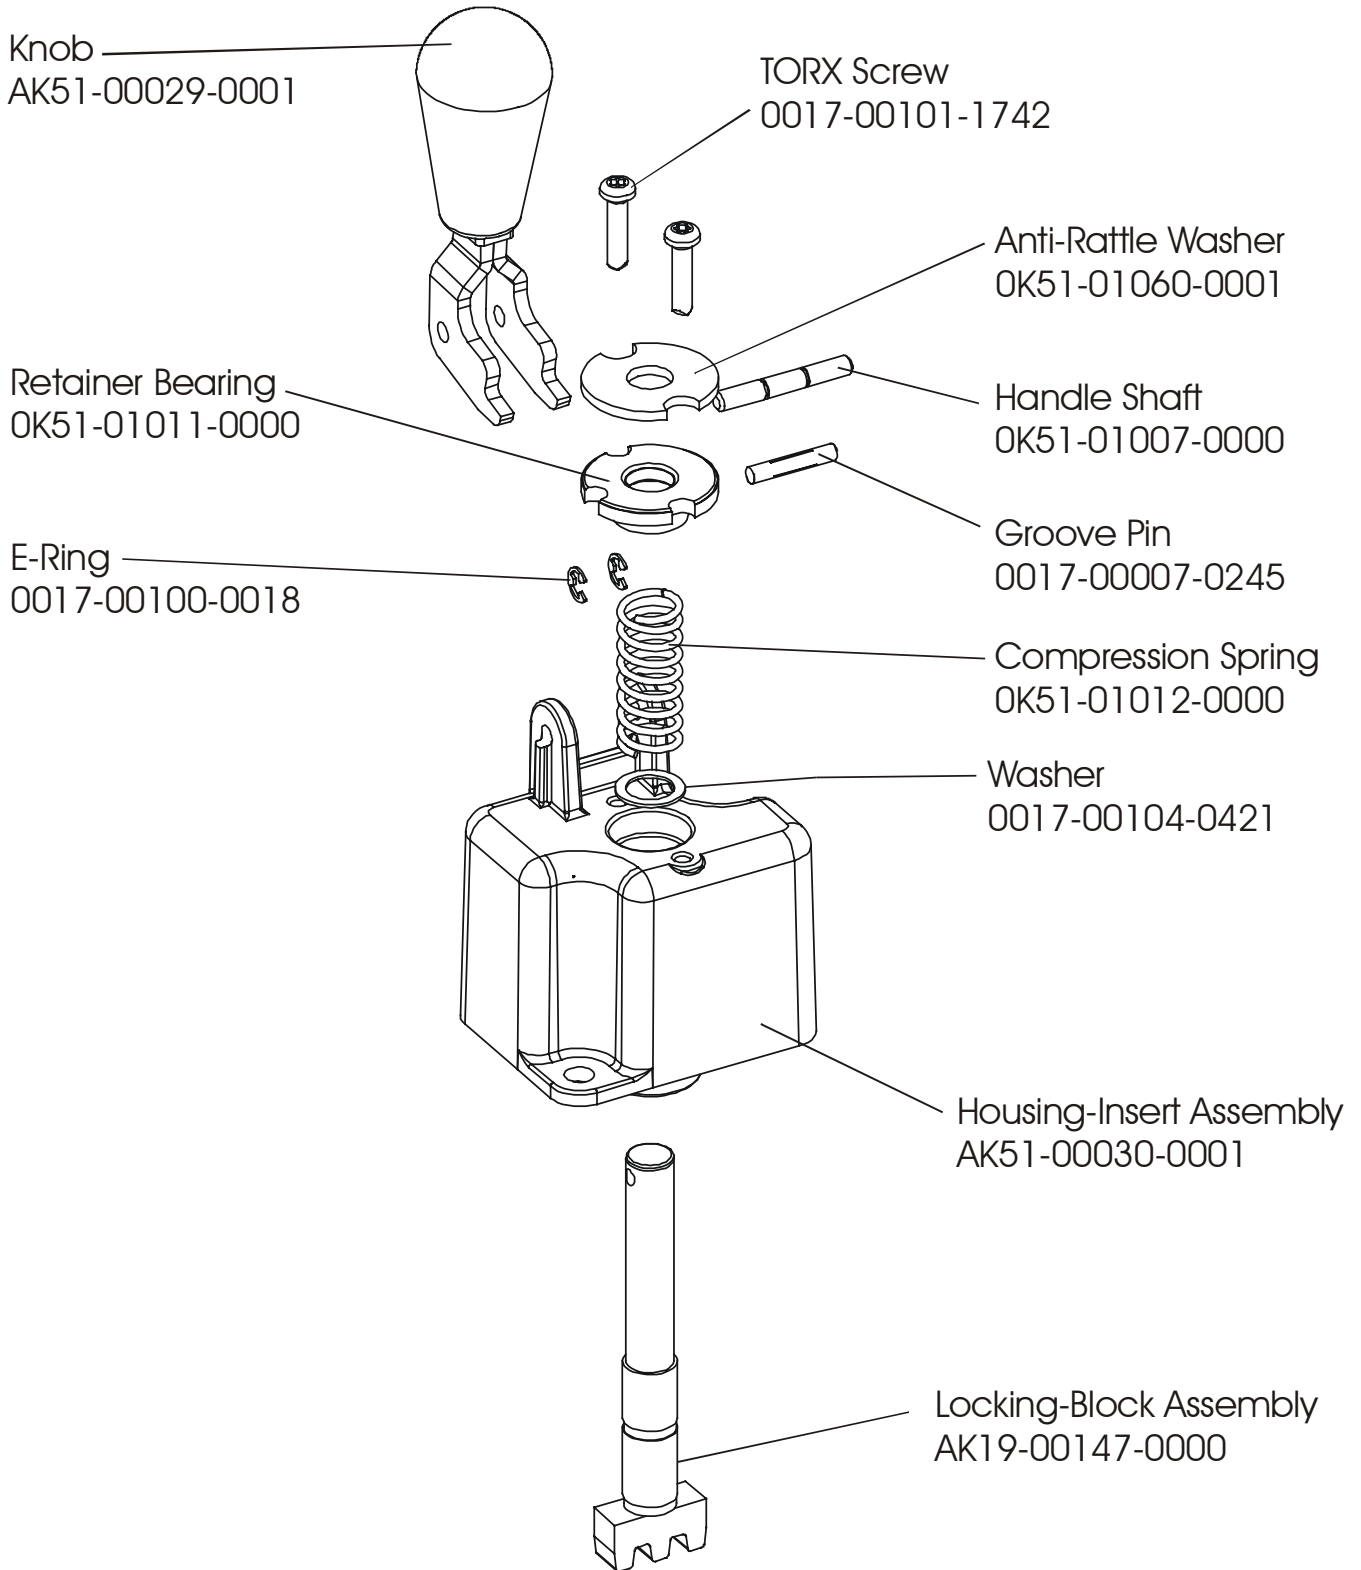

ARCTIC SILVER 93R
Wheel and Leveler

93R-0XXX-02
S/N CCN100000 and UP

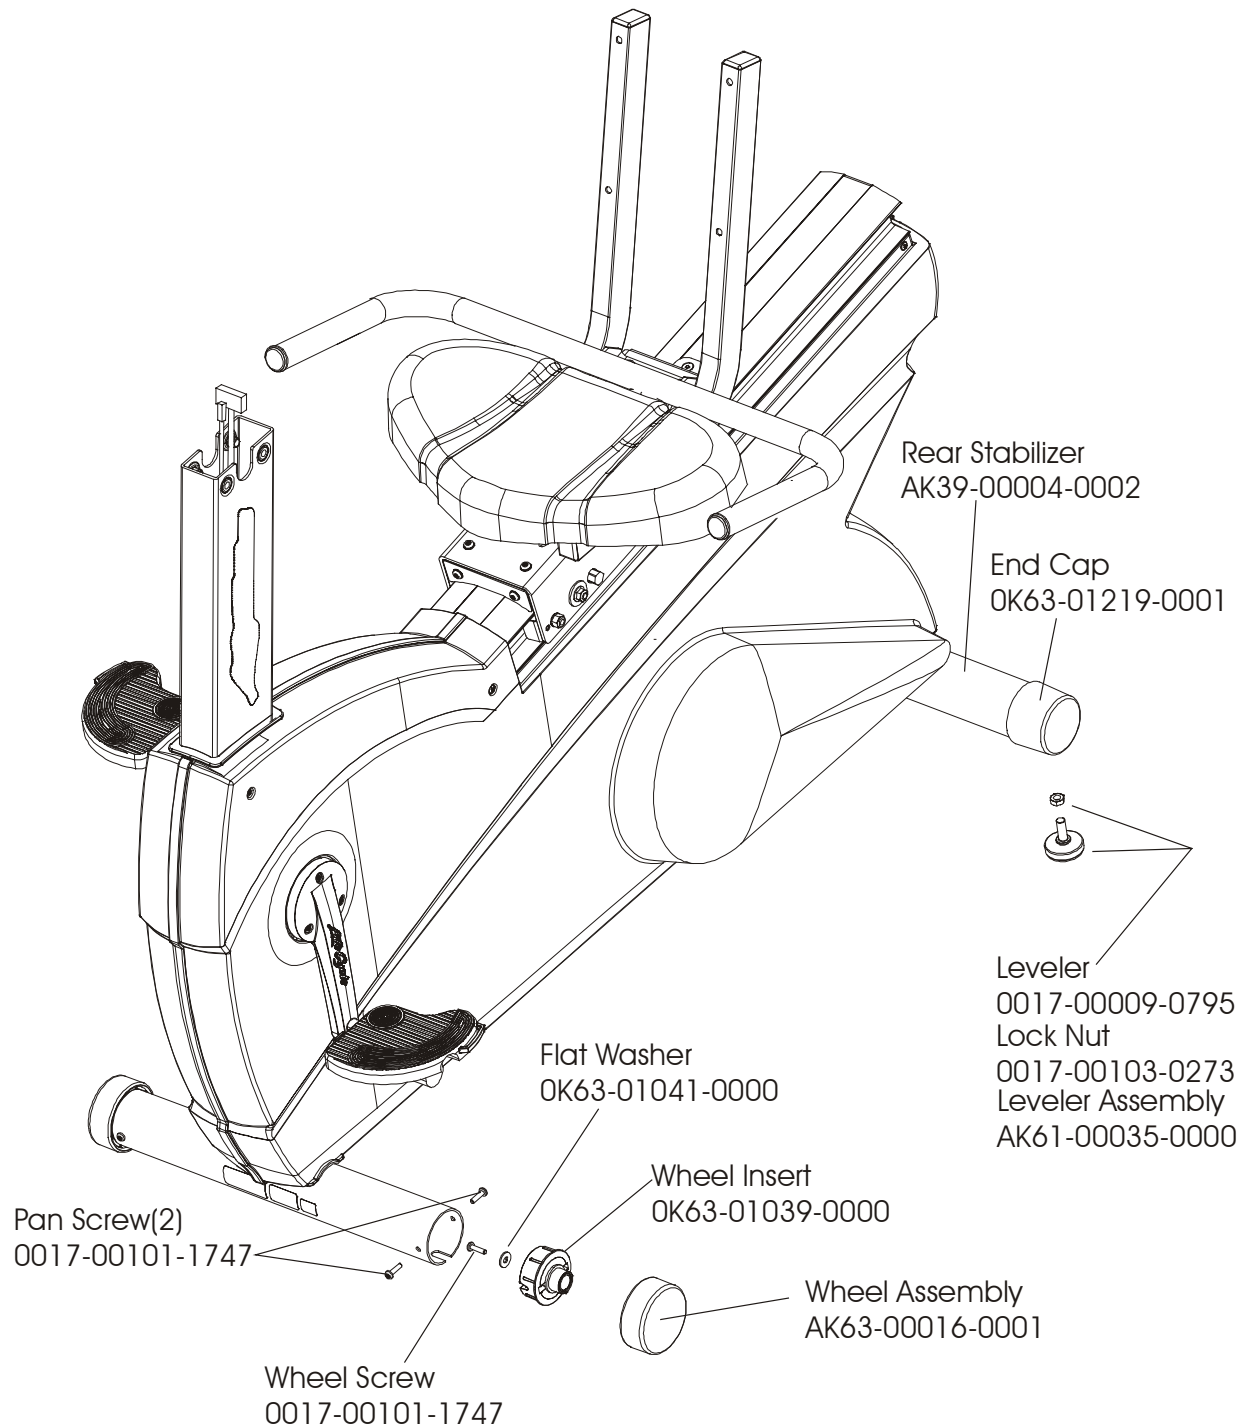

ARCTIC SILVER 93R

Cables

93R-0XXX-02
S/N CCN100000 and UP

