 


LifeFitness

ARCTIC SILVER 95CW Upright Bike

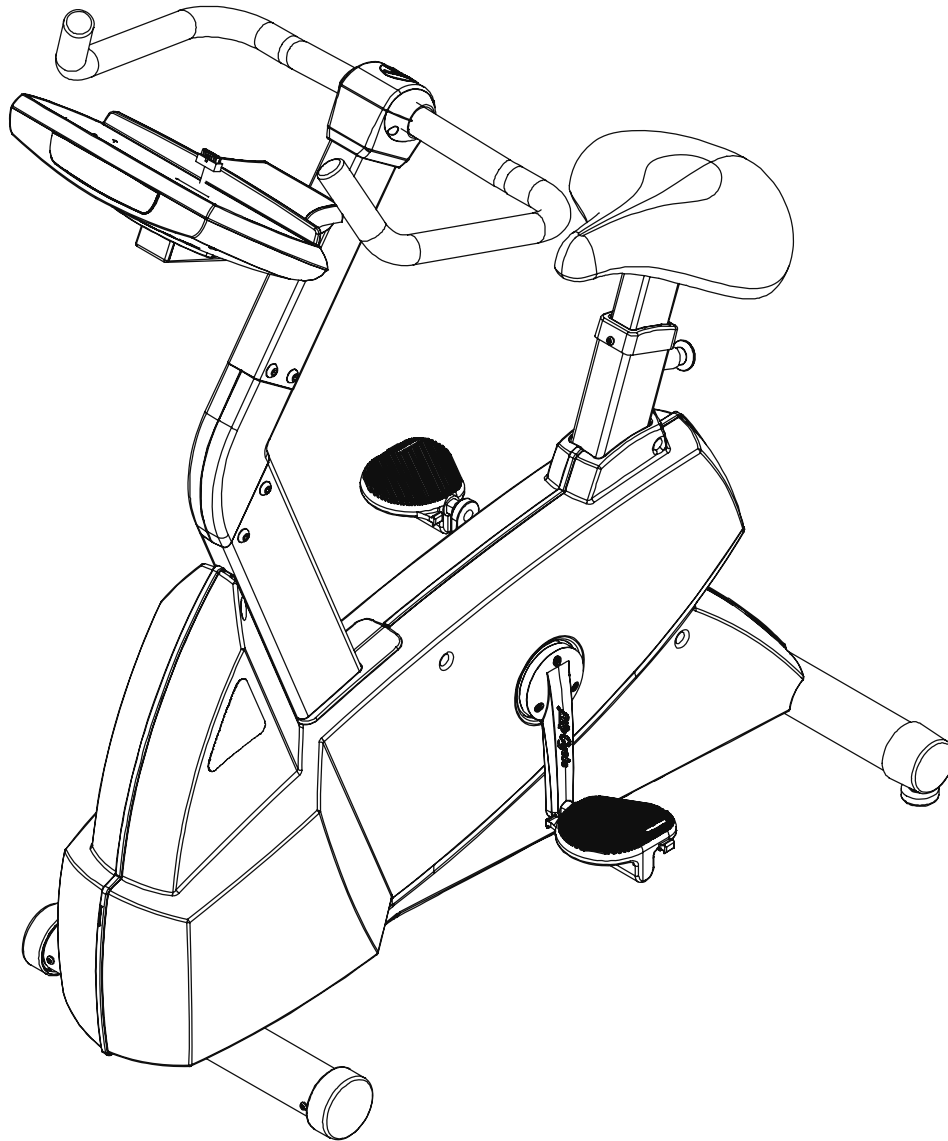

Customer Support Services
PARTS MANUAL rev 23 April 2014

ARCTIC SILVER 95CW
REFERENCES

95CW-0XXX-02
S/N CCR100000 and UP


OPERATION MANUAL	M051-00K63-A064
HARDWARE BAG	GK63-00002-0044
NETWORK C-SAFE KIT	GK63-00002-0003
POWER OPTION KIT – 120V	GK63-00002-0005
POWER OPTION KIT – 220/50 UK	GK63-00002-0039
POWER OPTION KIT – 240V+ AUS	GK63-00002-0040
POWER OPTION KIT – 220/50	GK63-00002-0041
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
COAX CABLE	AK32-00020-0001
ER READY BRACKET ASSEMBLY ASEMBLY CONSISTS OF: 1) POWER CABLE 2) ER READY BRACKET 3) F TYPE CONNECTOR	AK63-00215-0000 AK32-00078-0001 GK63-01329-0000 0017-00021-2846
SERVICE MANUAL	M051-00K63-A009

**NOTE: ADDING THE BOLT ON LCD SCREEN TO THE
 95CW-0XXX-02 MAKES THE UNIT A 95CER-0XXX-02**

	Page
CONSOLE AND RELATED COMPONENTS.....	4
CONSOLE MOUNTING SCREWS AND POLAR COVERS.....	5
ALTERNATOR W/PULLEY	6
CRANKSHAFT AND BEARING ASSEMBLY.....	7
INTERMEDIATE SHAFT AND BEARING ASSEMBLY.....	8
SEAT LATCH ASSEMBLY.....	9
SEAT POST ASSEMBLY	10
SEAT POST SHROUDS.....	11
IDLER BRACKET ASSEMBLY.....	12
CONSOLE SUPPORT ASSEMBLY.....	13
LEFT SIDE SHROUD AND CRANKARM.....	14
RIGHT SIDE SHROUD AND CRANKARM.....	15
PCB MOUNTING BRACKET ASSEMBLY.....	16
FRONT WHEELS.....	17
RESISTOR ASSEMBLY.....	18
HANDLEBAR ASSEMBLY.....	19
BELTS.....	20
CABLES.....	21

ARCTIC SILVER 95CW
Console and Related Components

 
95CW-0XXX-02
S/N CCR100000 and UP

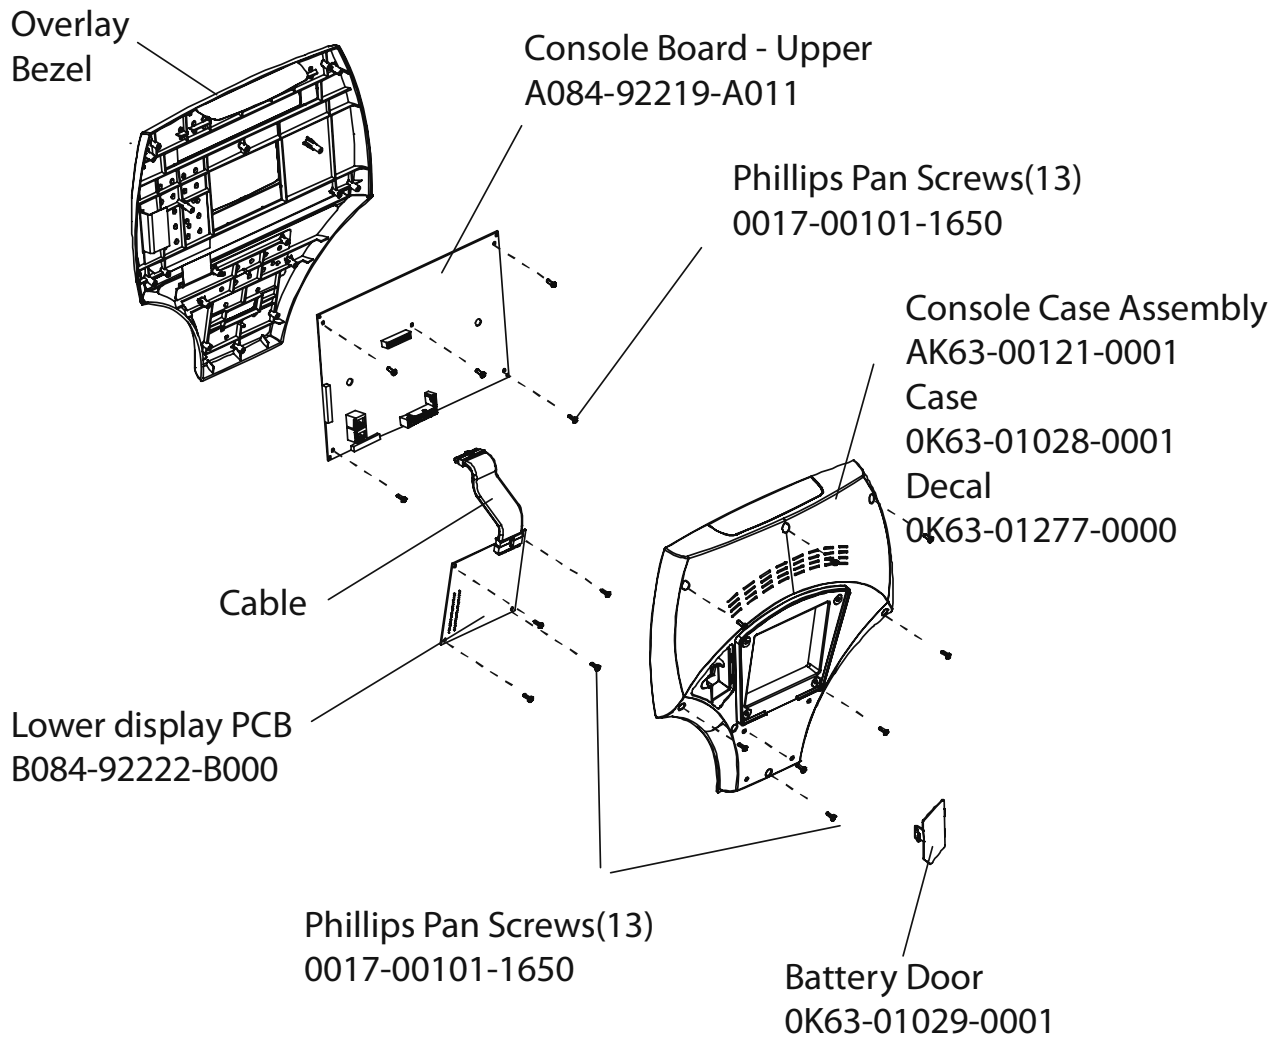

Console Assembly	Bezel/Switch W/Overlay Assy.
AK63-00160-0001 Eng Met	AK63-00165-0001 Eng Met
AK63-00160-0003 Ger Met	AK63-00165-0003 Ger Met
AK63-00160-0004 Spn Met	AK63-00165-0004 Spn Met
AK63-00160-0006 Jap Met	AK63-00165-0006 Jap Met
AK63-00160-0007 Frn Met	AK63-00165-0007 Frn Met
AK63-00160-0008 Itl Met	AK63-00165-0008 Itl Met
AK63-00160-0009 Dut Met	AK63-00165-0009 Dut Met
AK63-00160-0010 Por Met	AK63-00165-0010 Por Met


ARCTIC SILVER 95CW
Console Mtg. Screws & Polar Covers

 95CW-0XXX-02
S/N CCR100000 and UP

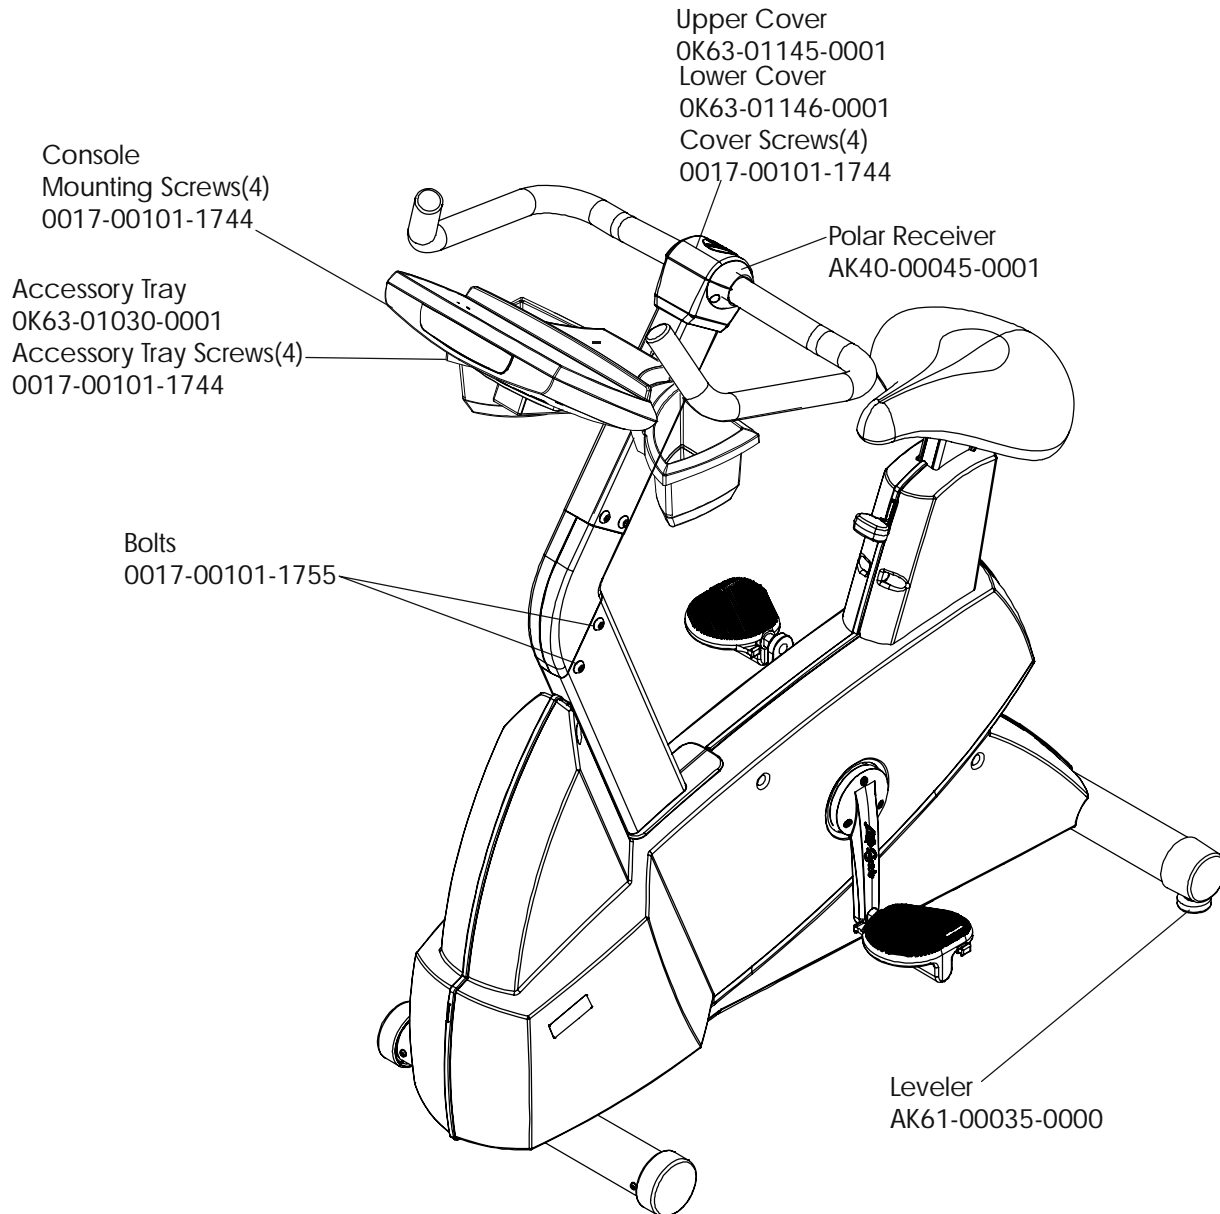


ARCTIC SILVER 95CW
Alternator w/Pulley-AK63-00093-0000

 95CW-0XXX-02
S/N CCR100000 and UP

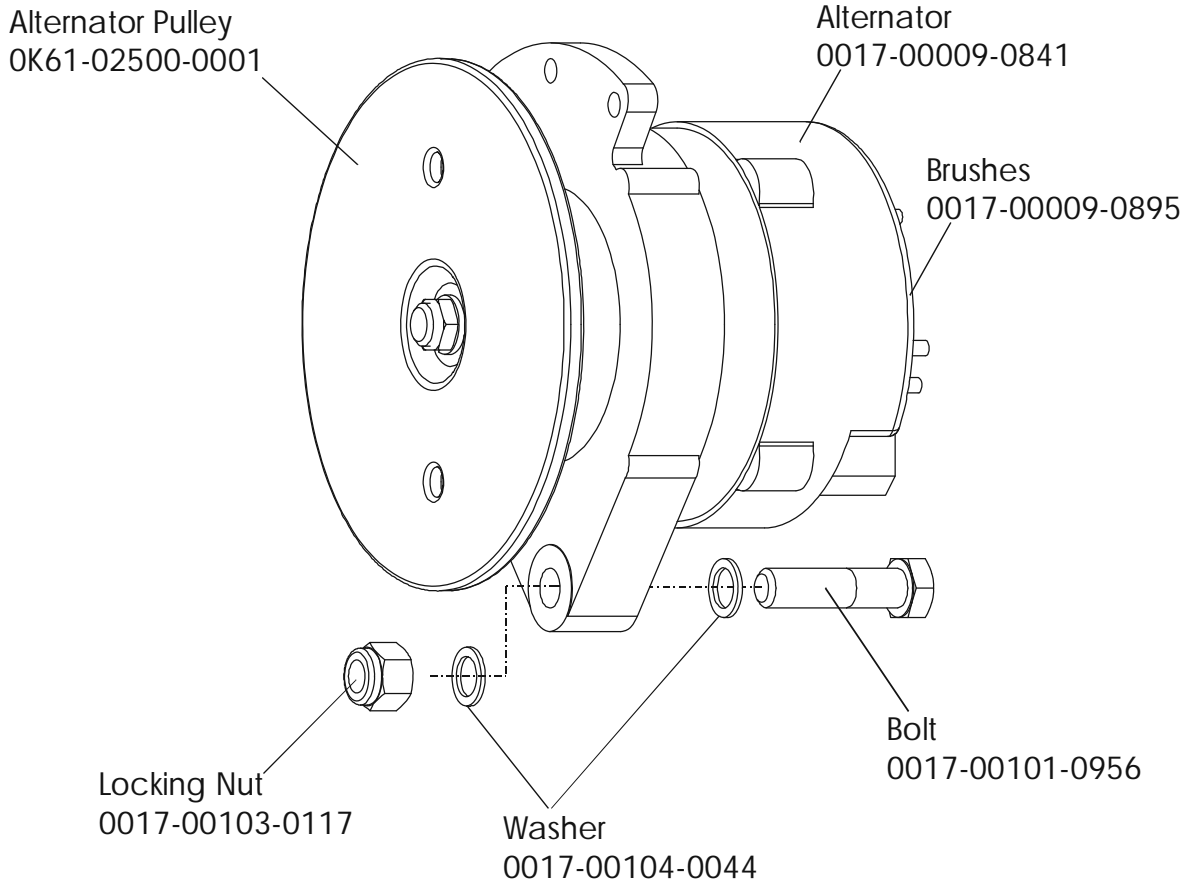


ARCTIC SILVER 95CW
Crankshaft and Bearing Assembly

 95CW-0XXX-02
S/N CCR100000 and UP

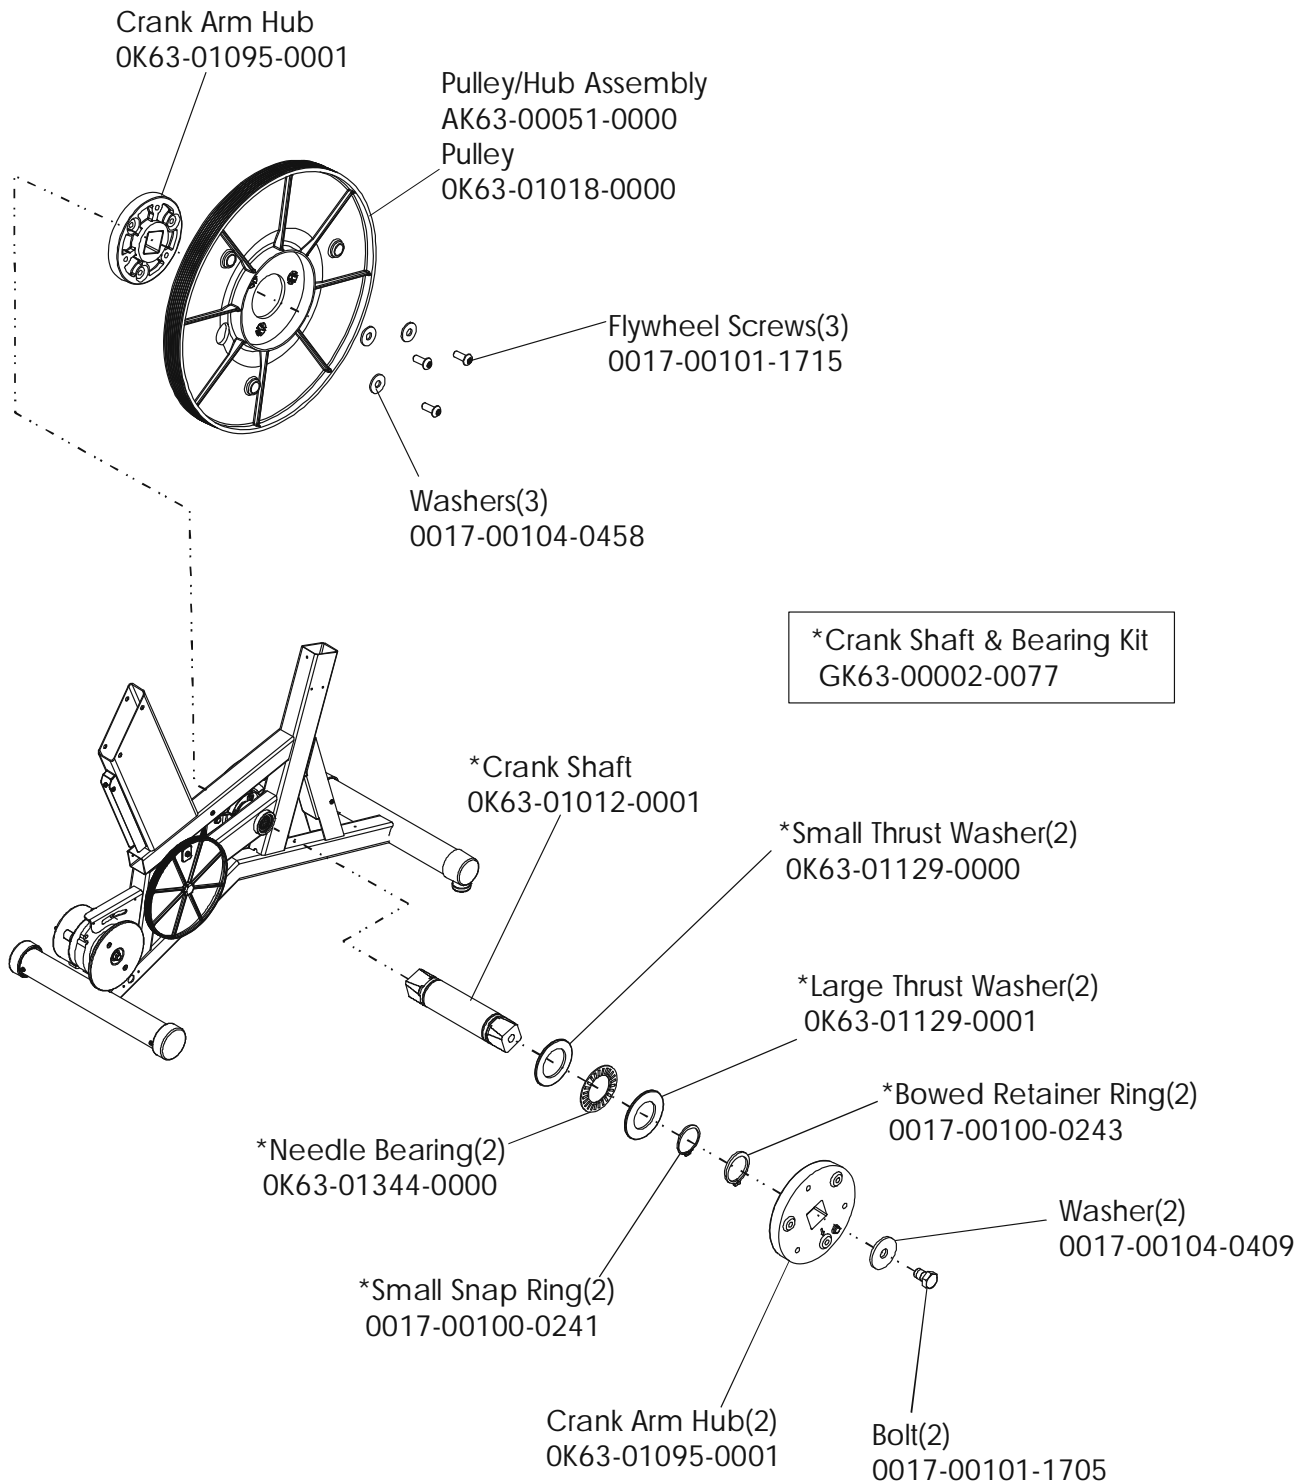

ARCTIC SILVER 95CW
Intermediate Shaft & Bearing Assembly

 95CW-0XXX-02
S/N CCR100000 and UP

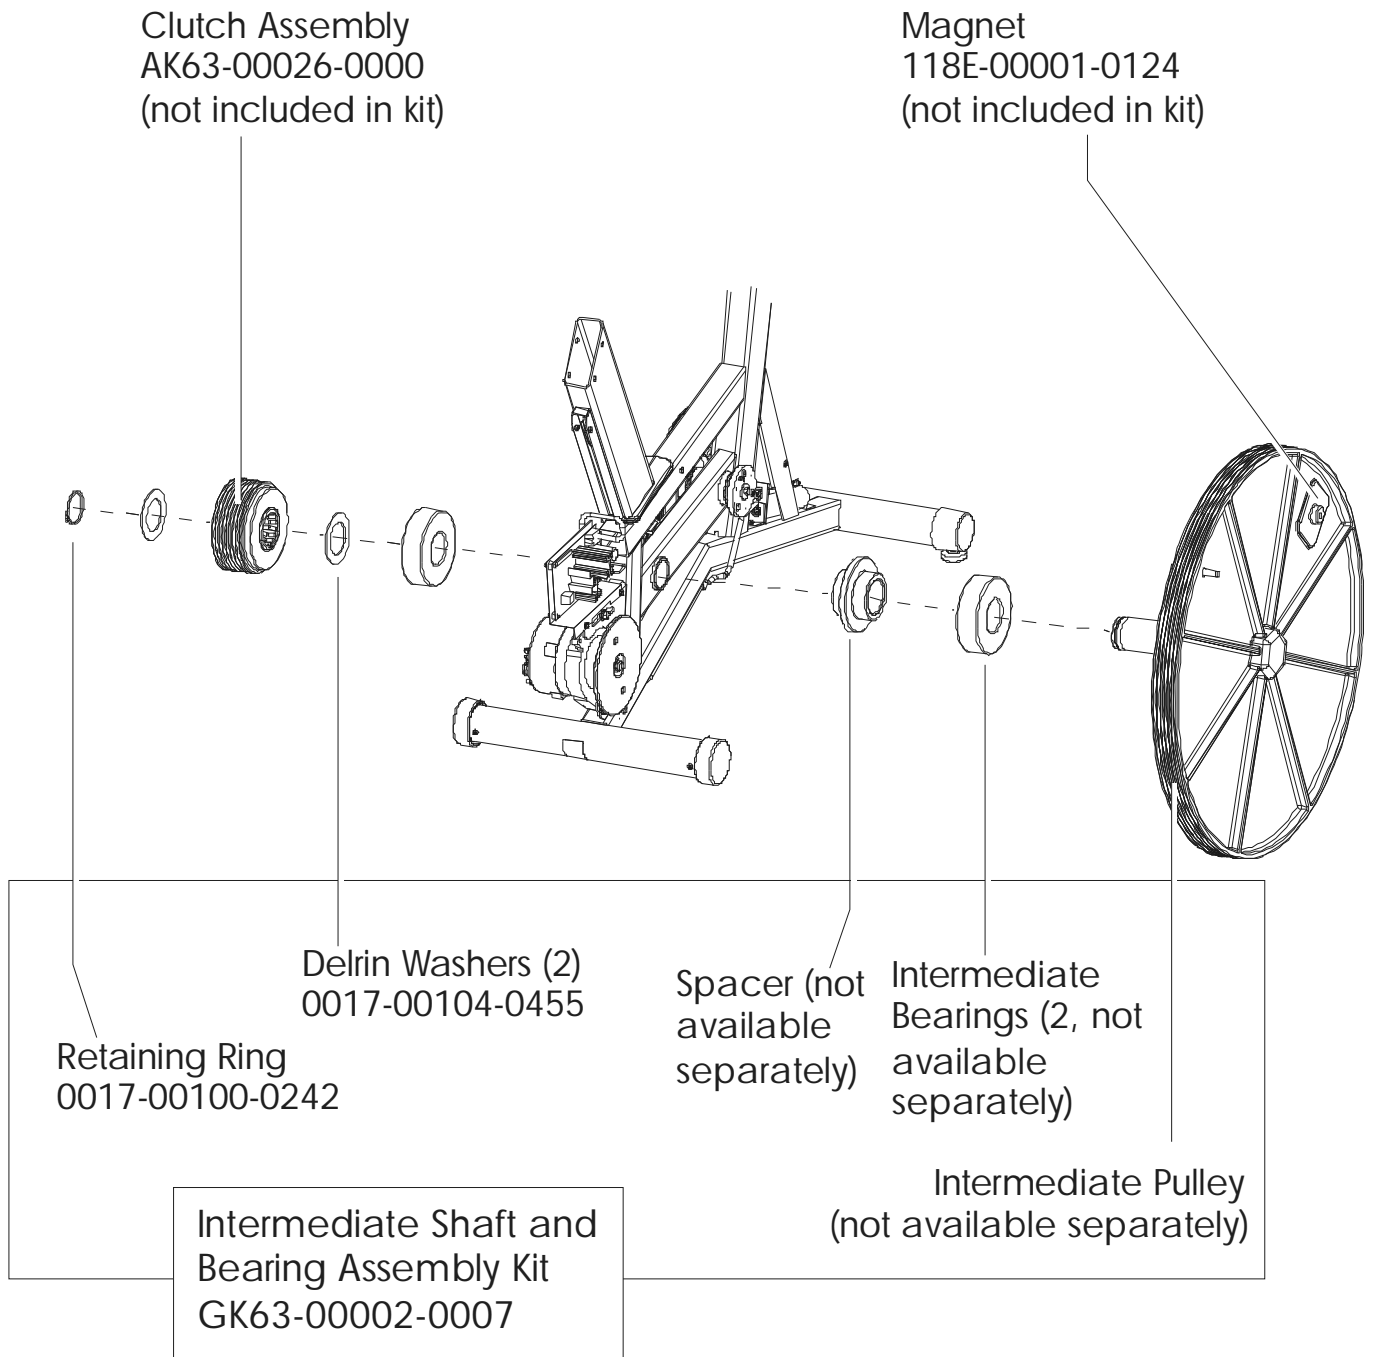


ARCTIC SILVER 95CW

Seat Latch Assembly - AK63-00043-0001

95CW-0XXX-02

 S/N CCR100000 and UP

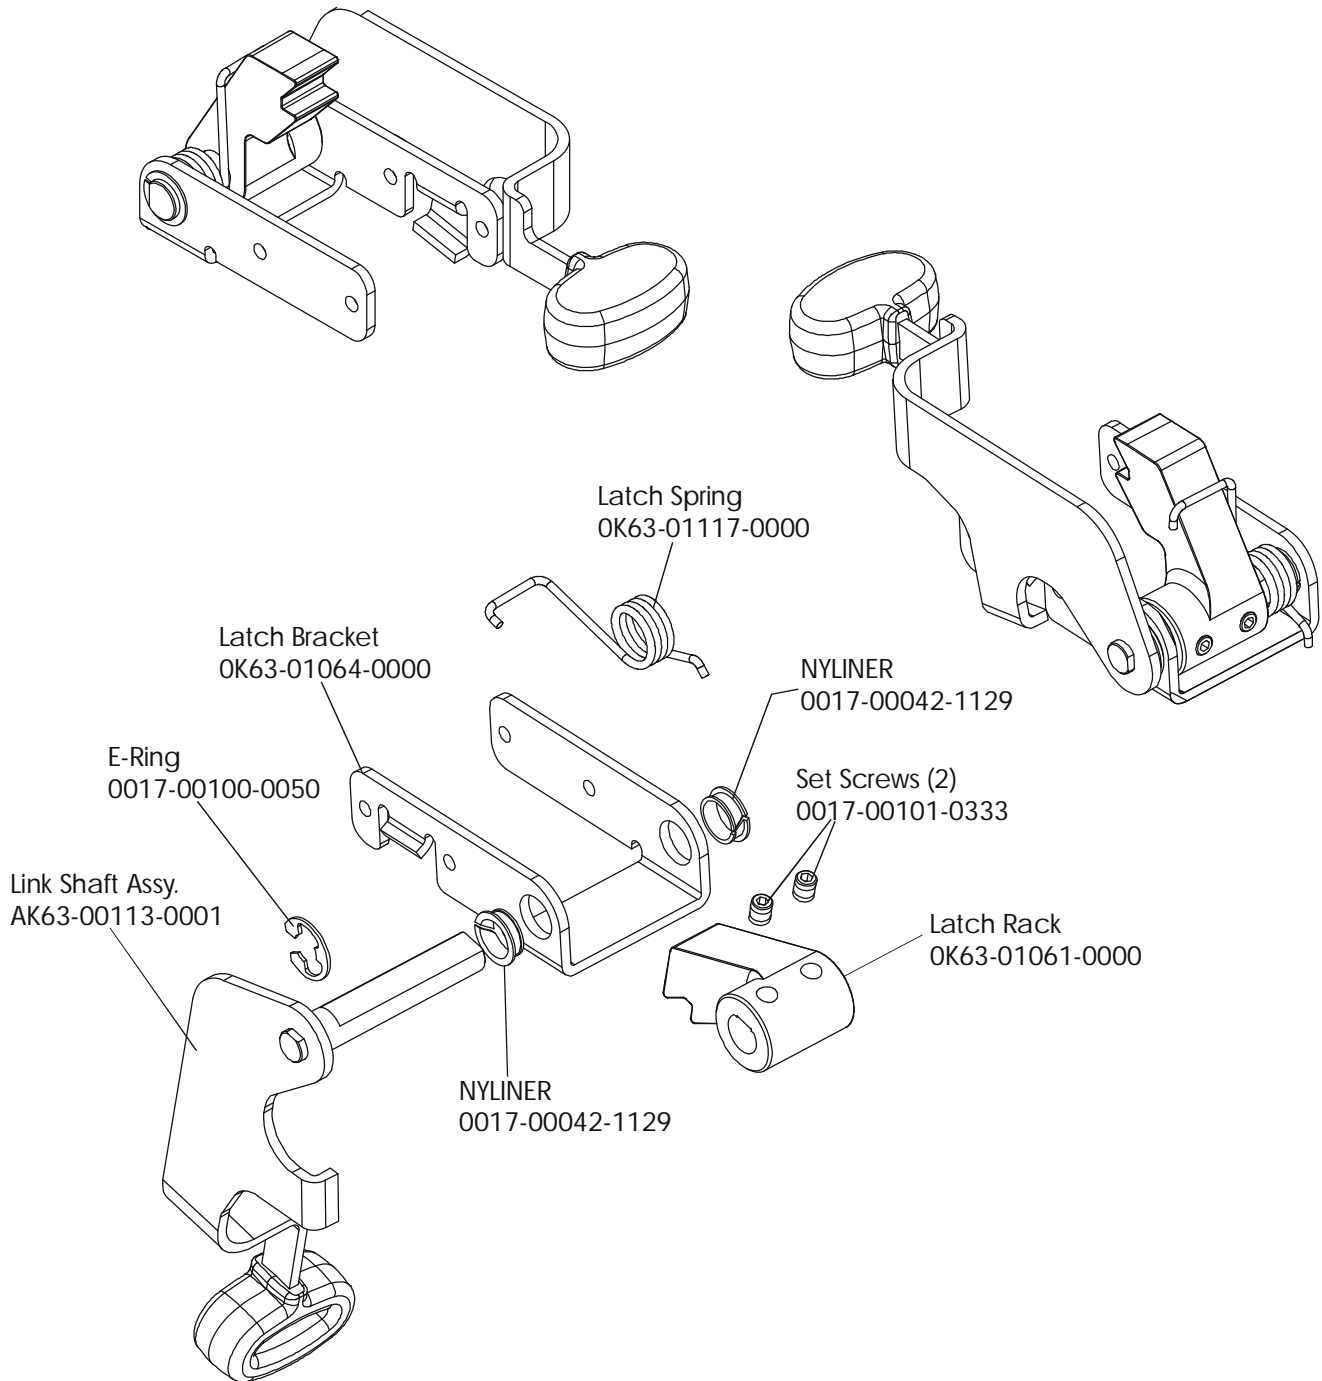


ARCTIC SILVER 95CW

Seat Post Assembly – AK63-00232-0002


95CW-0XXX-02

 S/N CCR100000 and UP

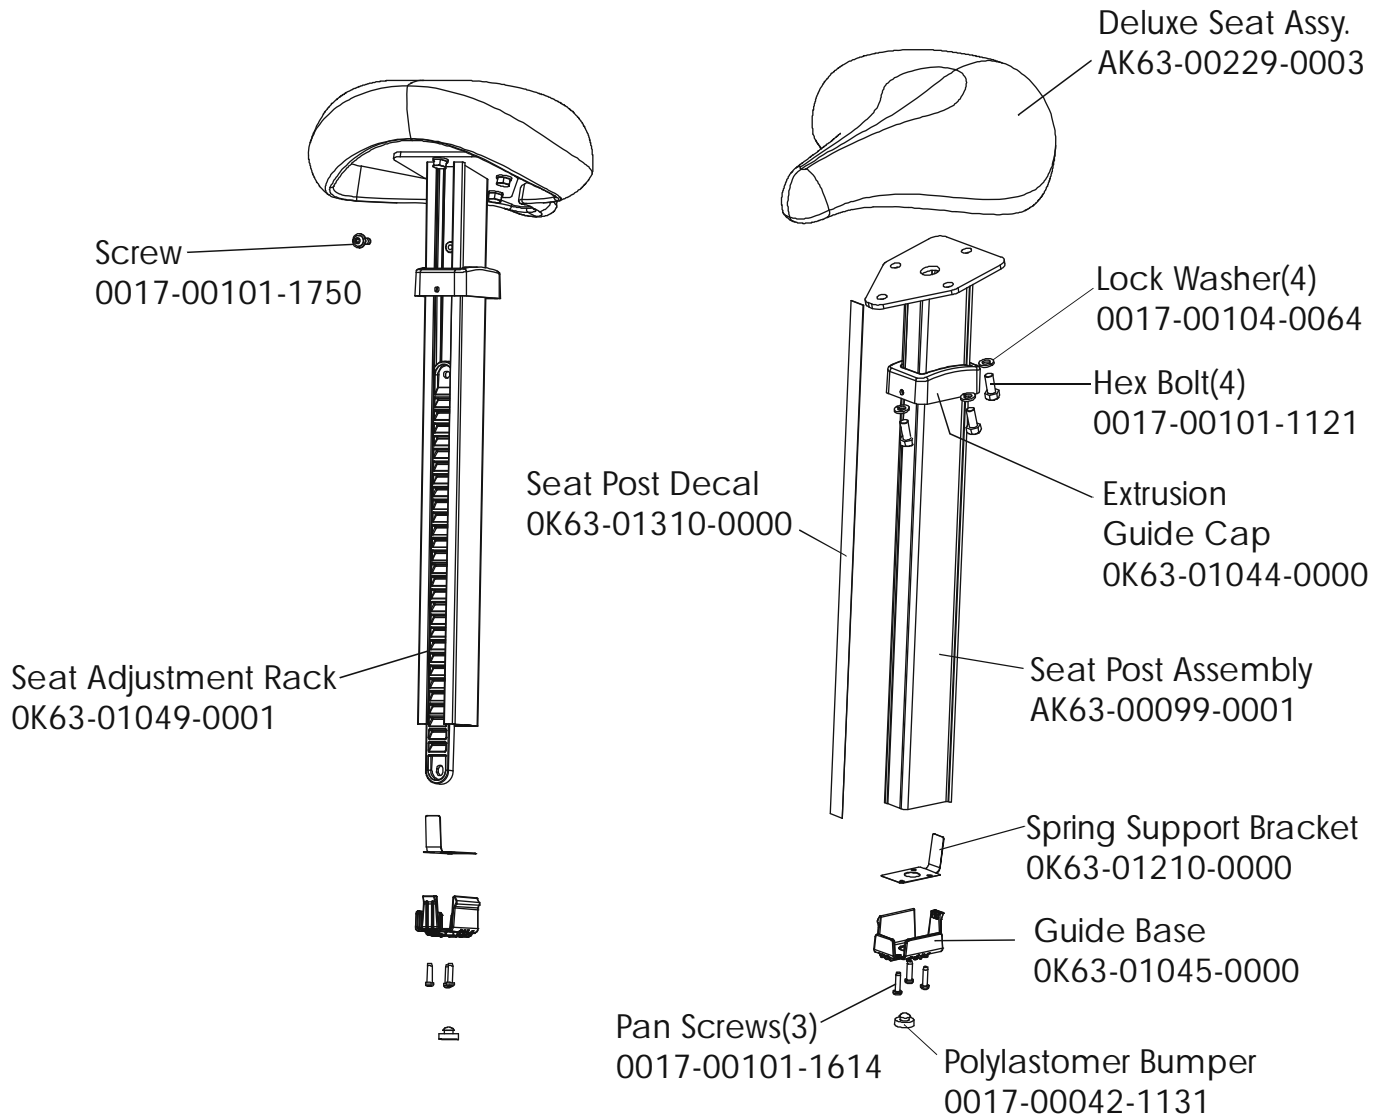



Right Seat Post Shroud
0K63-01092-0009

 Screw
0017-00101-1741

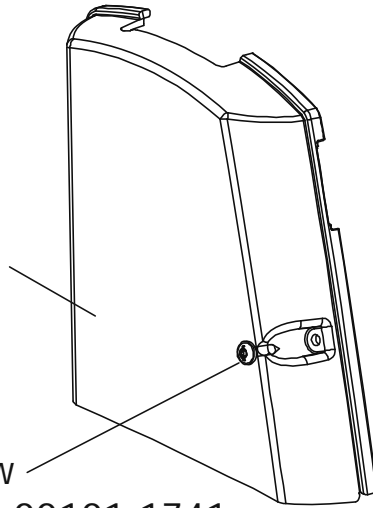


Left Seat Post Shroud
0K63-01092-0010

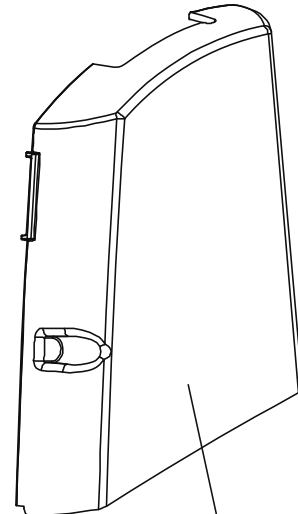 

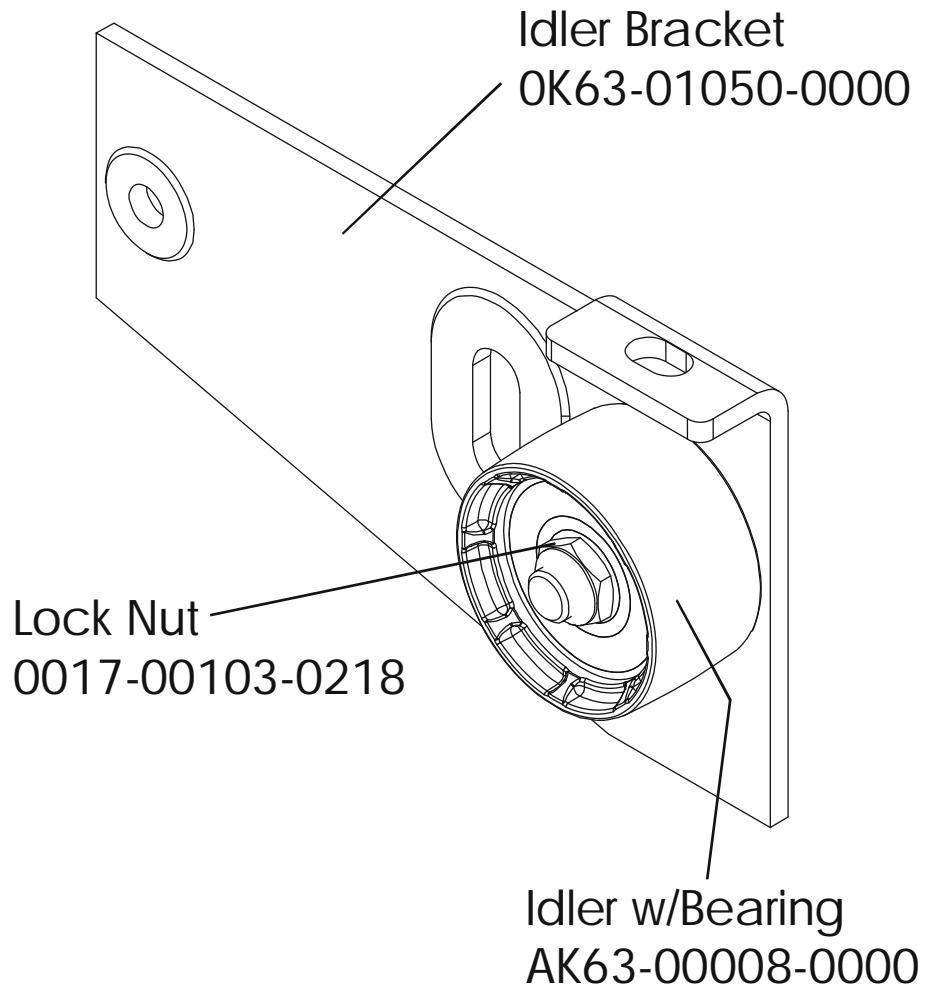 


ARCTIC SILVER 95CW
Console Support Assembly

 95CW-0XXX-02
S/N CCR100000 and UP

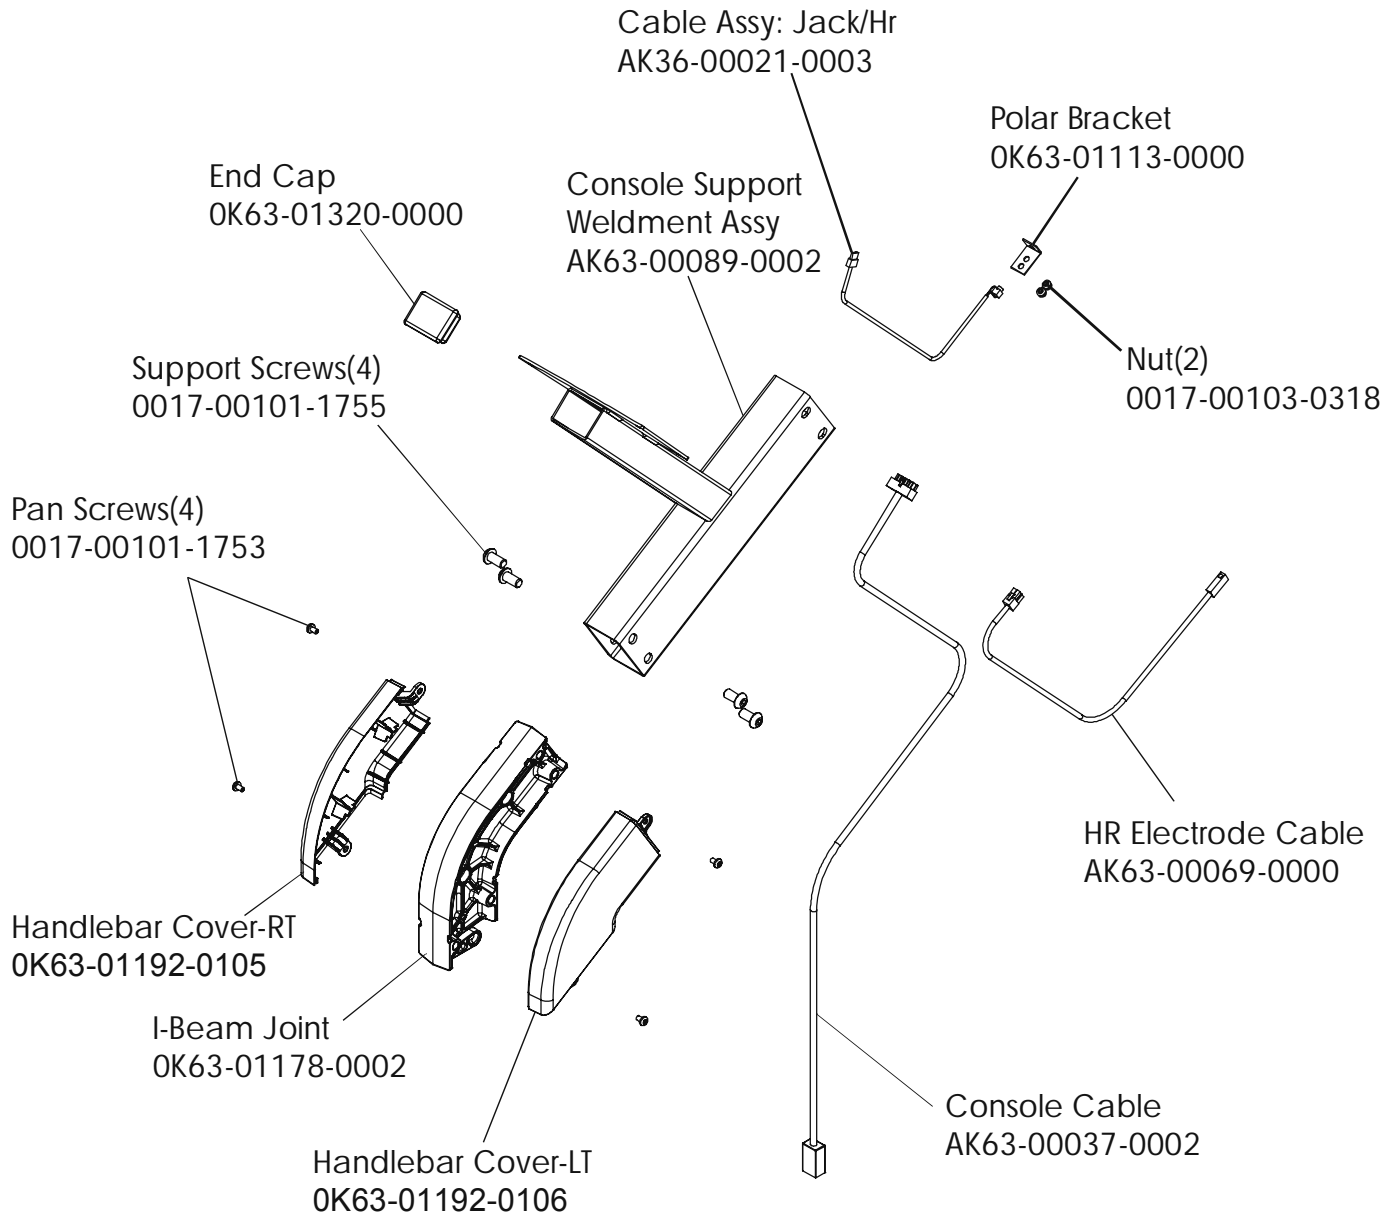


ARCTIC SILVER 95CW
Left Side Shroud and Crankarm

 95CW-0XXX-02
S/N CCR100000 and UP

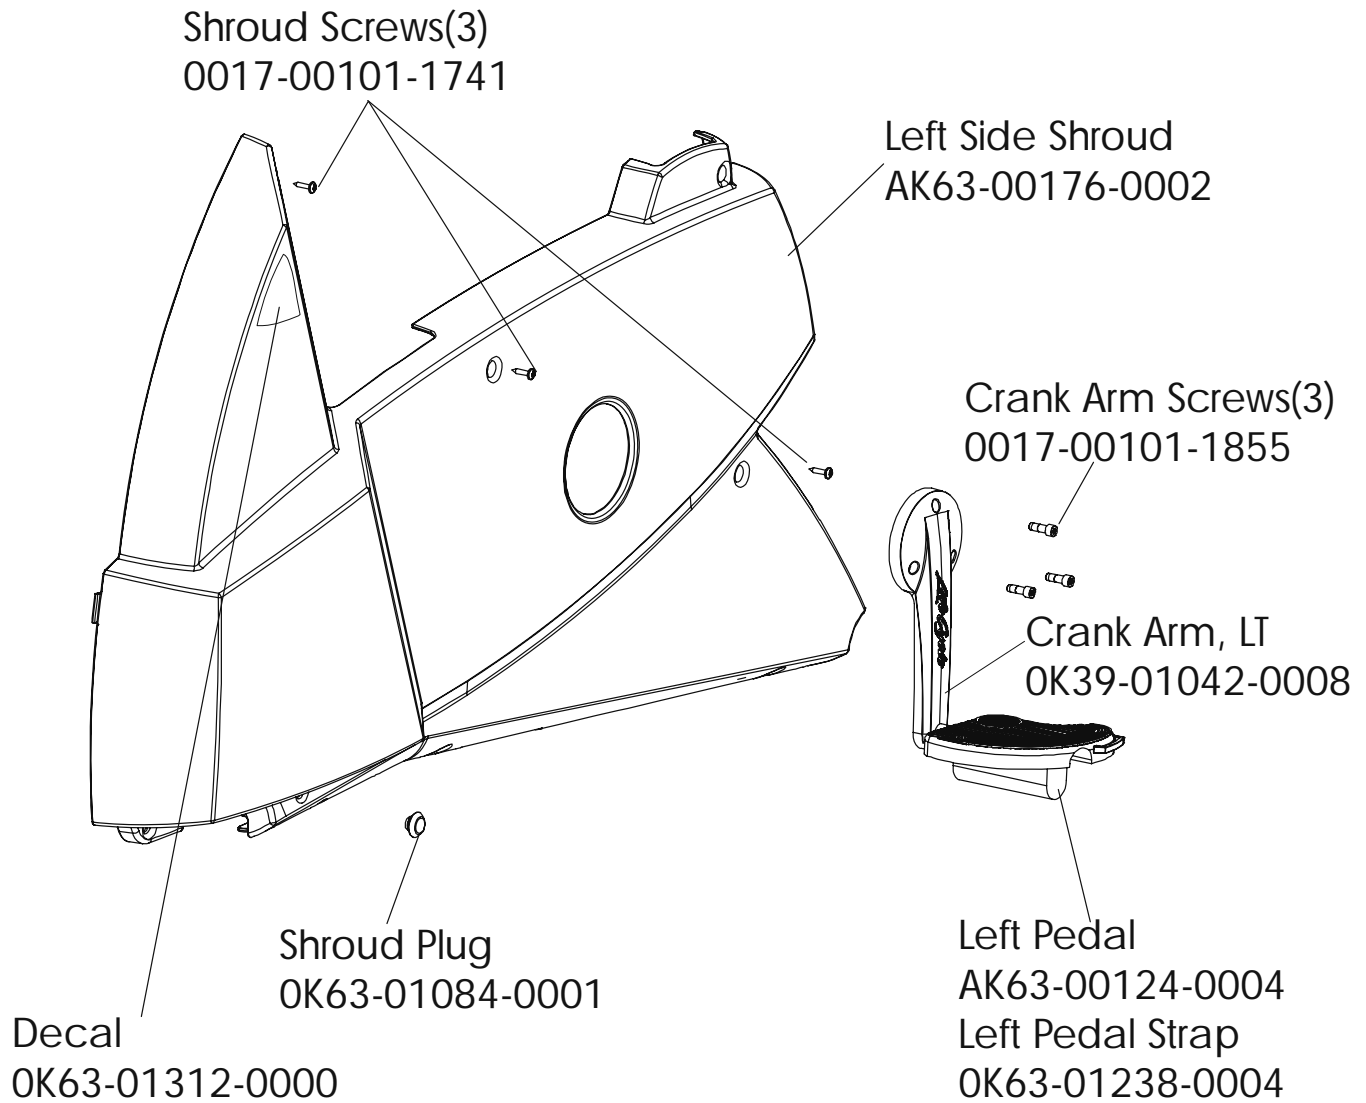

ARCTIC SILVER 95CW
Right Side Shroud and Crankarm

 
95CW-0XXX-02
S/N CCR100000 and UP

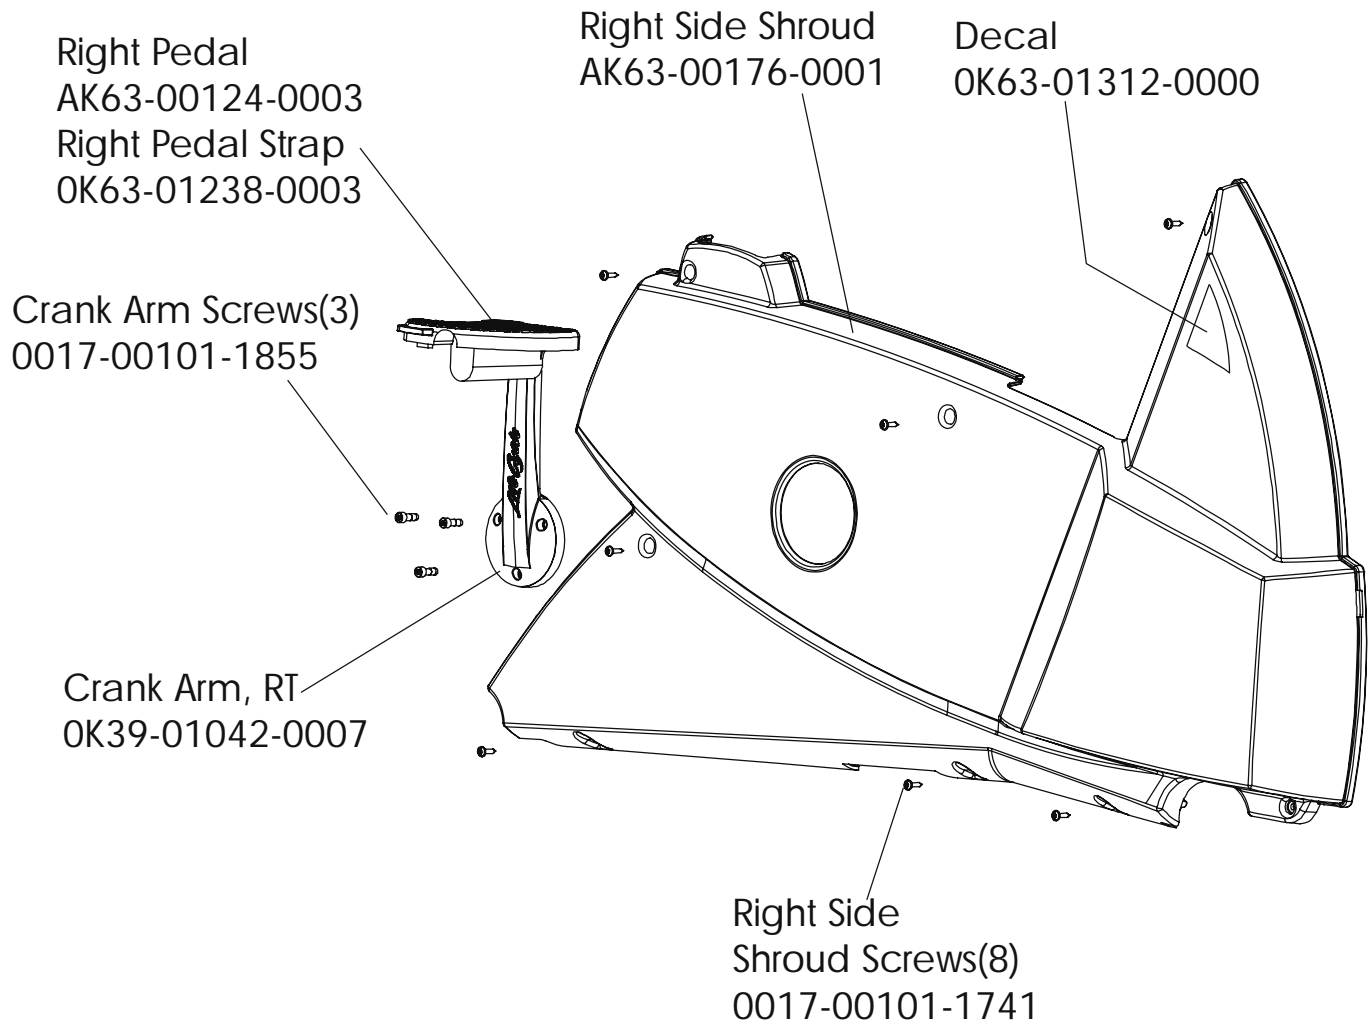


ARCTIC SILVER 95CW
PCB Mounting Bracket Assembly

95CW-0XXX-02
S/N CCR10000 and UP

  
Assembly Number – AK63-00049-0000

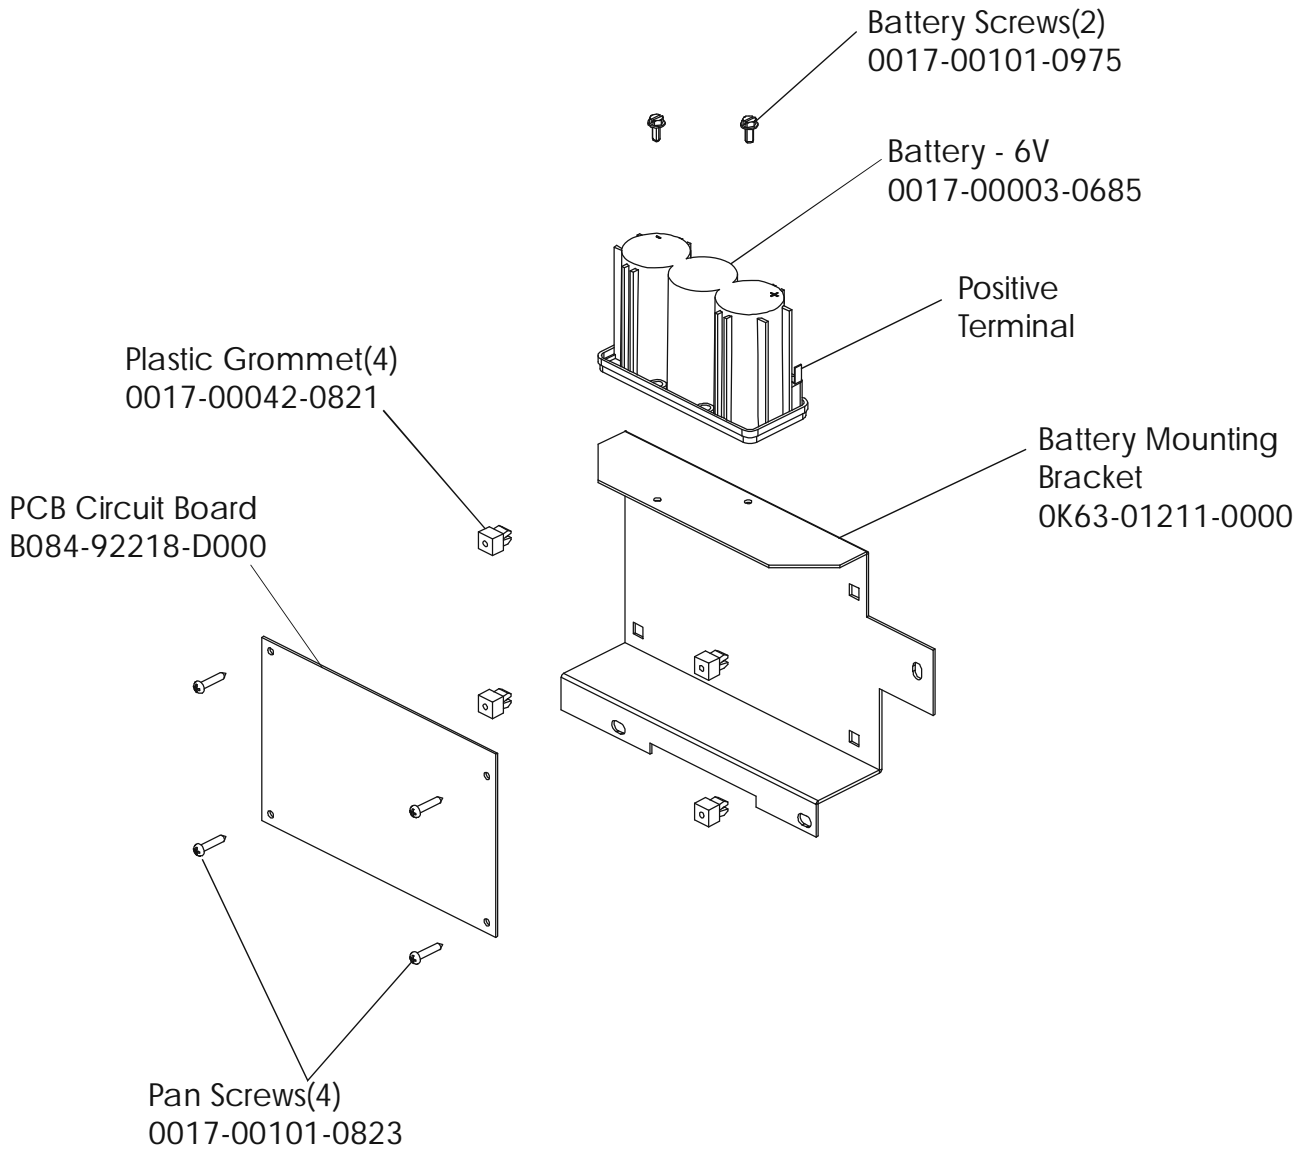

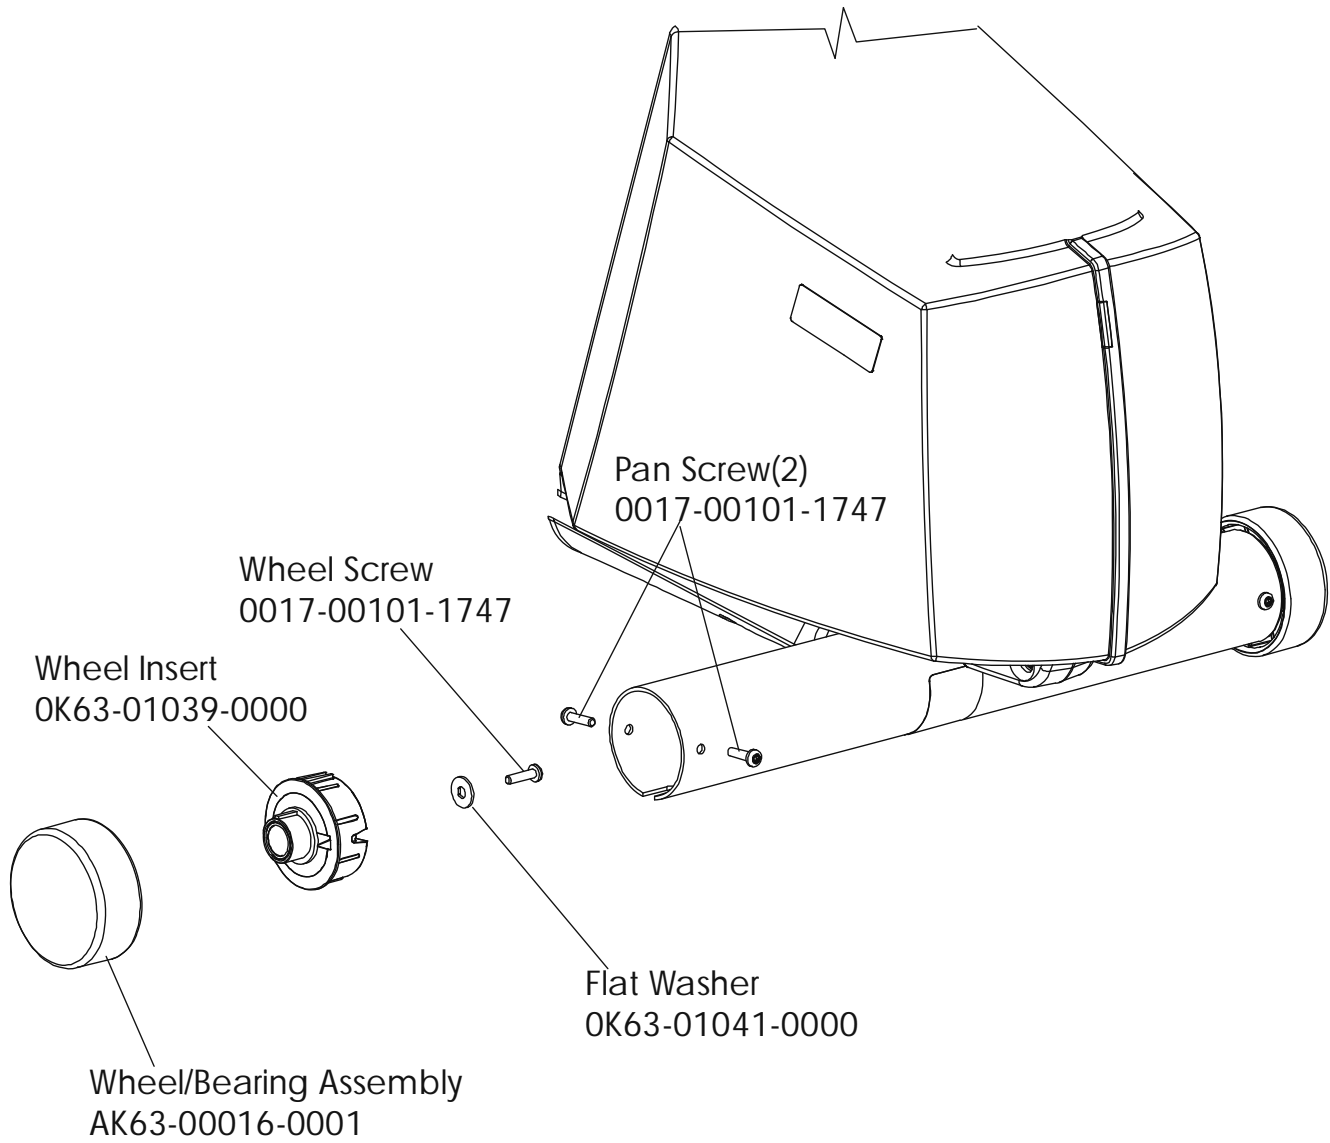

ARCTIC SILVER 95CW
Resistor Assembly- AK63-00047-0001

 95CW-0XXX-02
S/N CCR100000 and UP

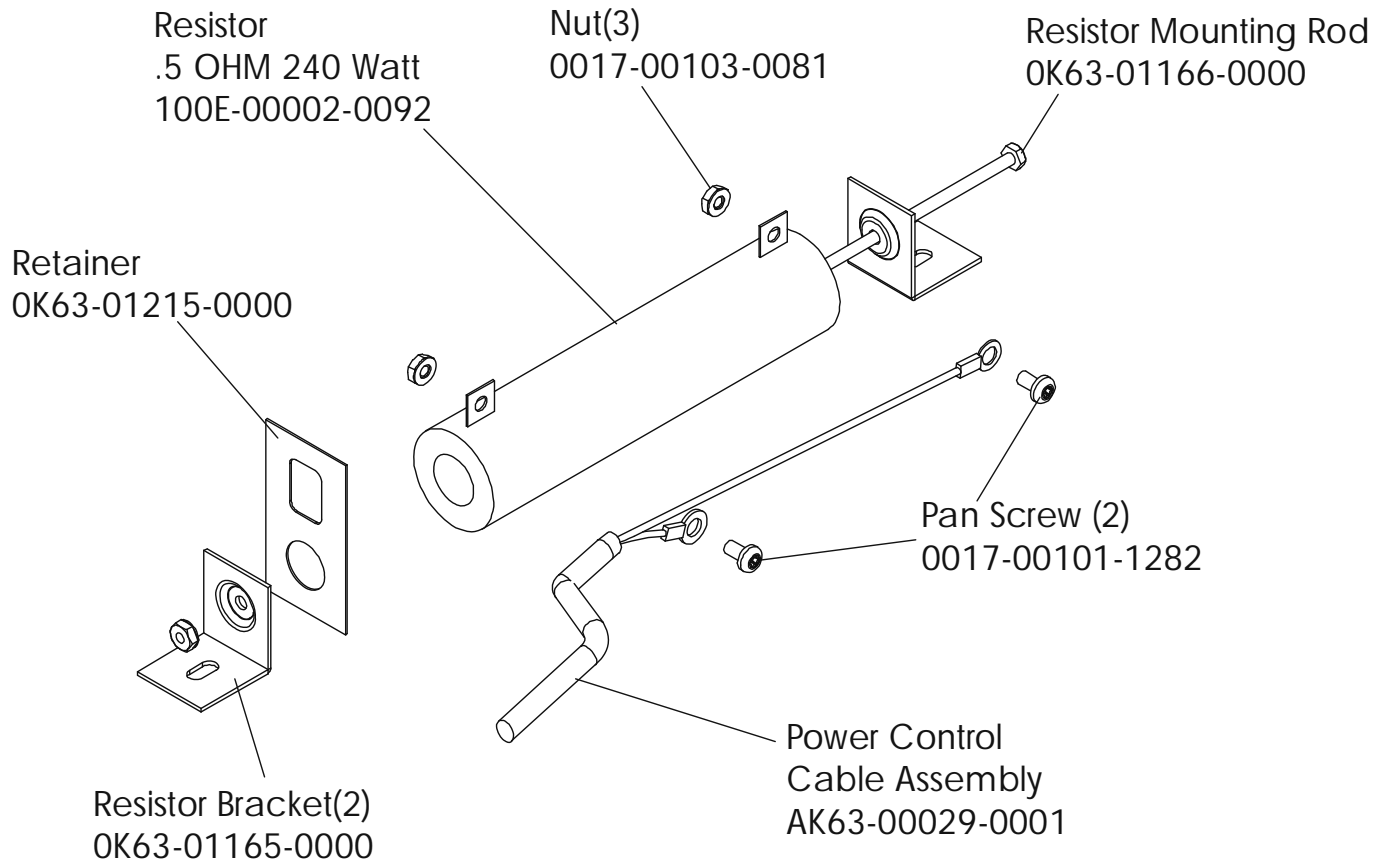



ARCTIC SILVER 95CW

Handlebar Assembly - AK63-00091-0001


95CW-0XXX-02

  S/N CCR100000 and UP

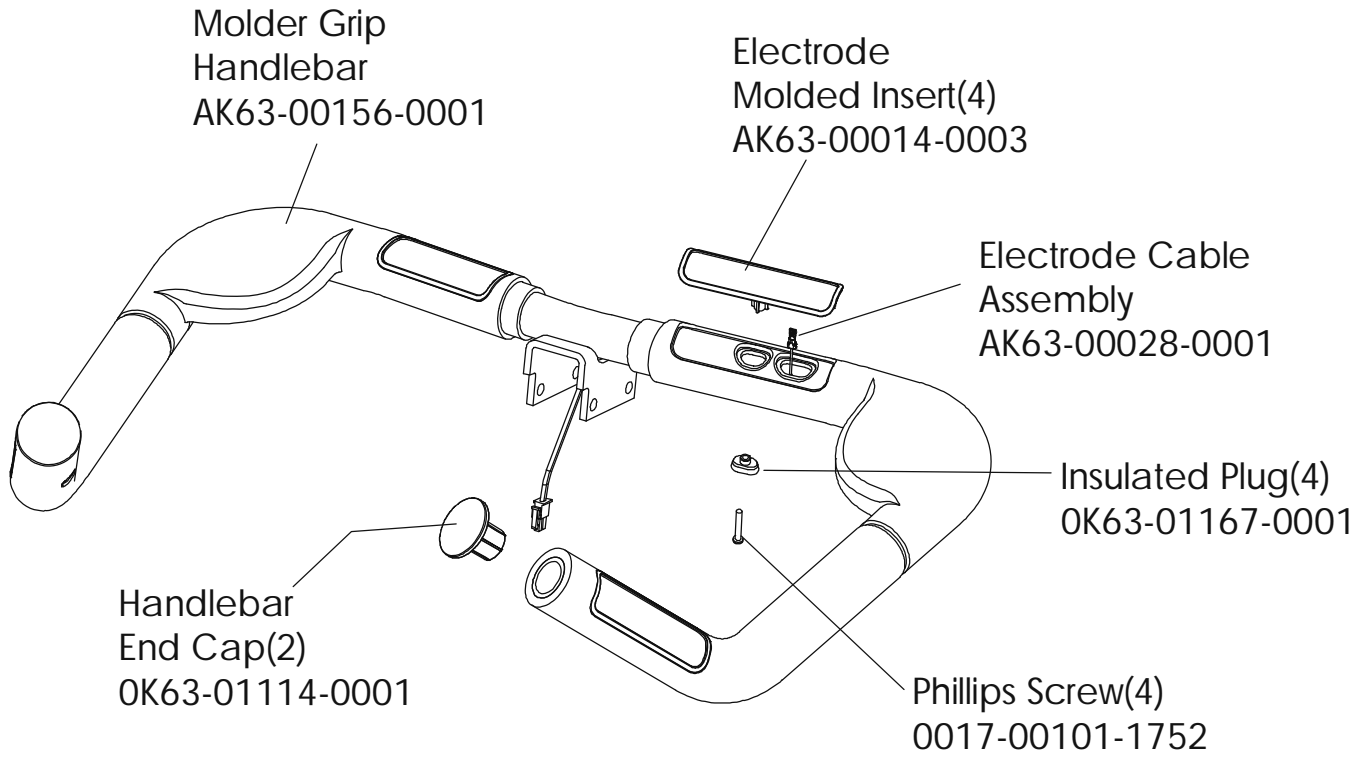

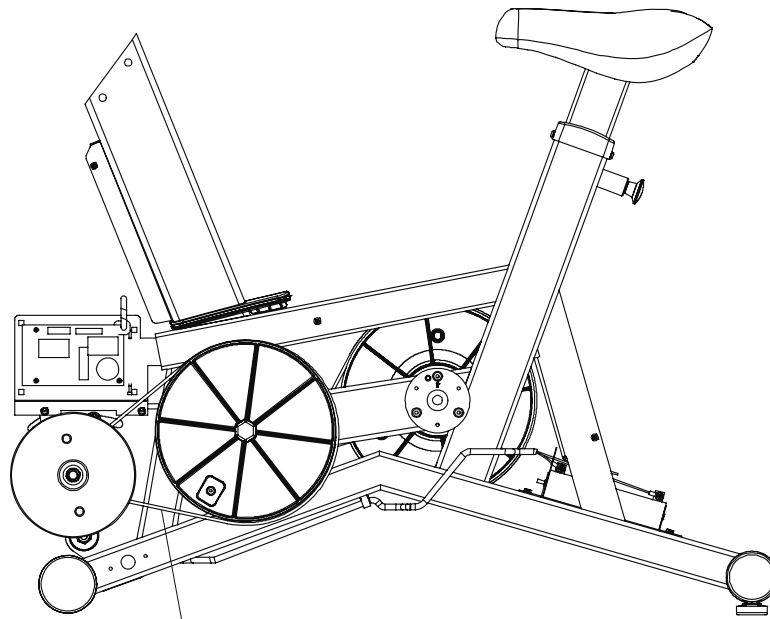

Alternator Belt
OK63-01065-0000

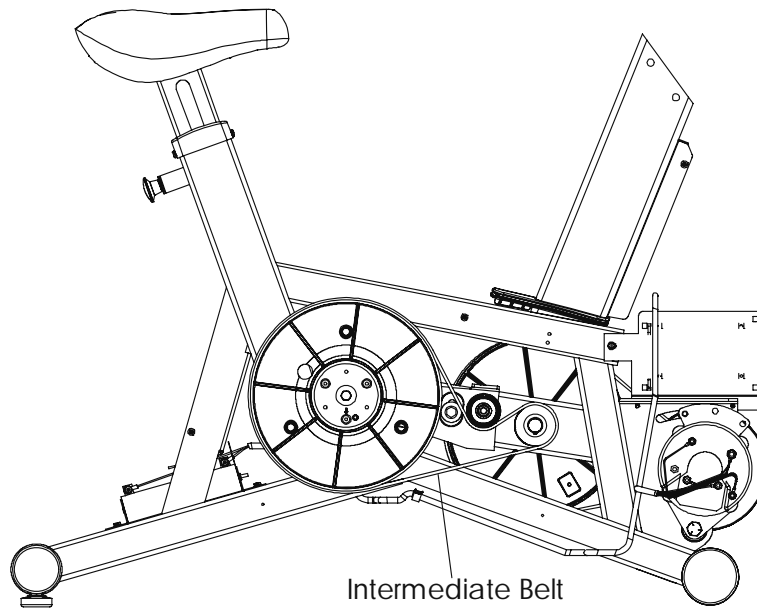 


Intermediate Belt
OK63-01066-0001

ARCTIC SILVER 95CW

Cables


95CW-0XXX-02
S/N CCR10000 and UP

 **CABLE ASSEMBLY
 POWER CONTROL TO ALTERNATOR
 AK63-00029-0001**

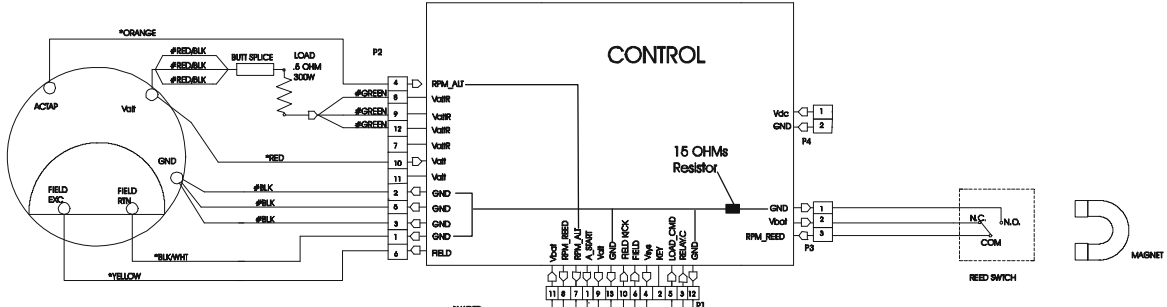

**CONSOLE TO ACB CABLE
 AK63-00037-0002**

 **LOWER CONSOLE
 CABLE
 AK63-00038-0000**

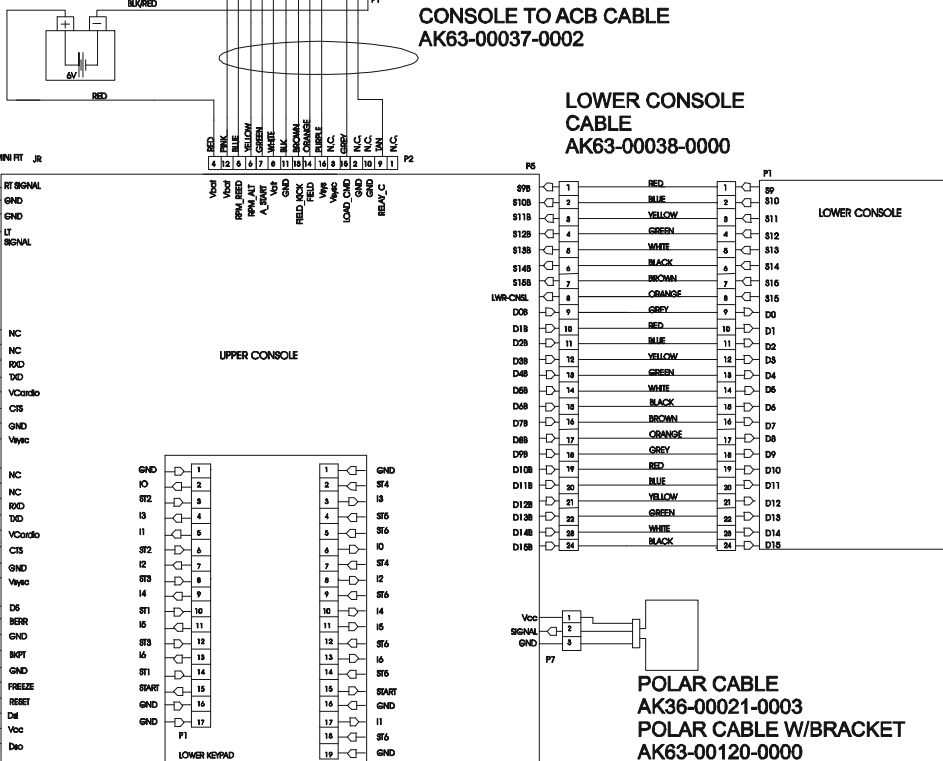

**POLAR CABLE
 AK36-00021-0003
 POLAR CABLE W/BACKET
 AK63-00120-0000**

**CABLE ASSEMBLY
 AK63-00028-0001**

**LIFE PULSE EXTENSION
 AK63-00069-0000**

