 


# *LifeFitness*

 
RECUMBENT BIKE 95RE-0XXX-01

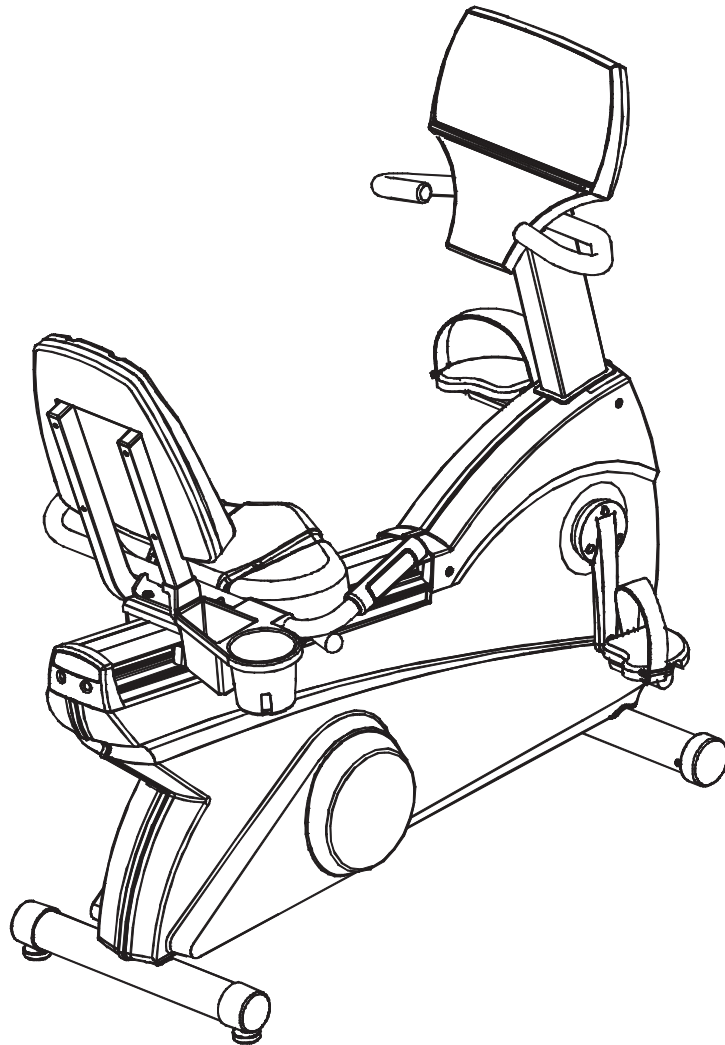


Customer Support Services  
**PARTS MANUAL** rev 01 May 2008


Miscellaneous .....	3
Console Assembly .....	4
Console Support Assembly .....	6
Shrouds, End Cap, and Crank Arm .....	7
Belts and Battery (6v) .....	8
Resistor Assembly .....	9
Power Control Board.....	10
Alternator Assembly .....	11
Crankshaft and Bearing Assembly .....	12
Intermediate Shaft and Bearing.....	13
Idler Bracket .....	14
Seat Assembly.....	15
Seat Bottom Assembly .....	16
Seat Frame Assembly .....	17
Seat Pads and Accessory Tray .....	18
Extrusion Assembly.....	19
Locking Assembly.....	20
Wheel and Leveler .....	21
Cables .....	22

Description	Part No.
OPERATOR MANUAL	M051-00K39-A088
SERVICE MANUAL	M051-00K39-B012
POWER-SUPPLY: 12V; 4.5A (without line cord)	118E-00001-0161
LINE-CORD: DOM. 10A 125V	0017-00003-0704
LINE-CORD: CON 10A 250V	0017-00003-0691
LINE-CORD: 10A; U.K	0017-00003-0889
LINE-CORD: AUSTRALIA	0017-00003-0918
HARDWARE KIT	GK39-00002-0009

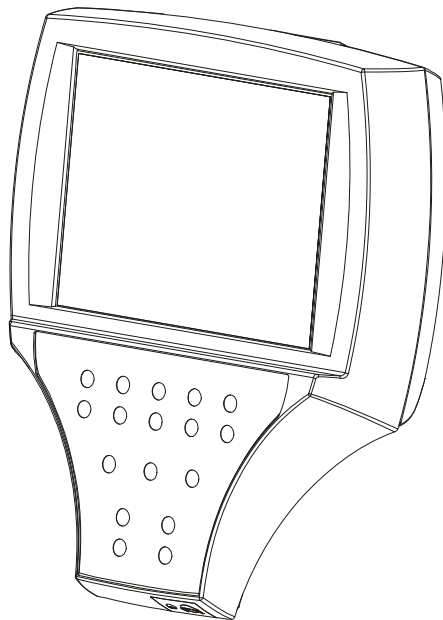


	Description	Part No.
<b>Console Assembly</b>	KIT: SERVICE CONSOLE NTSC ENG	GK63-00002-0045
	KIT: SERVICE CONSOLE NTSC SPN	GK63-00002-0046
	KIT: SERVICE CONSOLE NTSC JAP	GK63-00002-0047
	KIT: SERVICE CONSOLE NTSC FRN	GK63-00002-0048
	KIT: SERVICE CONSOLE PAL ENG	GK63-00002-0049
	KIT: SERVICE CONSOLE PAL GER	GK63-00002-0050
	KIT: SERVICE CONSOLE PAL SPN	GK63-00002-0051
	KIT: SERVICE CONSOLE PAL FRN	GK63-00002-0052
	KIT: SERVICE CONSOLE PAL ITL	GK63-00002-0053
<b>Overlay Bezel Assembly</b>	BZL/SW W/OVERLAY ASSY: MFG; ENG	AK63-00247-0001
	BZL/SW W/OVERLAY ASSY: MFG; GER	AK63-00247-0003
	BZL/SW W/OVERLAY ASSY: MFG; SPN	AK63-00247-0004
	BZL/SW W/OVERLAY ASSY: MFG; JAP	AK63-00247-0006
	BZL/SW W/OVERLAY ASSY: MFG; FRN	AK63-00247-0007
	BZL/SW W/OVERLAY ASSY: MFG; ITL	AK63-00247-0008
	BZL/SW W/OVERLAY ASSY: MFG; DUT	AK63-00247-0009
	BZL/SW W/OVERLAY ASSY: MFG; POR	AK63-00247-0010

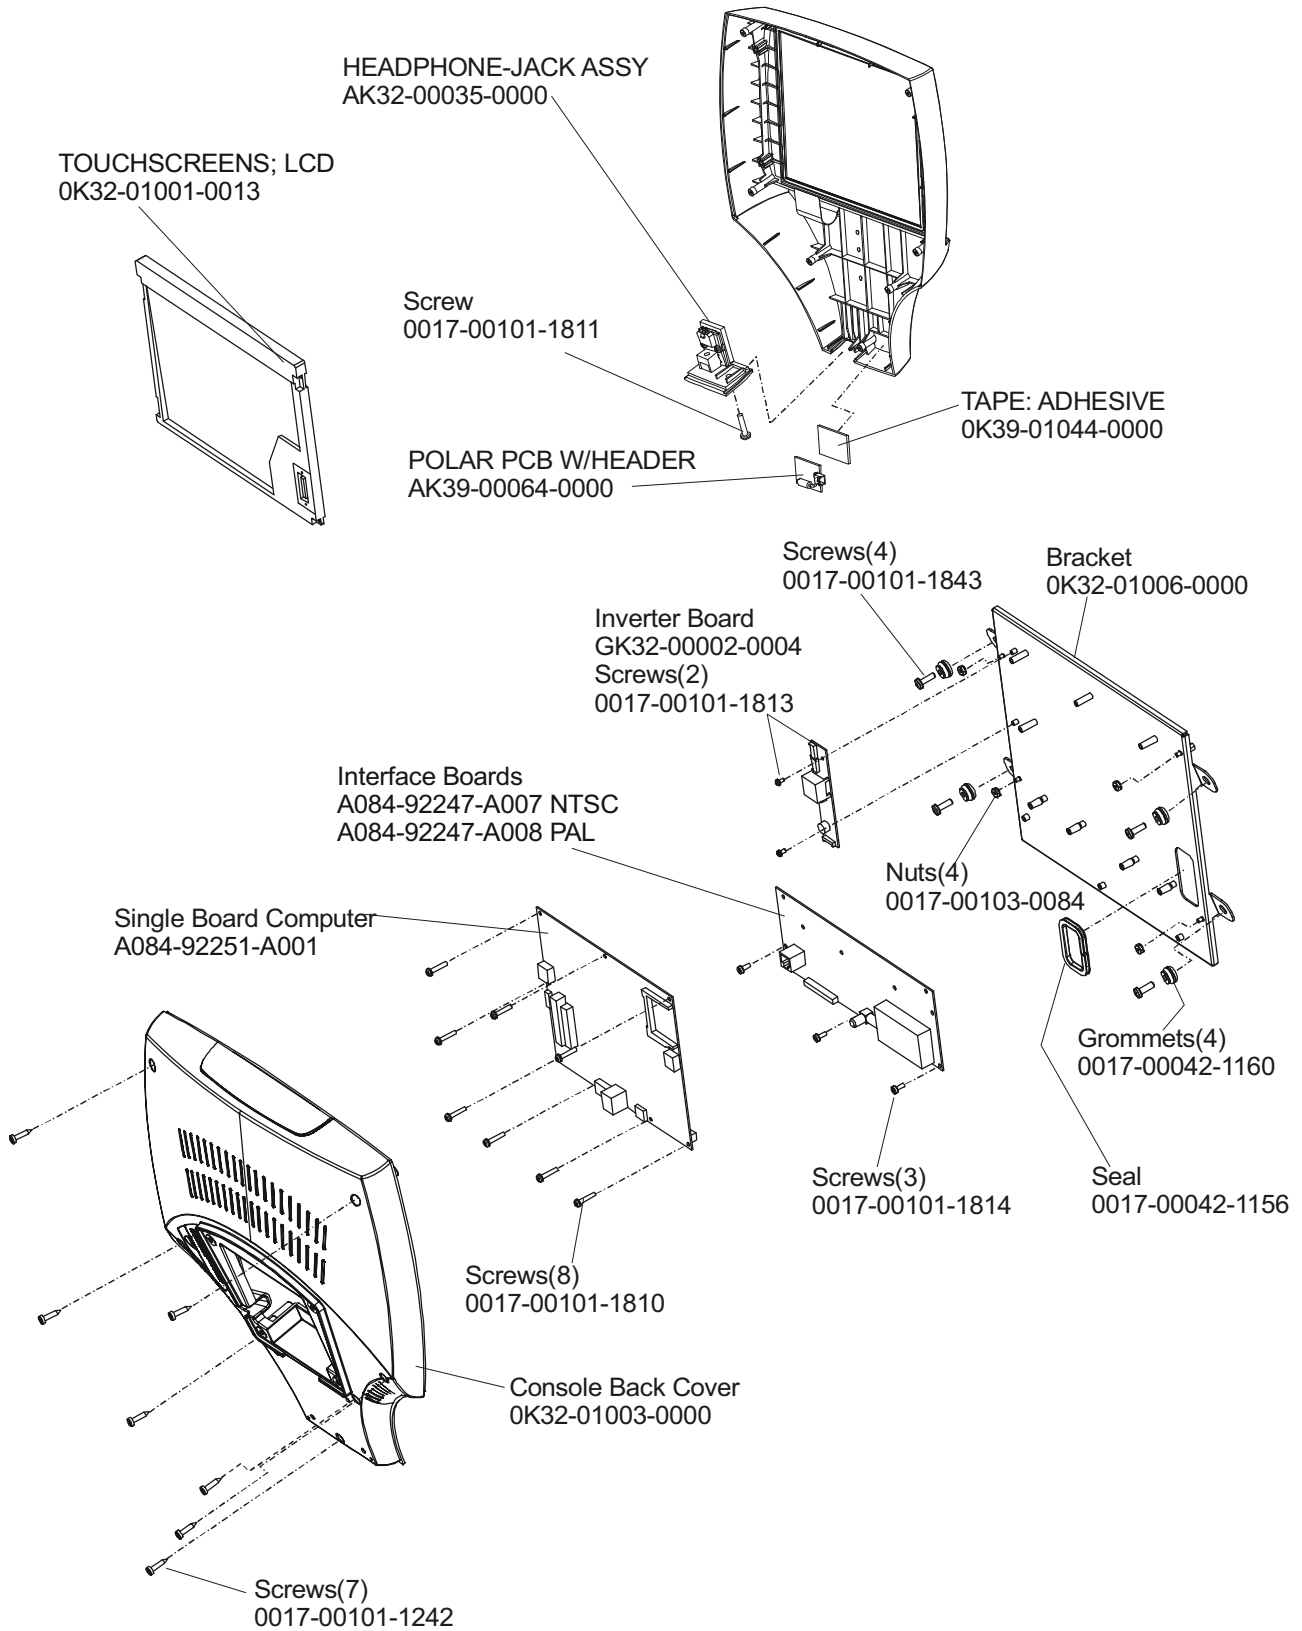 


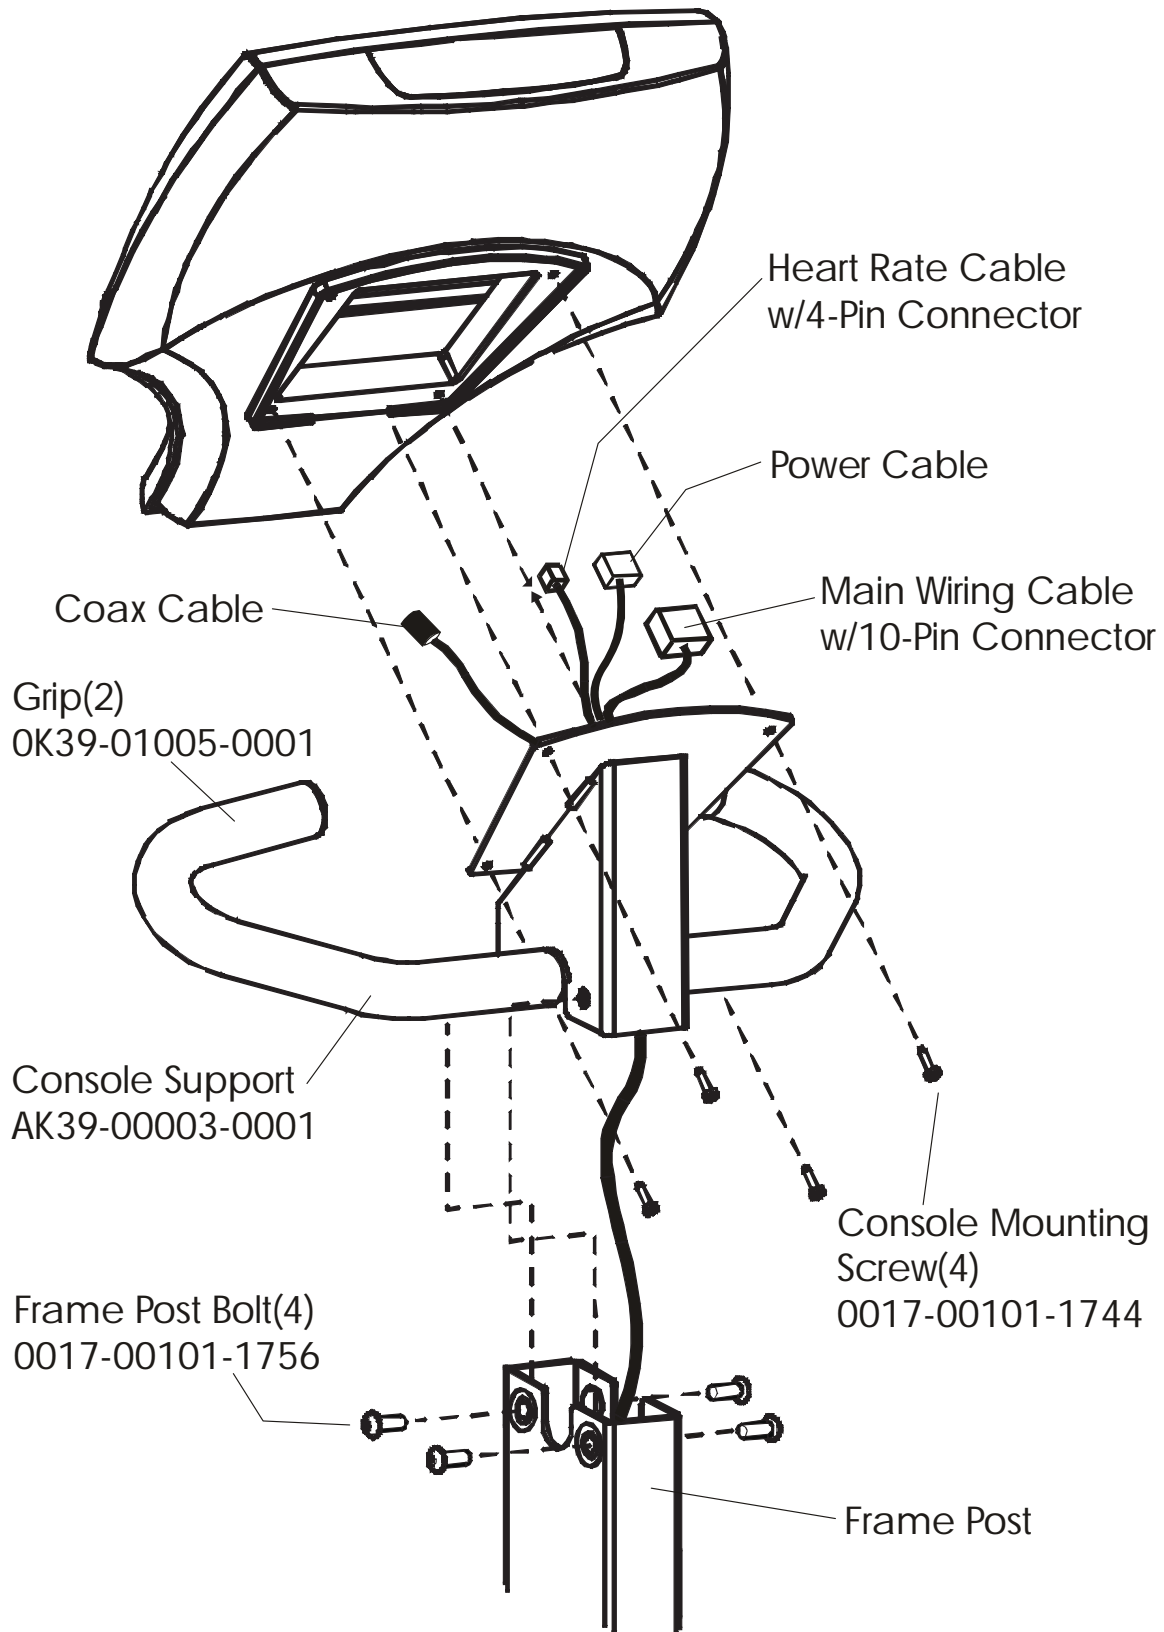 


Recumbent Bike  
Shrouds, End Cap, and Crank Arm

    
95RE-0XXX-01  
S/N LRE100000 and up

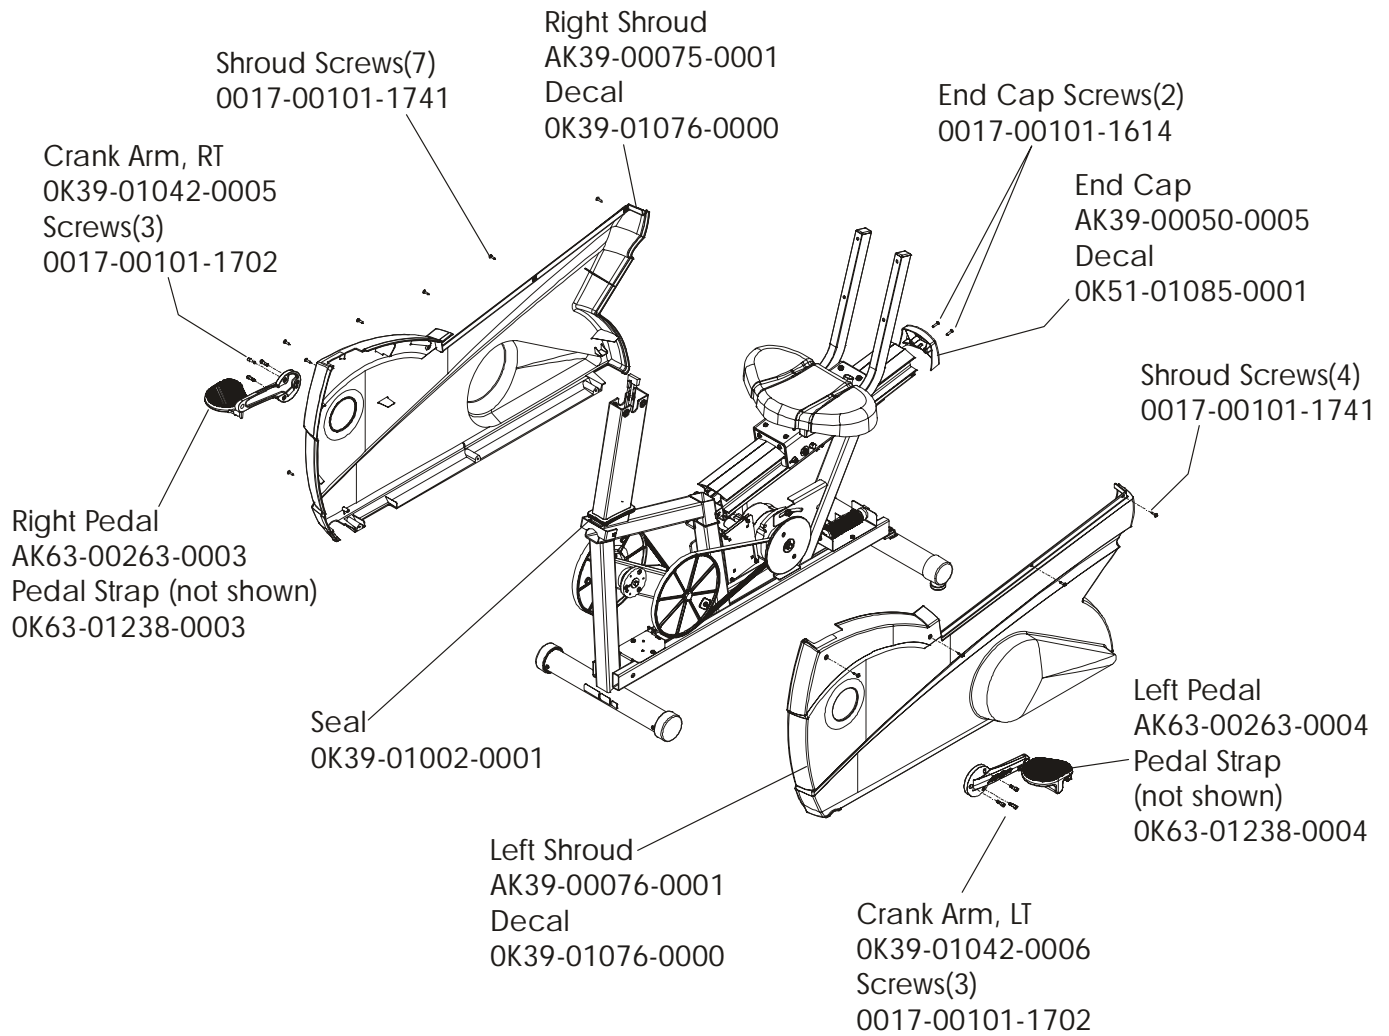

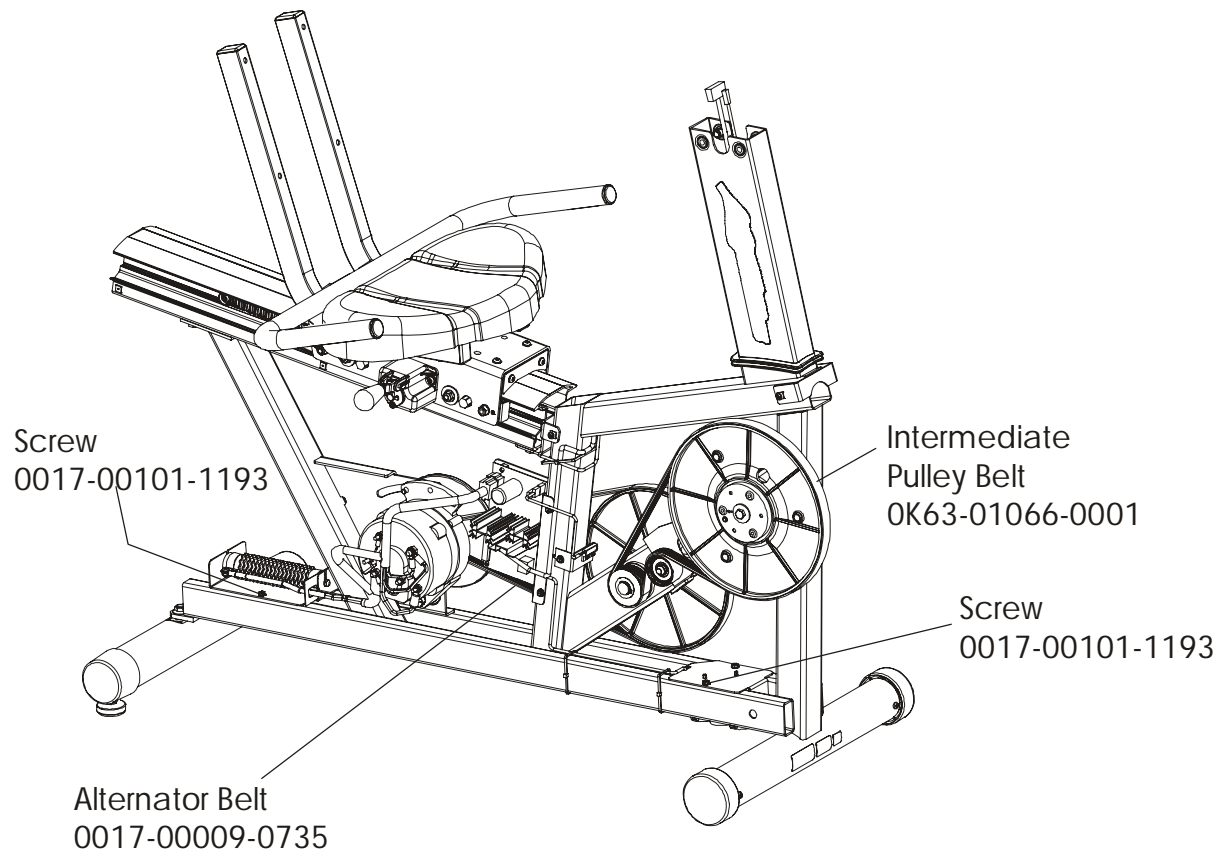



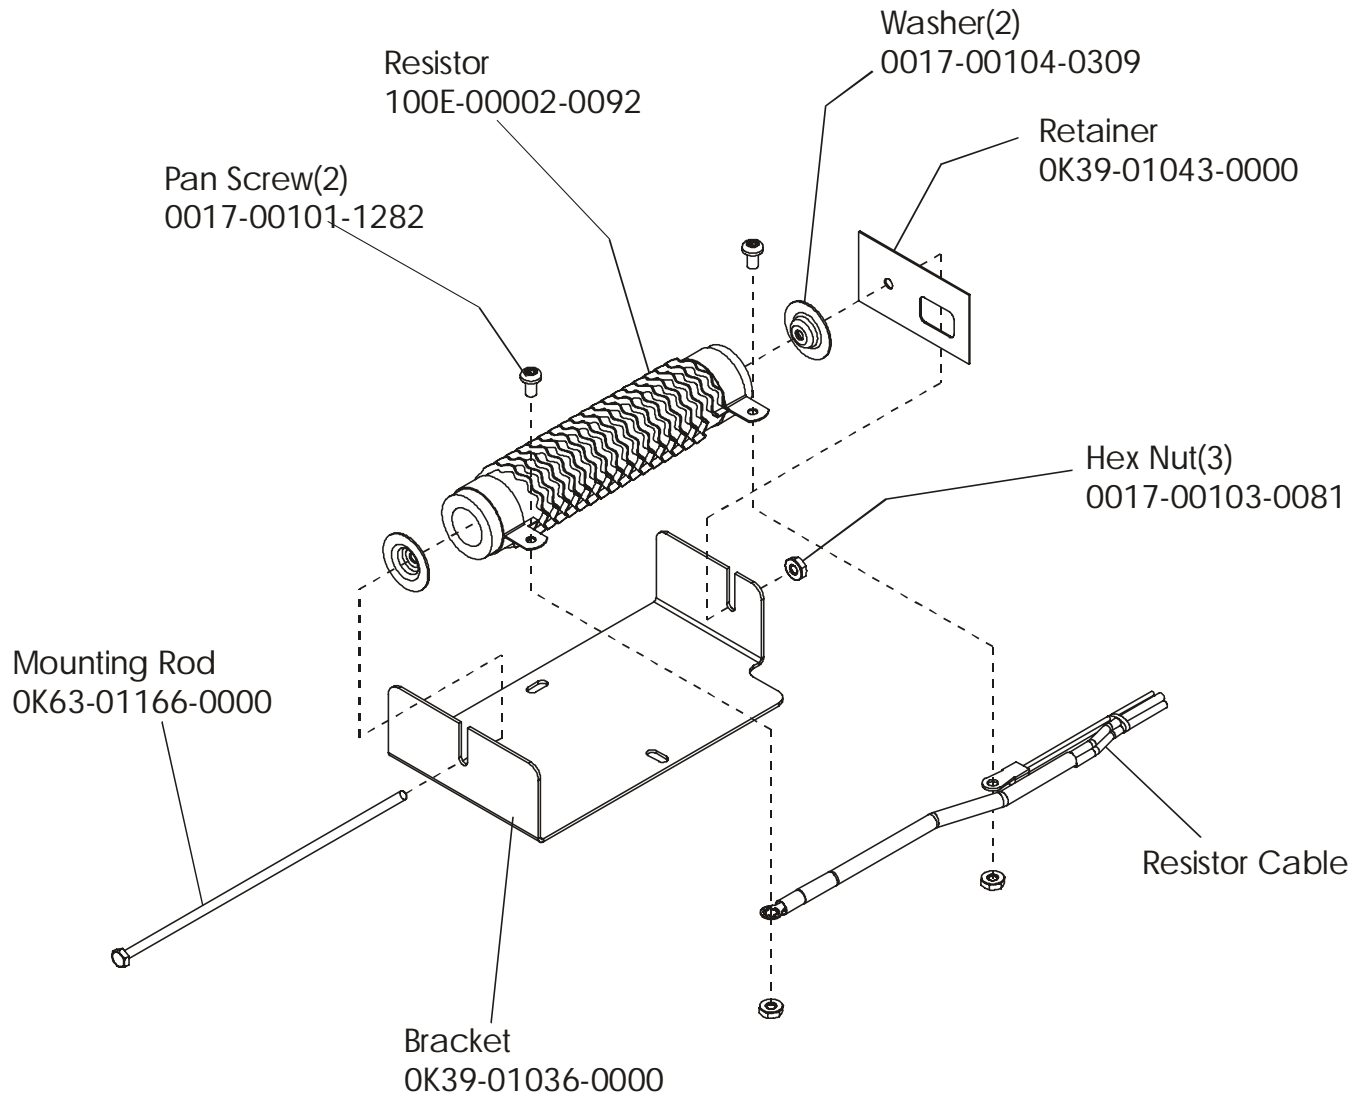

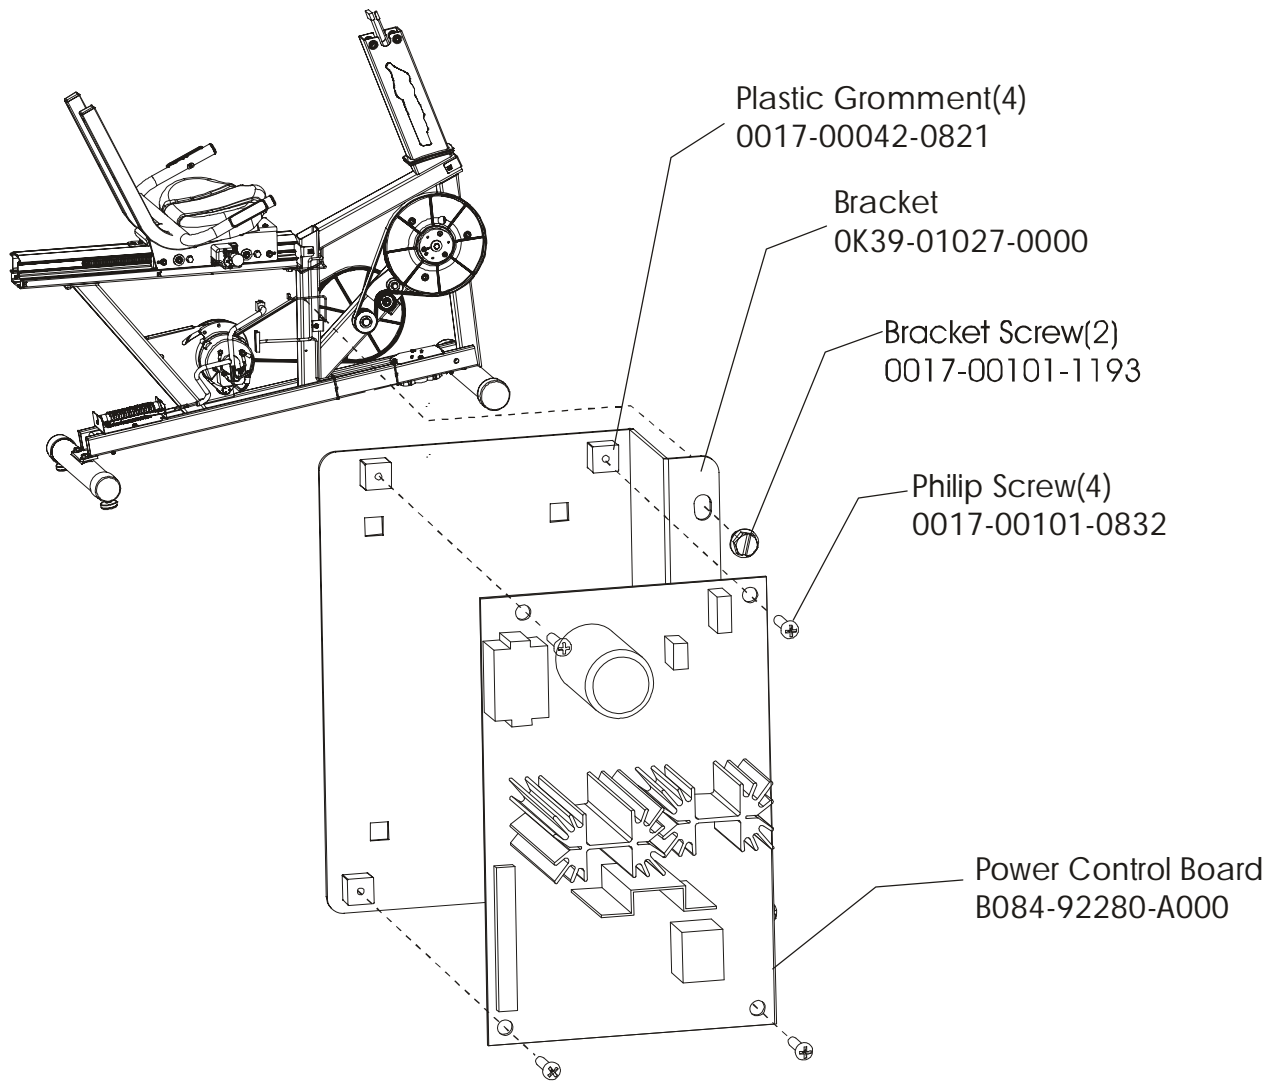

Alternator Assembly  
AK63-00093-0000

Alternator Pulley  
OK61-02500-0001

 
Alternator  
0017-00009-0841

 
Brushes  
0017-00009-0859

 
Locking Nut  
0017-00103-0117

Washer  
0017-00104-0044


Bolt  
0017-00101-0956

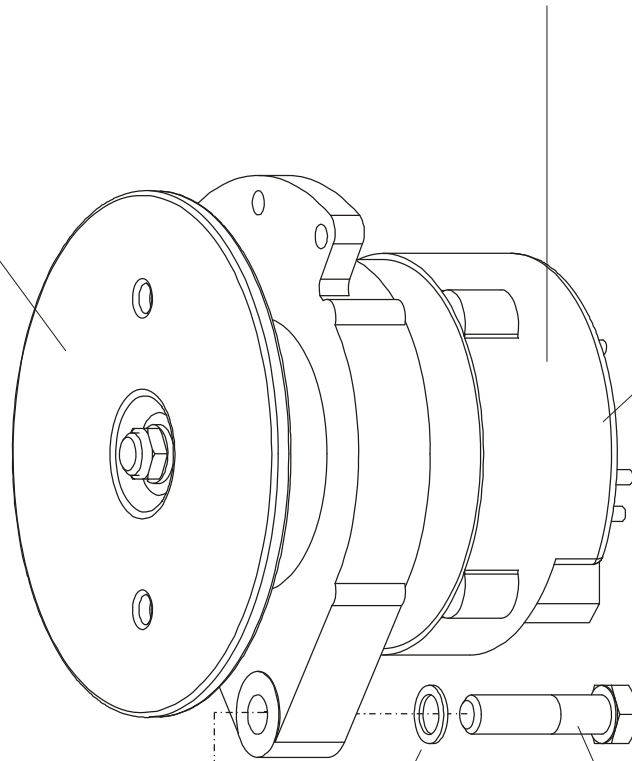


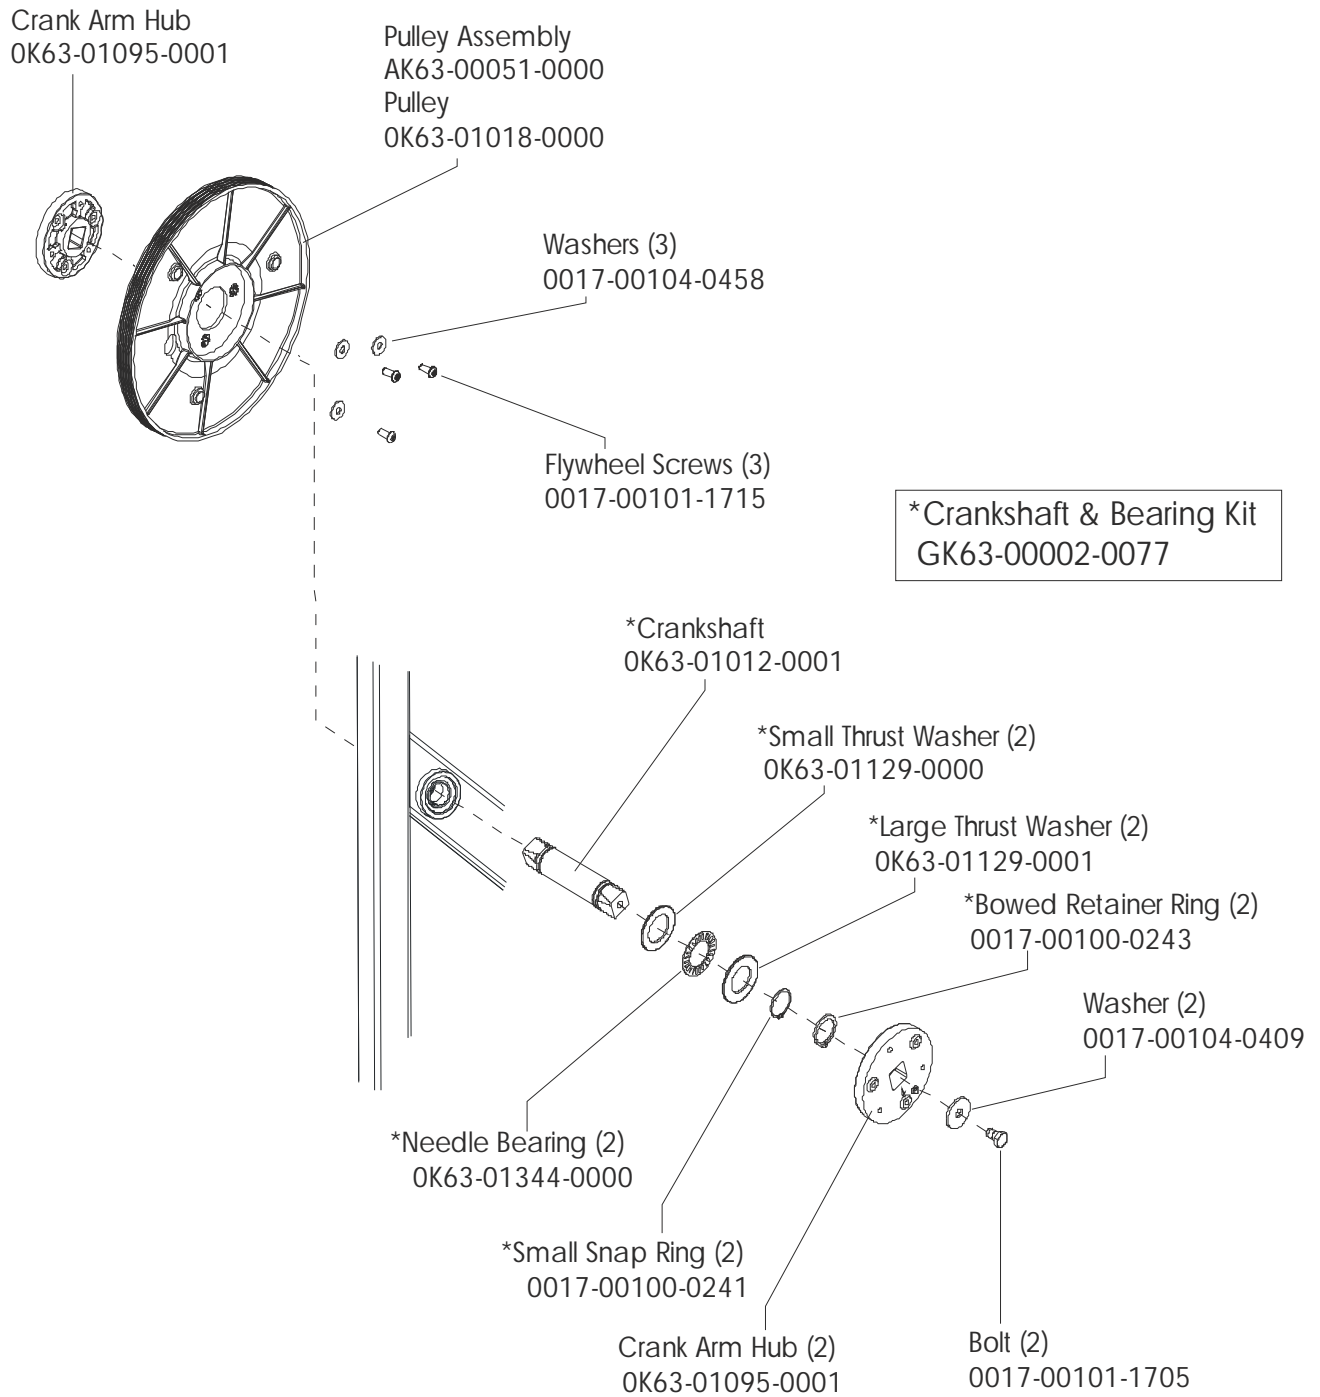


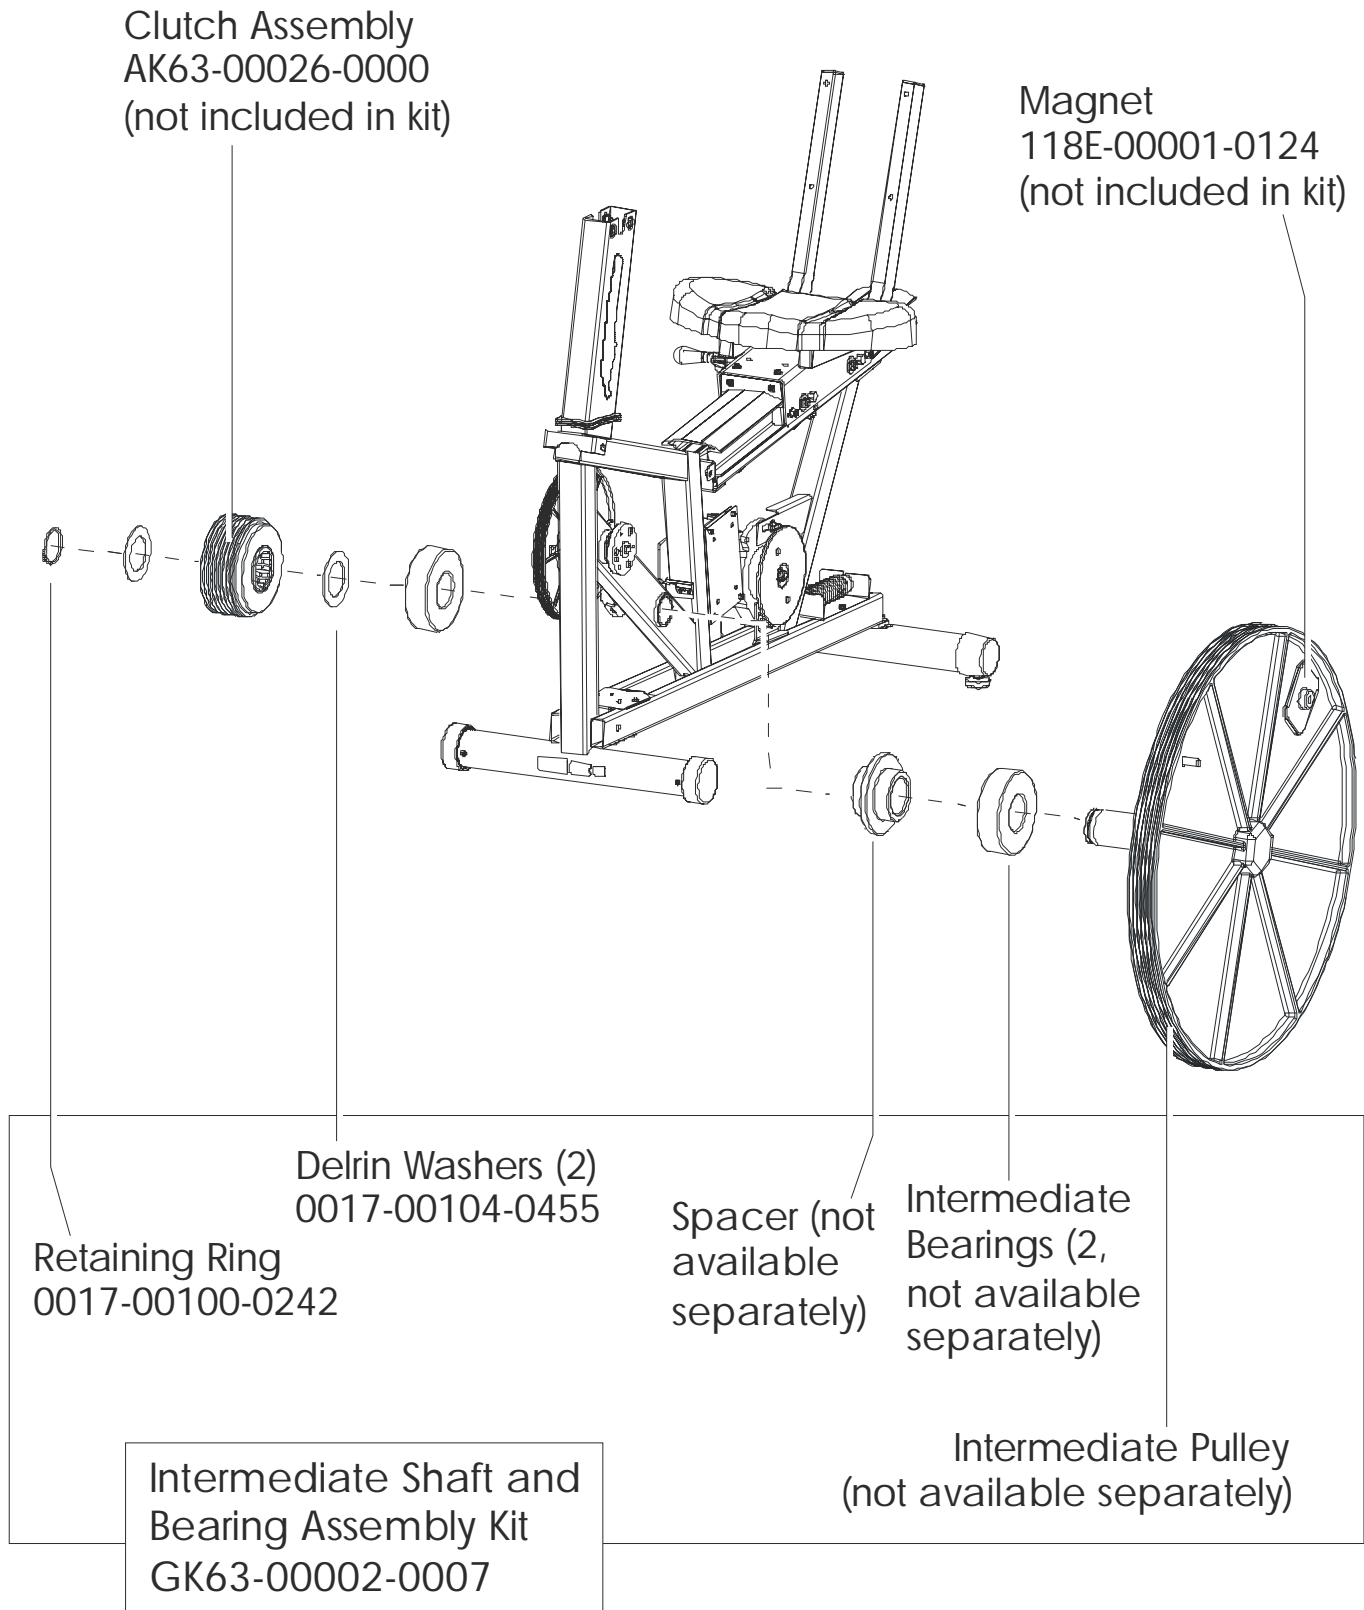

    
Idler Bracket Assembly  
AK63-00021-0000

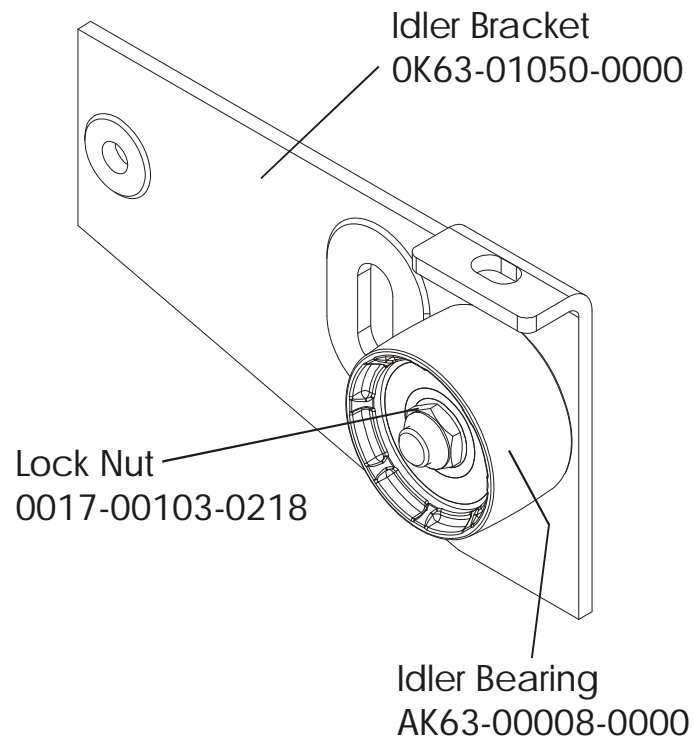 


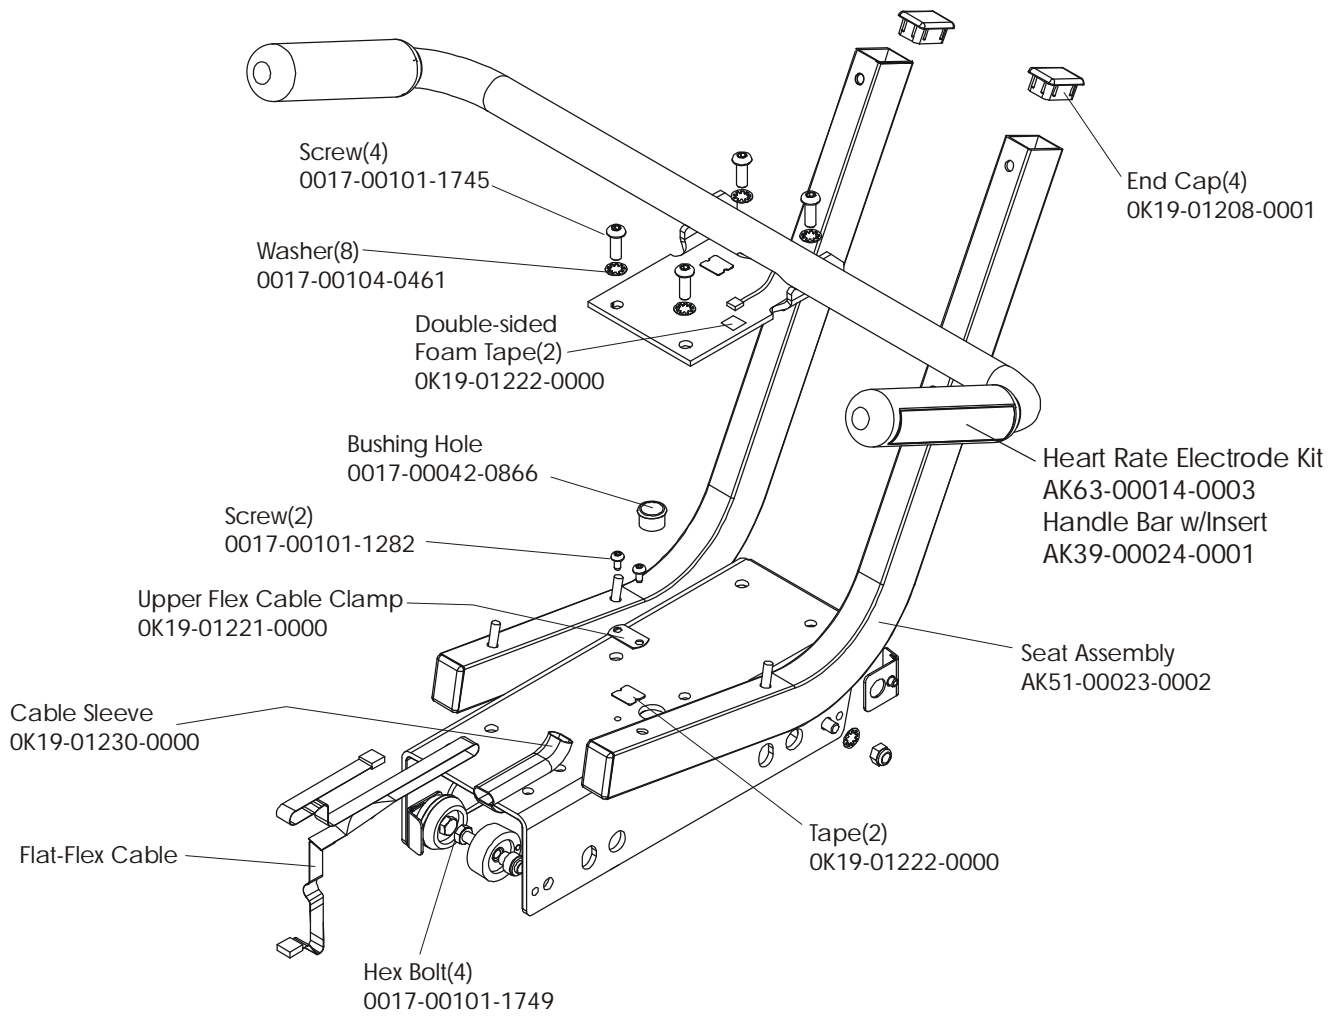

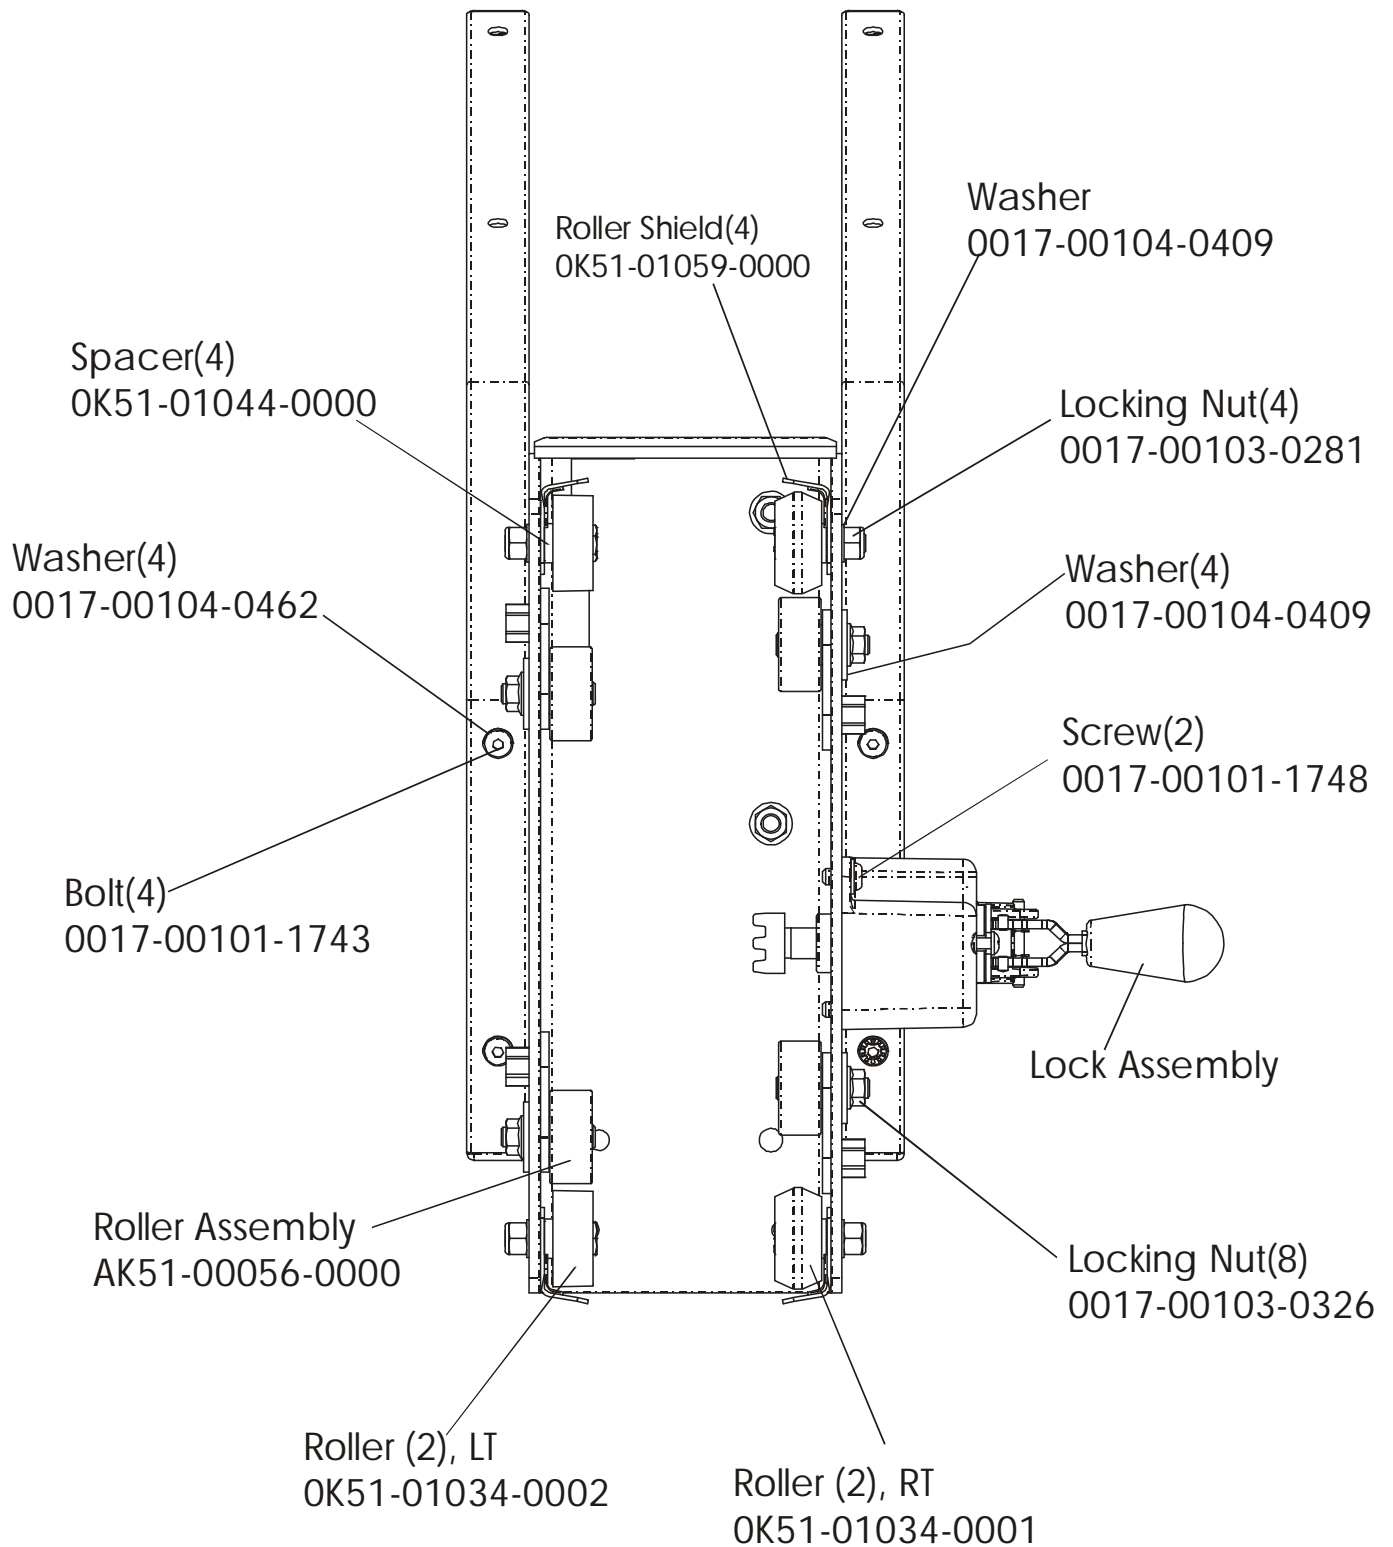




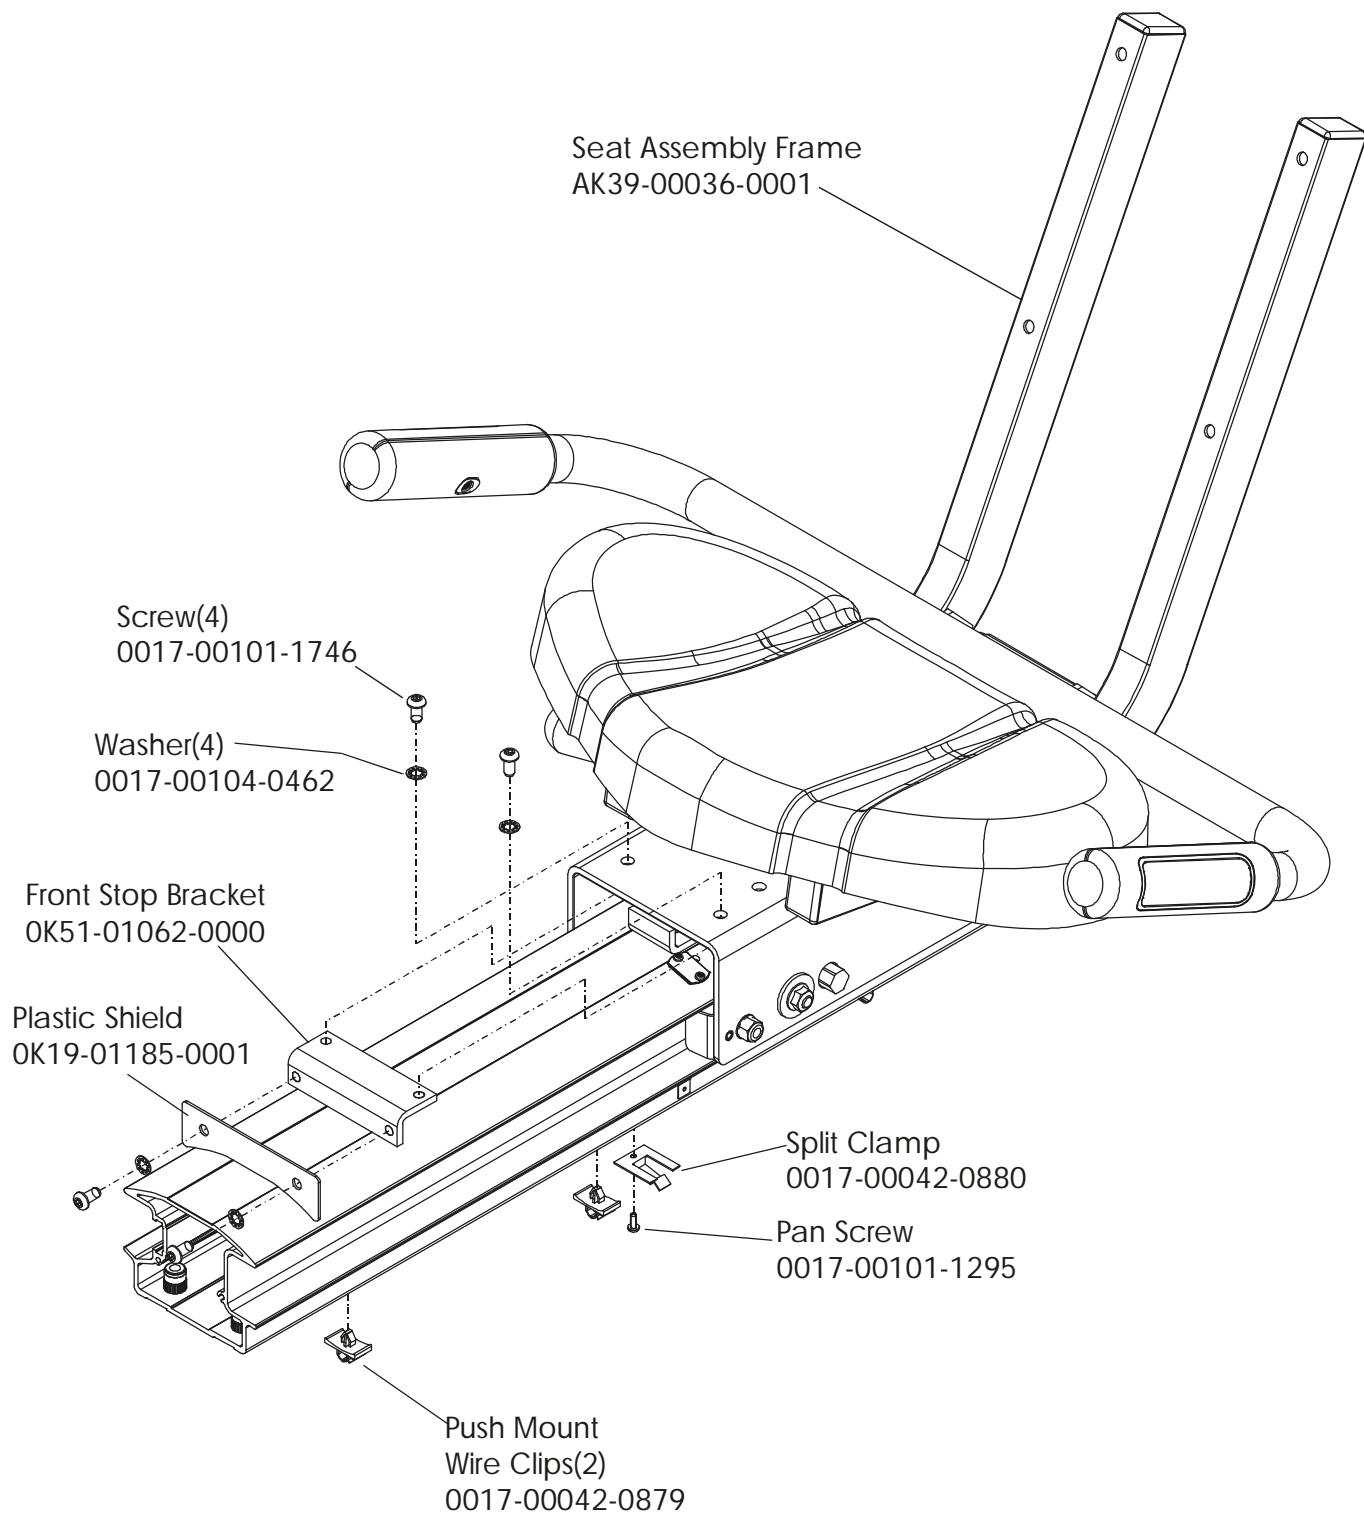

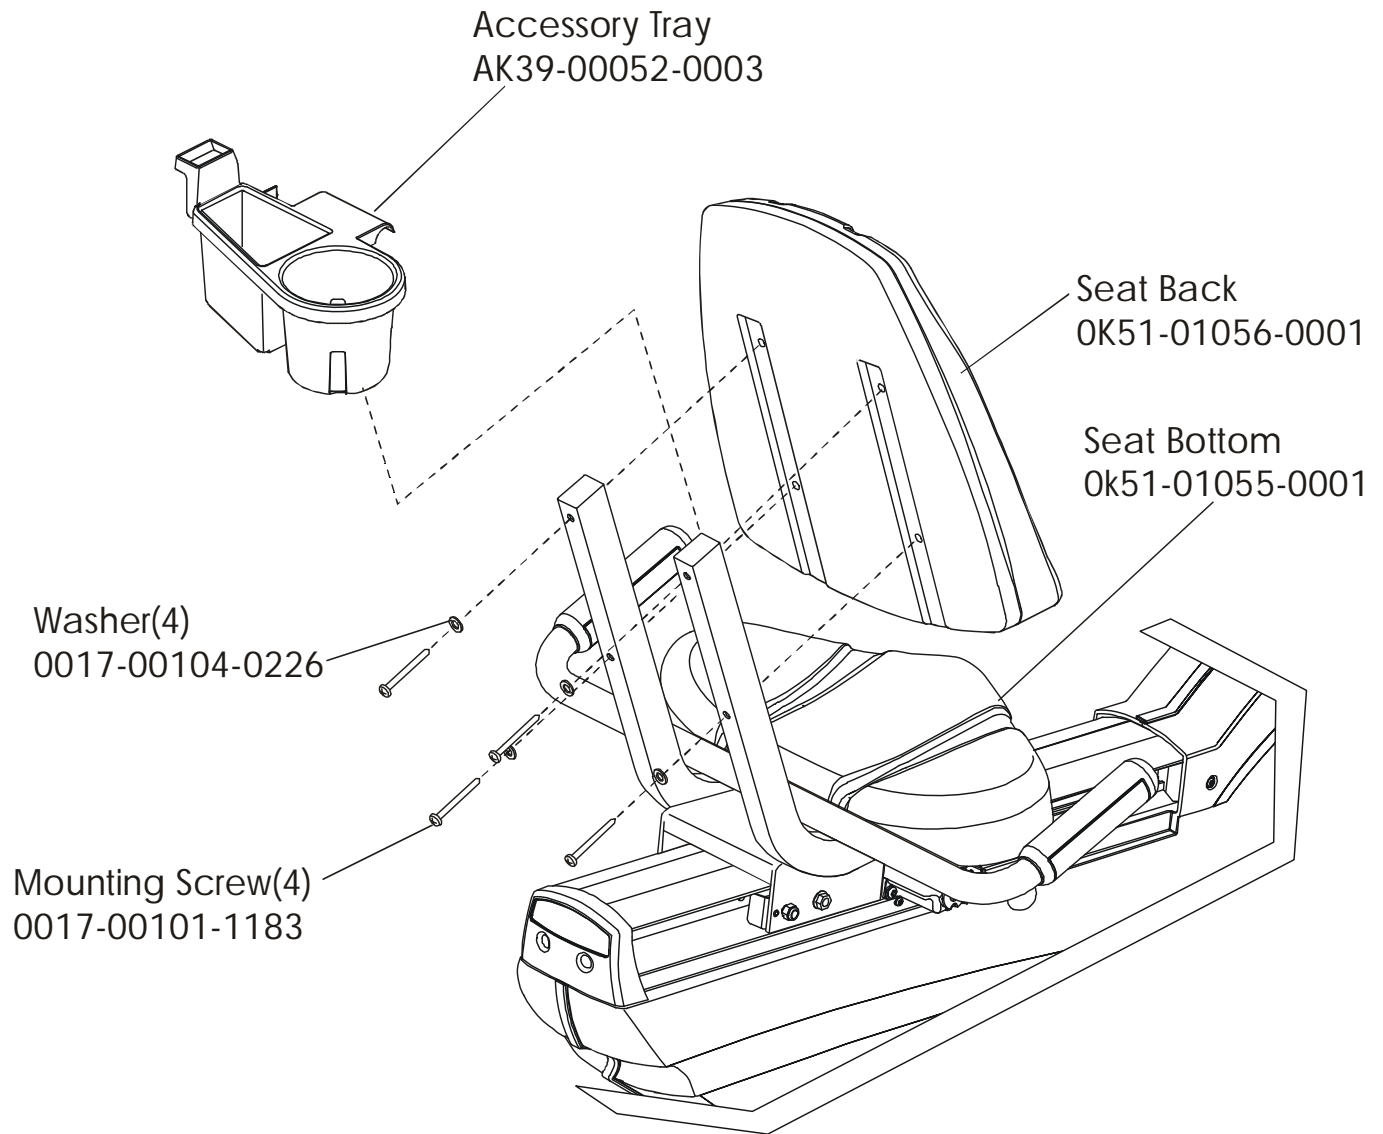

Extrusion Assembly  
AK39-00027-0006

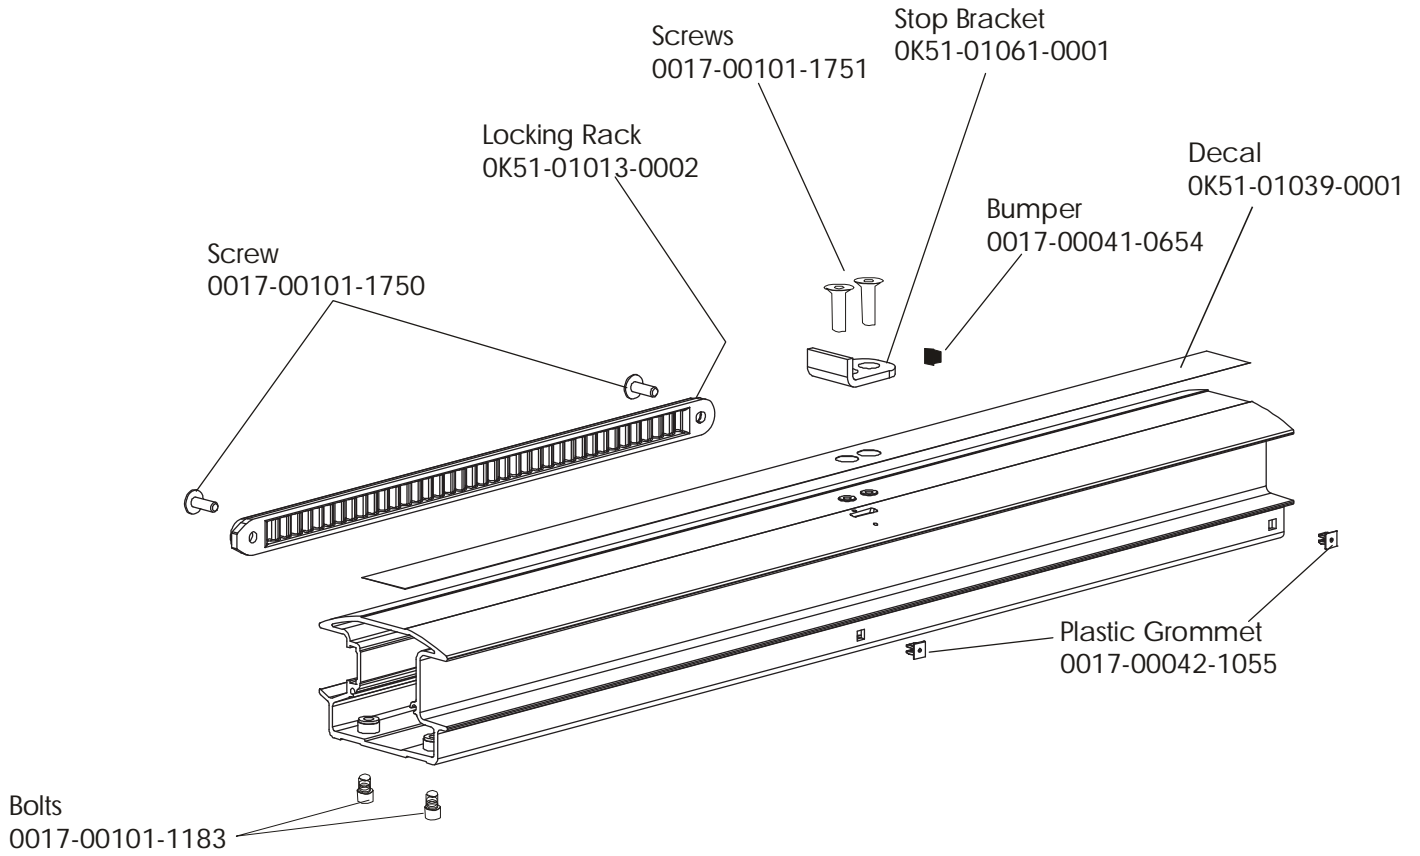 

Locking Assembly  
AK51-00053-0001

