




Example of a starting Serial Number UT406021000001			
UT4	06	0210	000001
Model #	Plant #	Year/month	Starting Serial Number

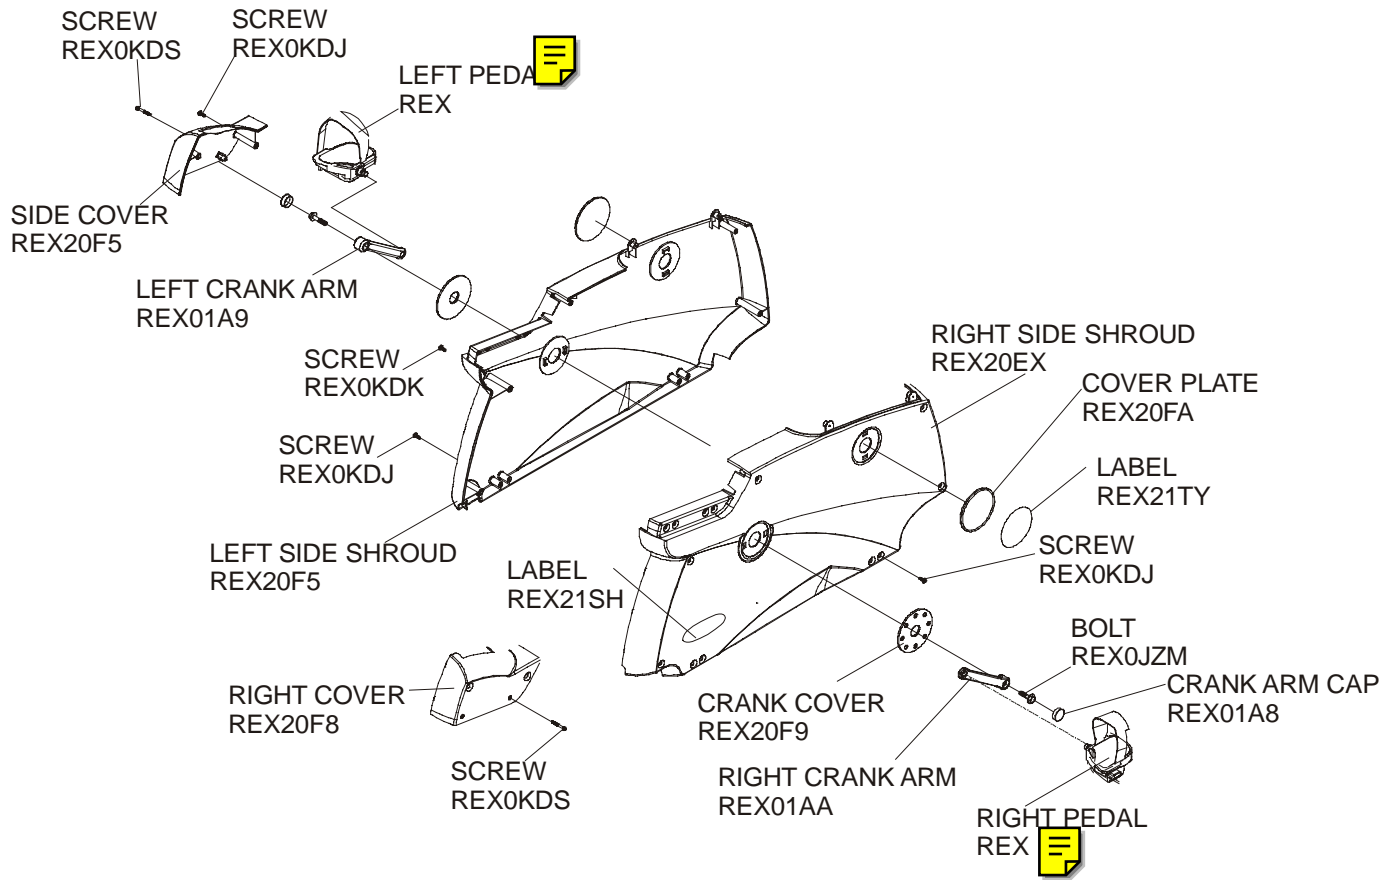

### CONSOLE ASEMBLY (ENG/ENG) REX22D8

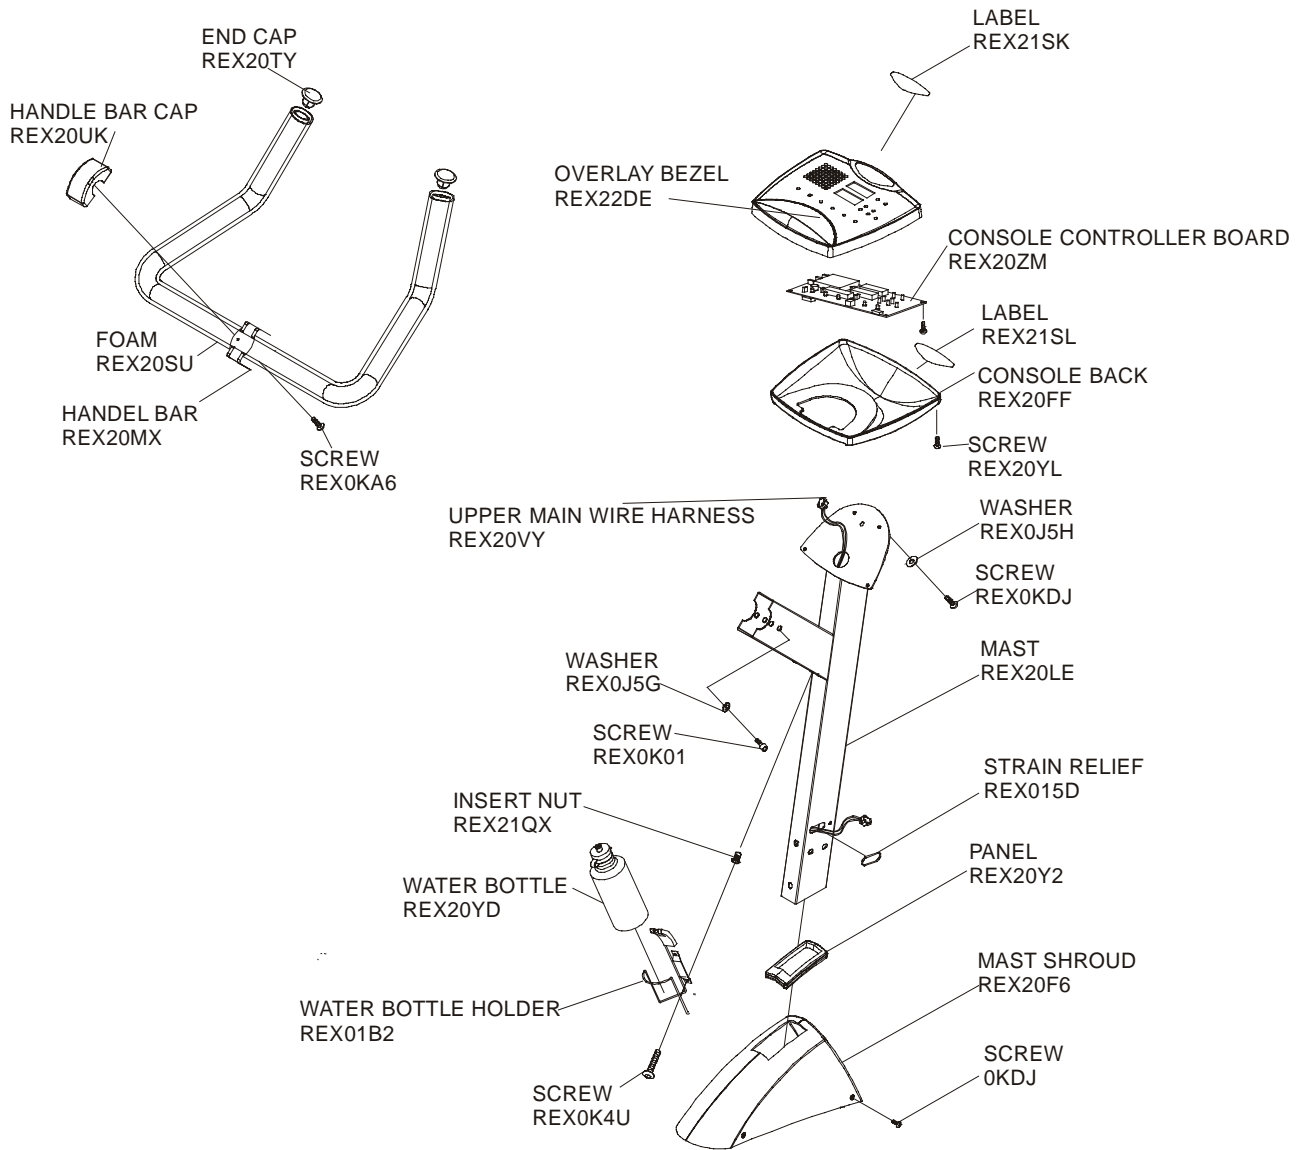

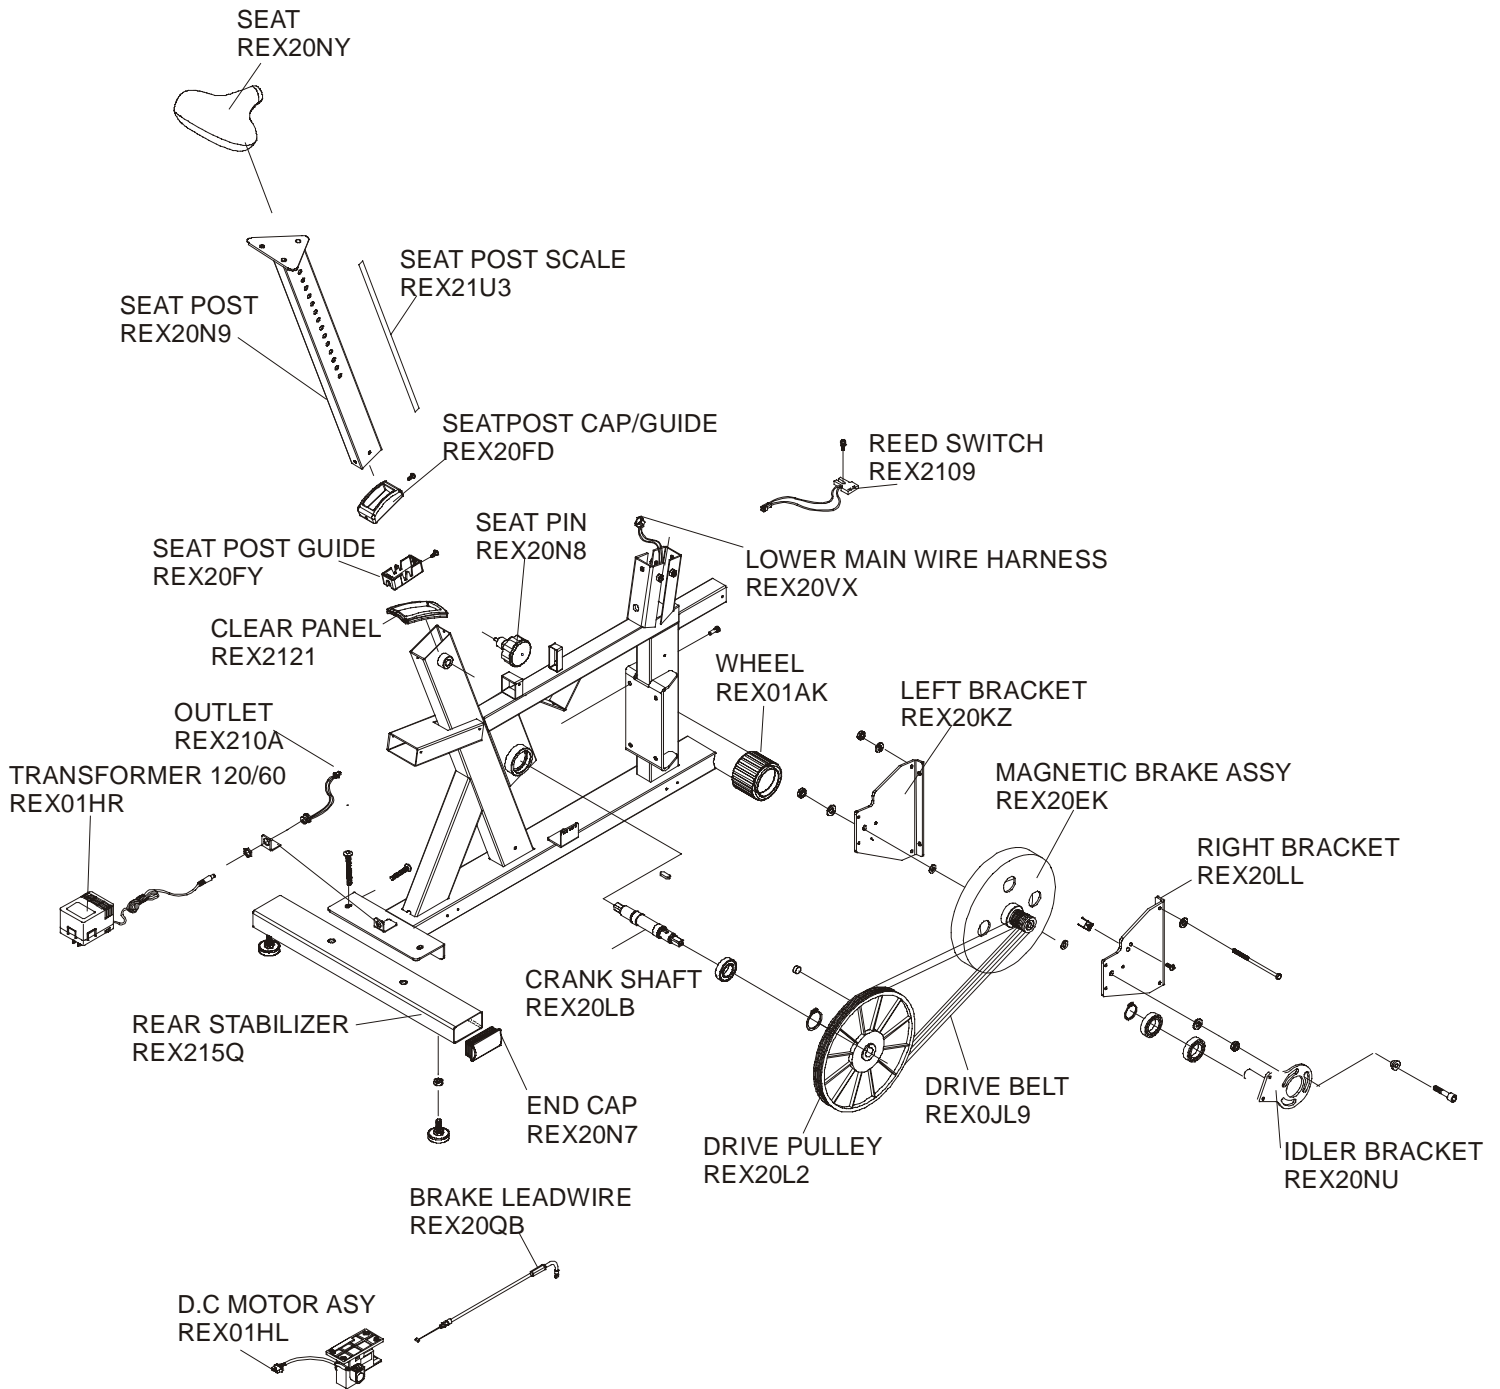

Transformer 120/60.....REX01HR

Transformer 220V UK.....REX22EX

Transformer 220V Continental.....REX22H1

Transformer 240V Aust.....REX01HS

