 
 



END OF LIFE

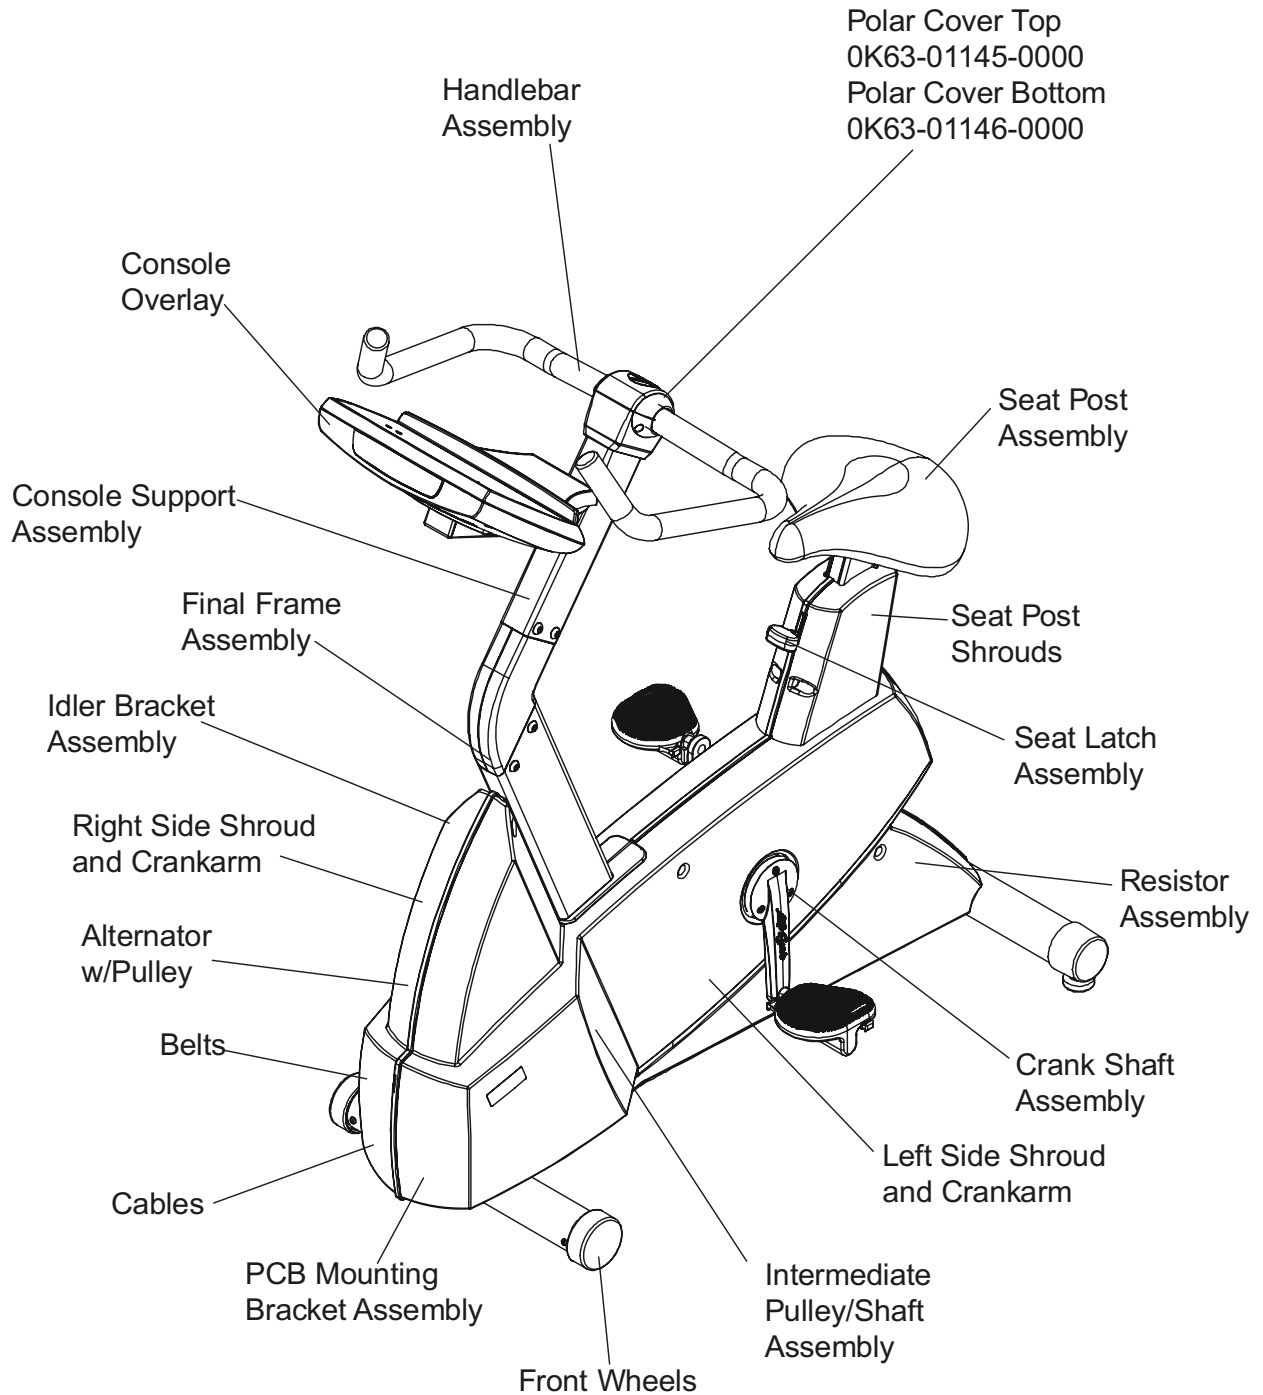



Operator Manual
M051-001163-B008

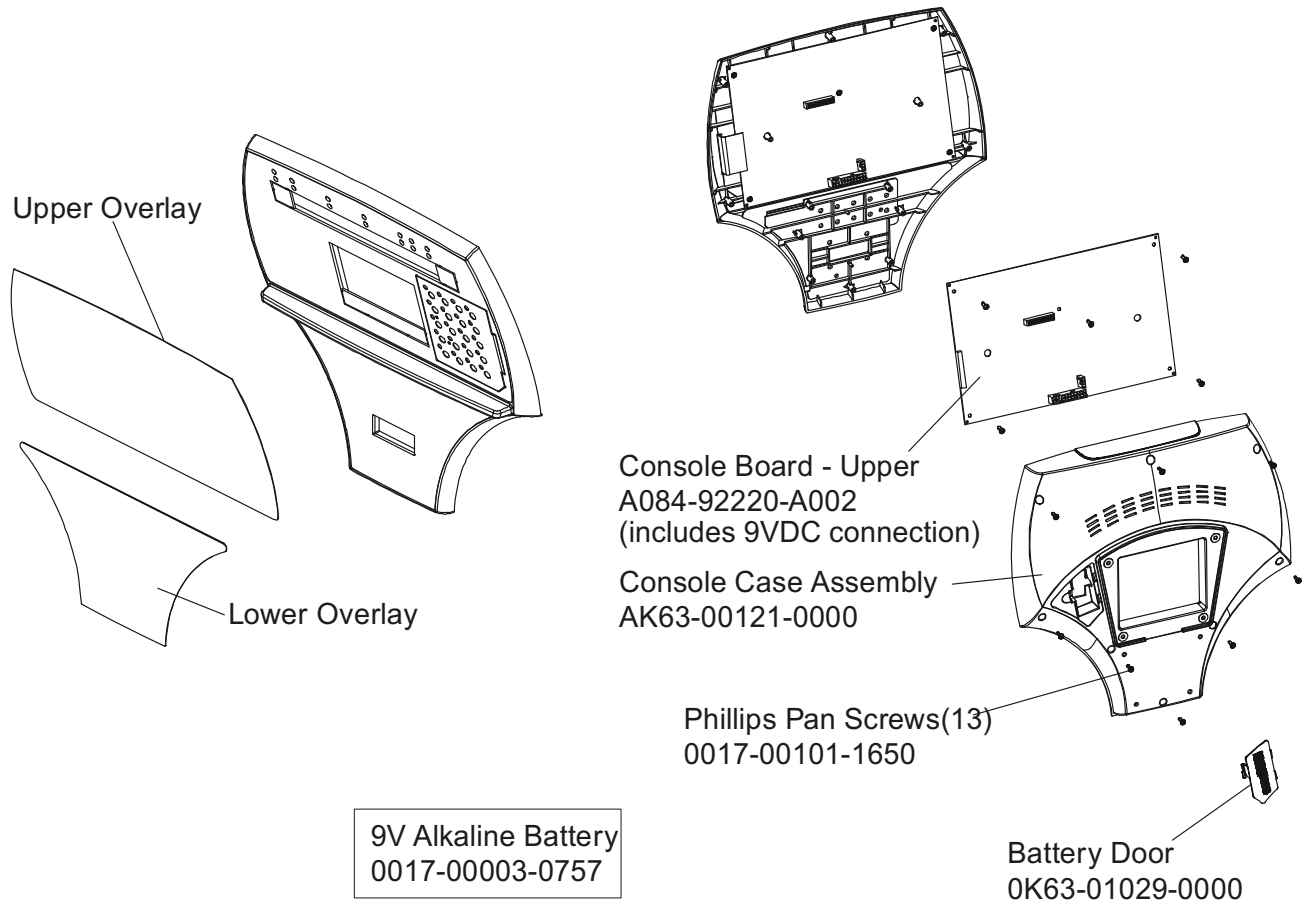



Console Assembly	Overlay Bezel
AK63-00072-0001 Eng Met	AK63-00080-0001 Eng Met
AK63-00072-0003 Ger Met	AK63-00080-0003 Ger Met
AK63-00072-0004 Spn Met	AK63-00080-0004 Spn Met
AK63-00072-0006 Jap Met	AK63-00080-0006 Jap Met
AK63-00072-0007 Frn Met	AK63-00080-0007 Frn Met
AK63-00072-0008 Itl Met	AK63-00080-0008 Itl Met
AK63-00072-0009 Itl Met	AK63-00080-0009 Itl Met
AK63-00072-0010 Por Met	AK63-00080-0010 Por Met

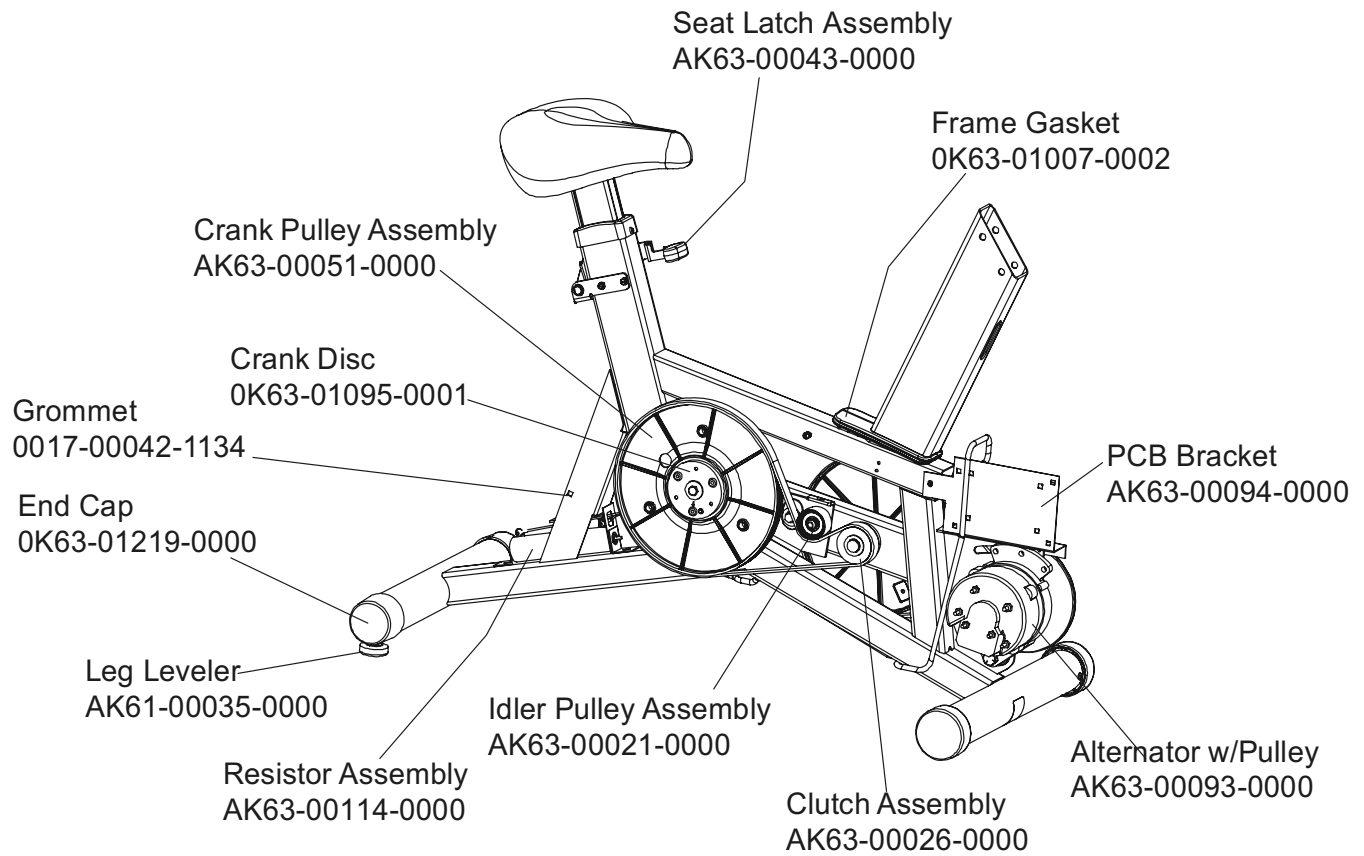 



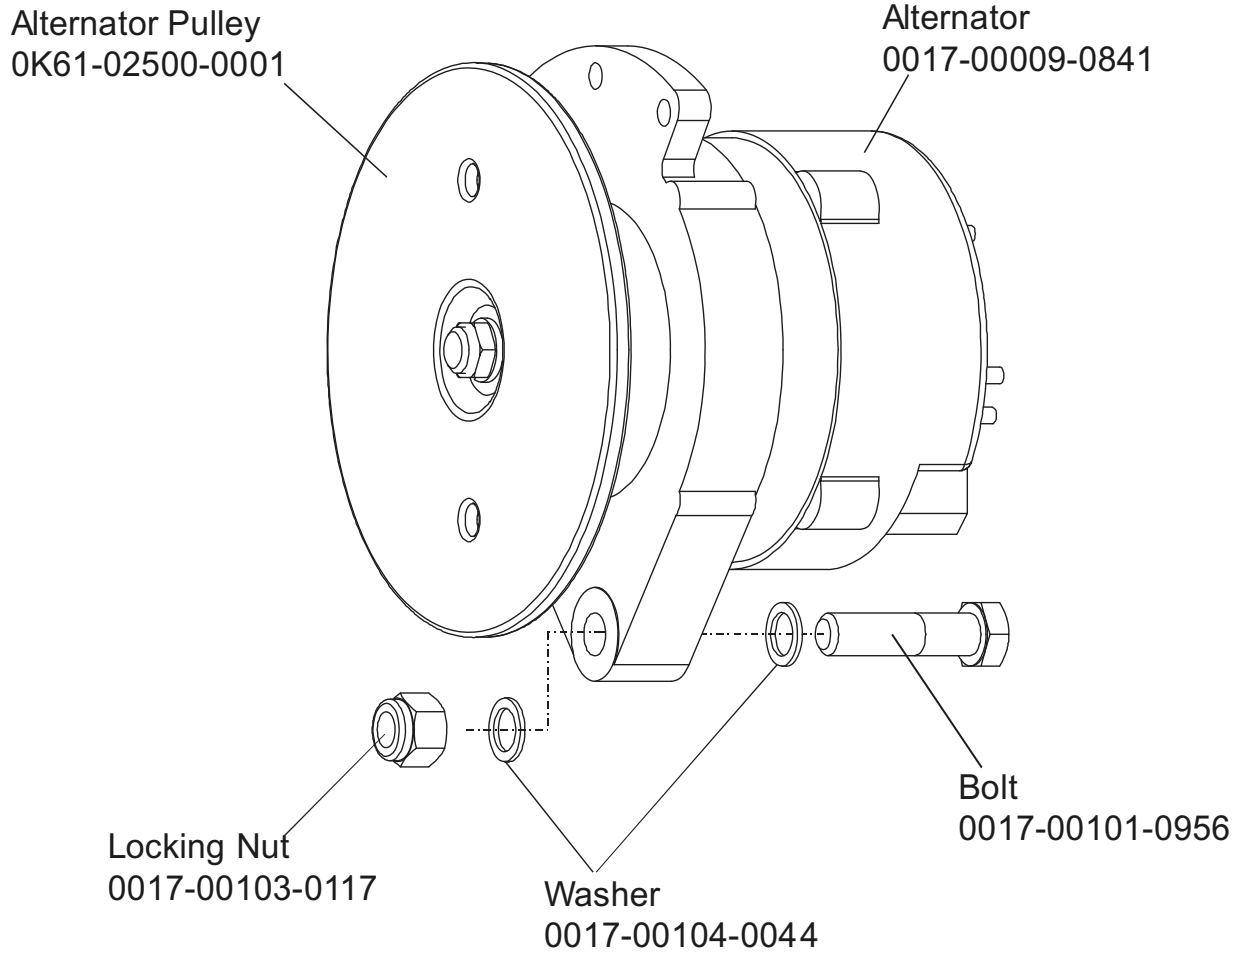 


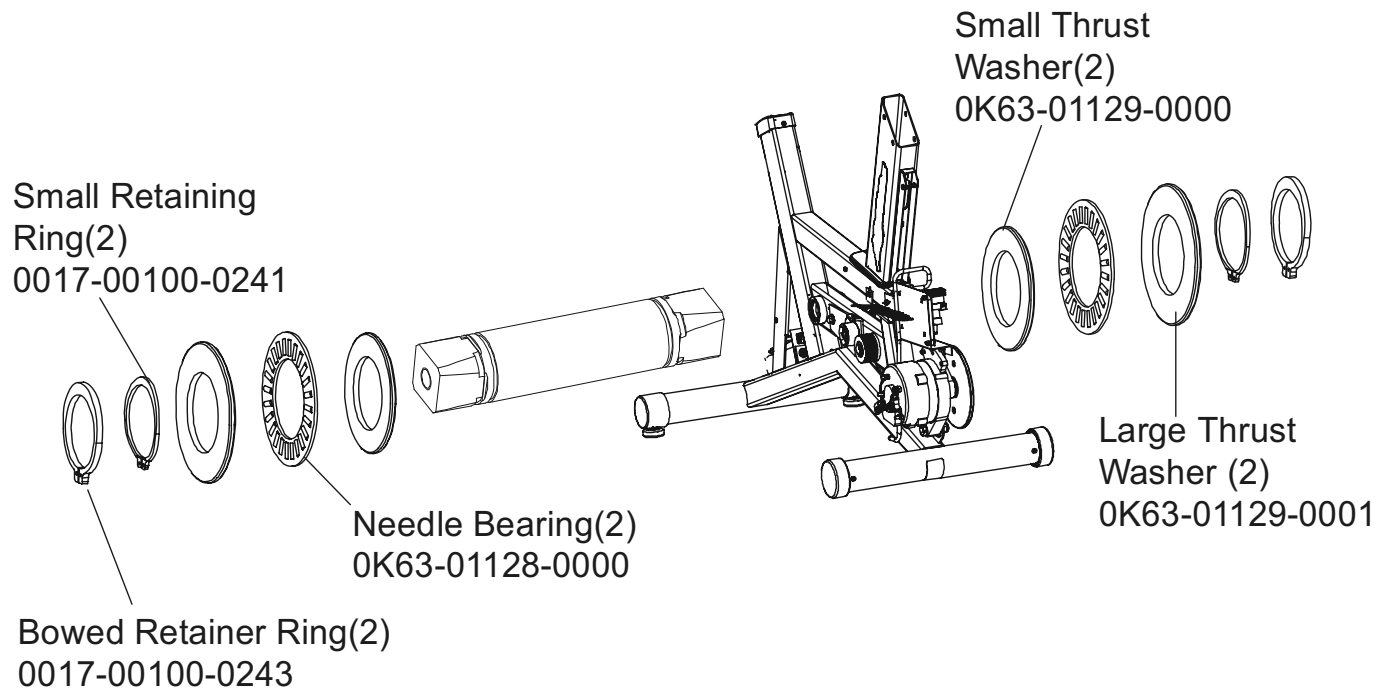 


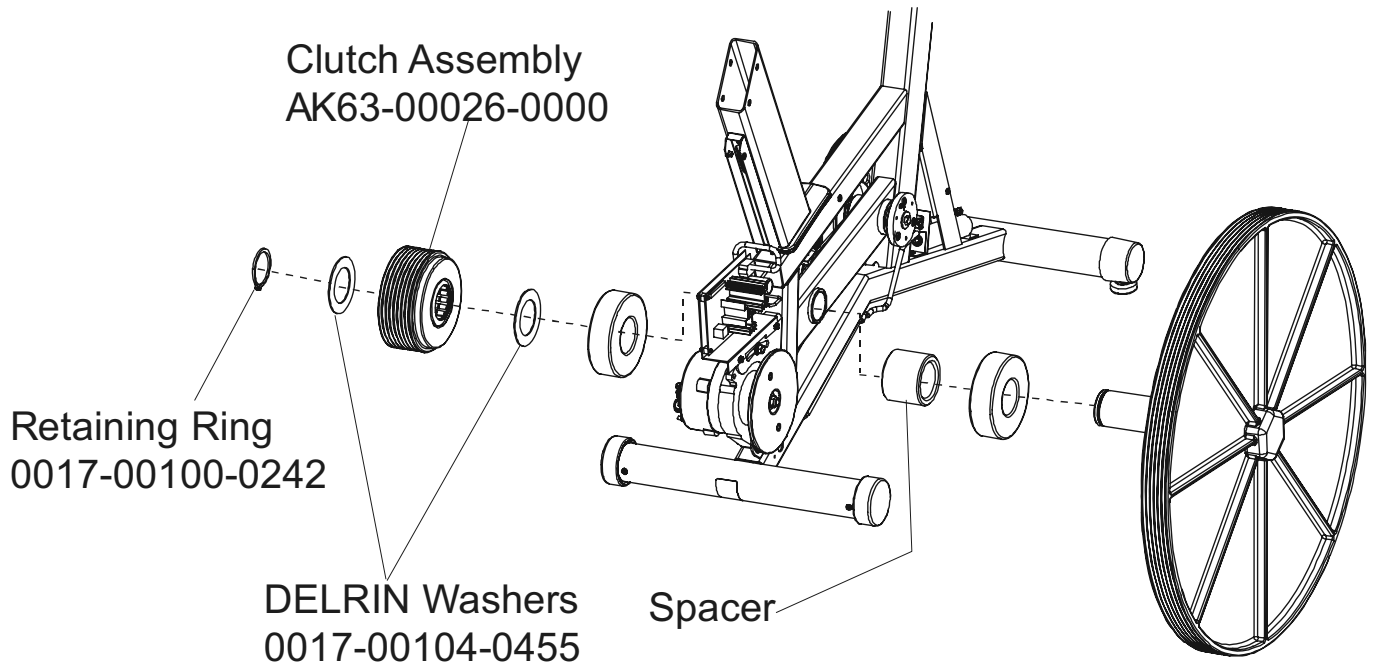 


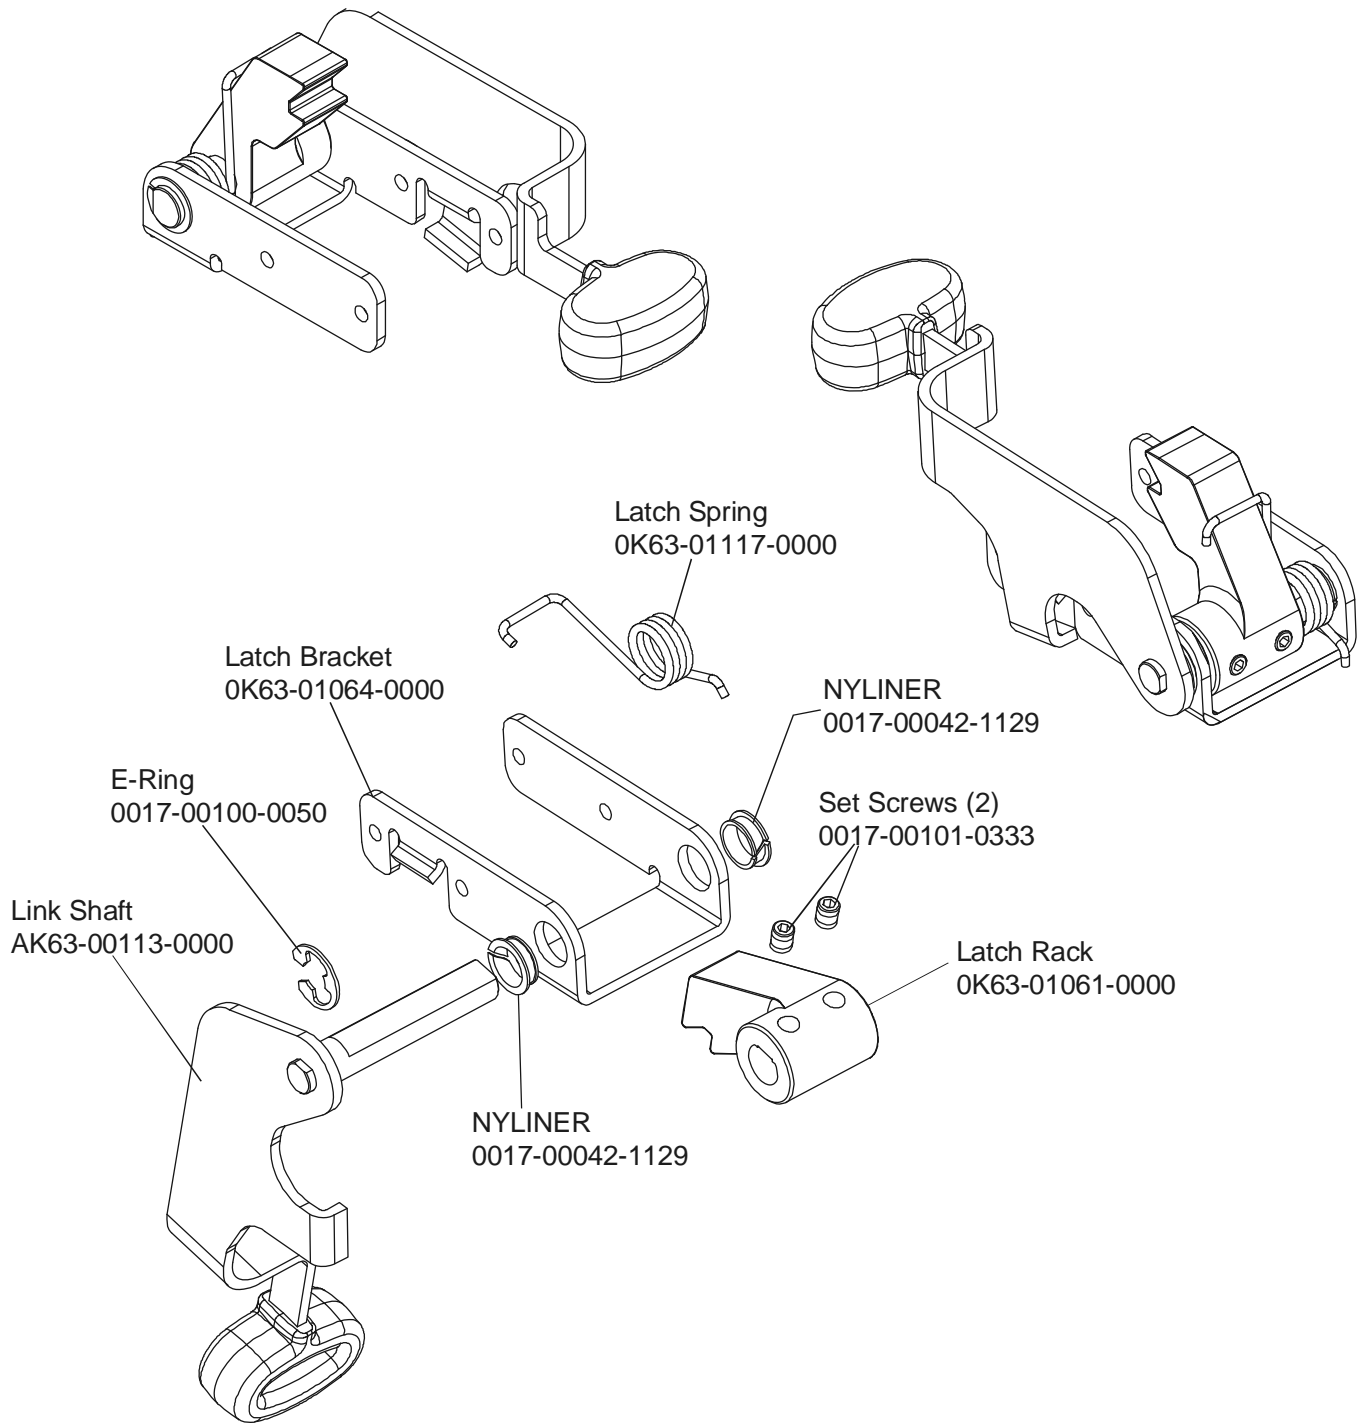      

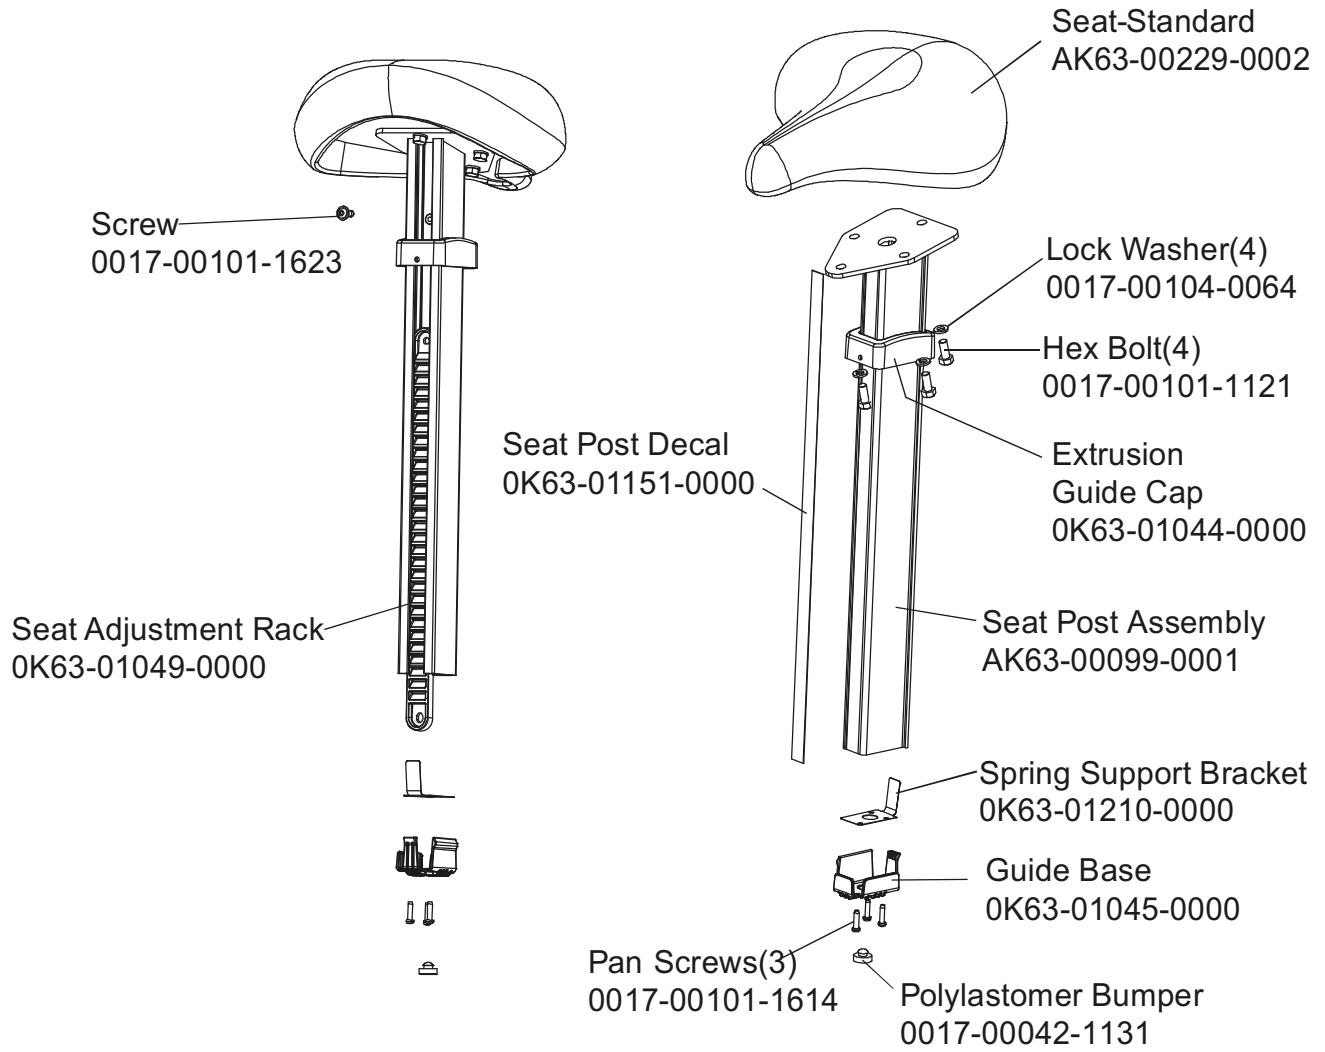

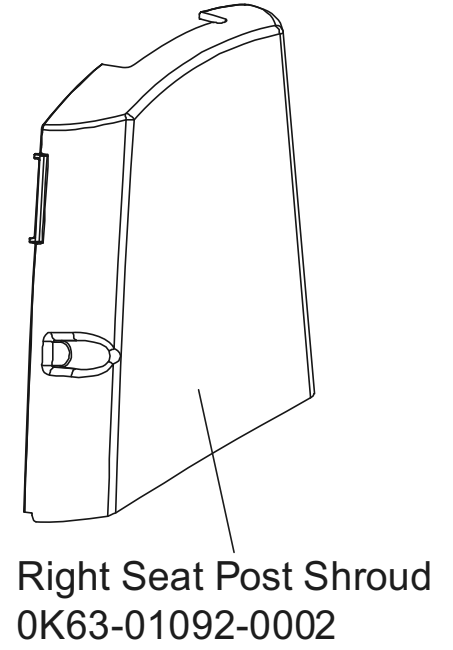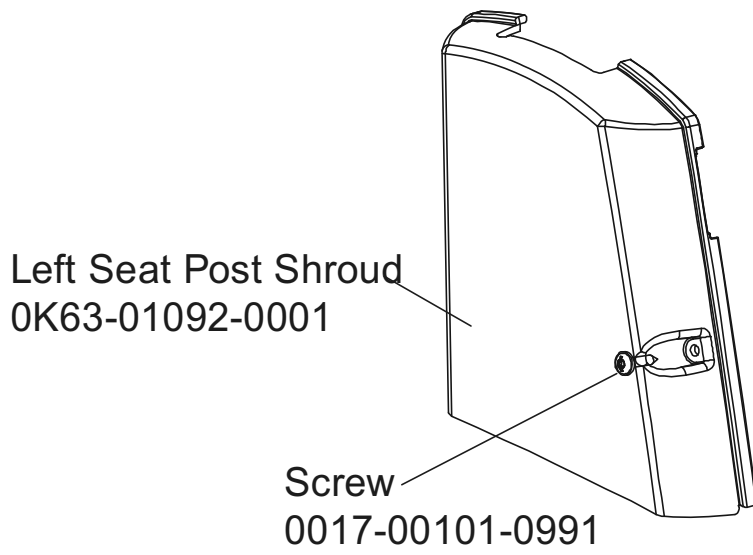

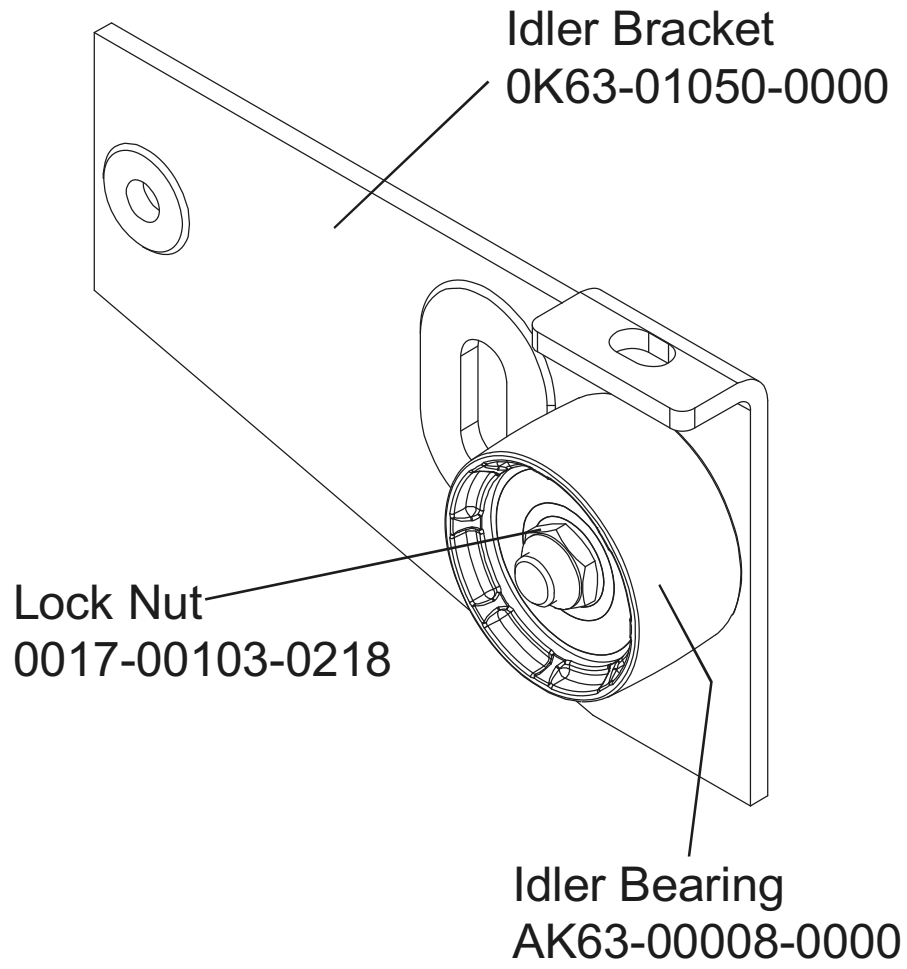

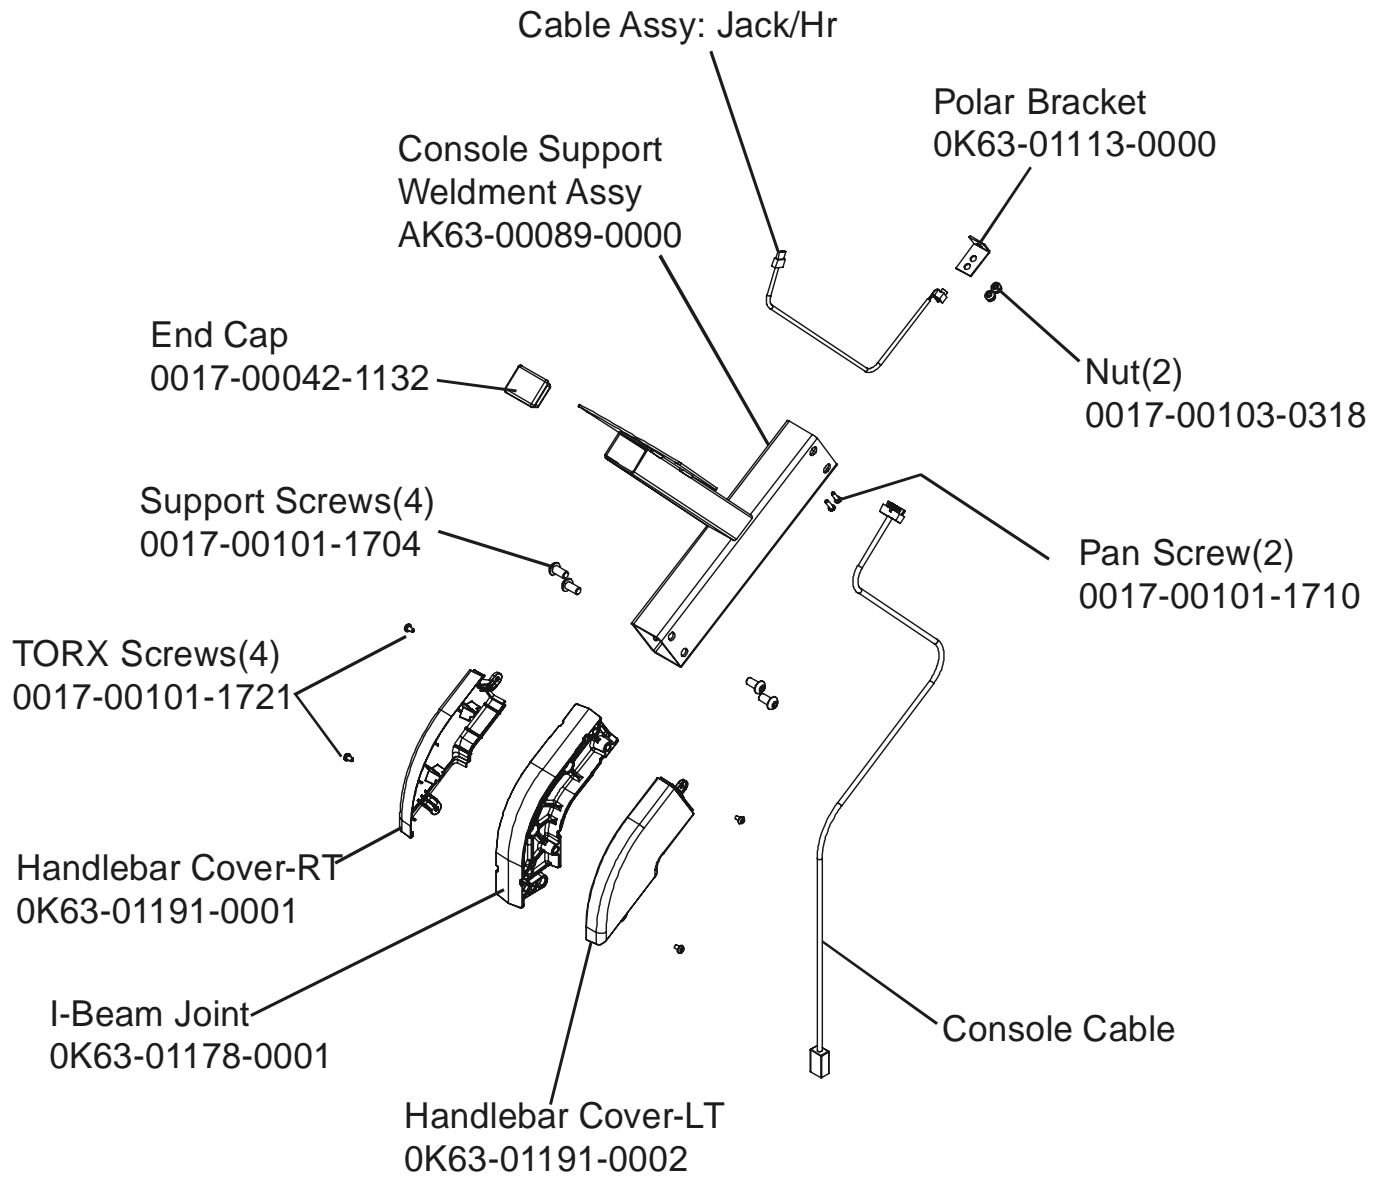

Left Side Shroud and Crankarm

