 


LifeFitness

LIFE CYCLE LC9500HR

END OF LIFE

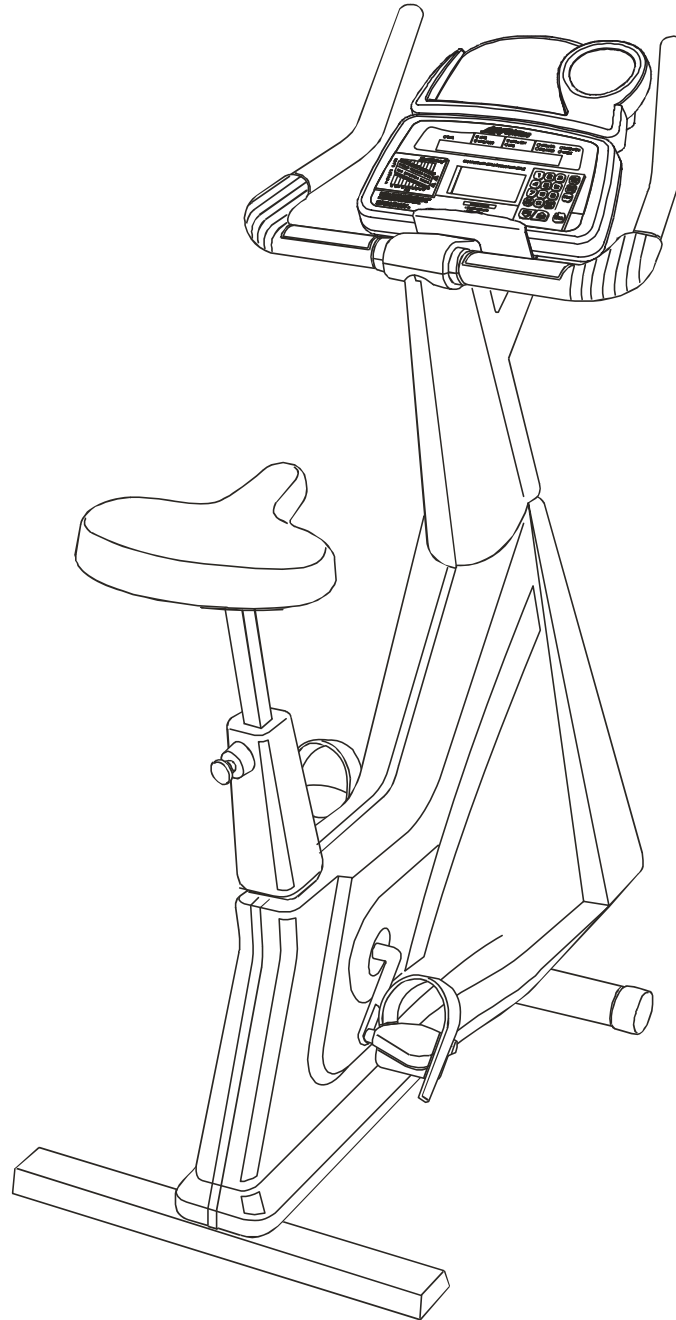

Customer Support Services
PARTS MANUAL

rev. 21 May 2009


Manual	Part Number
Service Manual	M051-00K46-B004
Operator Manual	M051-00K20-B125
Installation Instructions	M051-00K20-A287
Hardware Kit	AK46-00065-0000

	Page
Frame Components	4
Side Shrouds, Handlebar Shrouds and Cap.....	5
Alternator, Wheels, and Stabilizer Bar	6
Console Assembly	7
Accessory Tray	8
Handlebar Assembly.....	9
Crankarm Assembly	10
Freewheel Pulley/Clutch Assembly.....	11
Idler Arm Assembly.....	12
Seat w/Seat Post Assembly.....	13
Seat Plunger Assembly	14
Alternator Control Assembly	15



Life Cycle LC9500HR

Frame Components

 LC95-0XXX-11

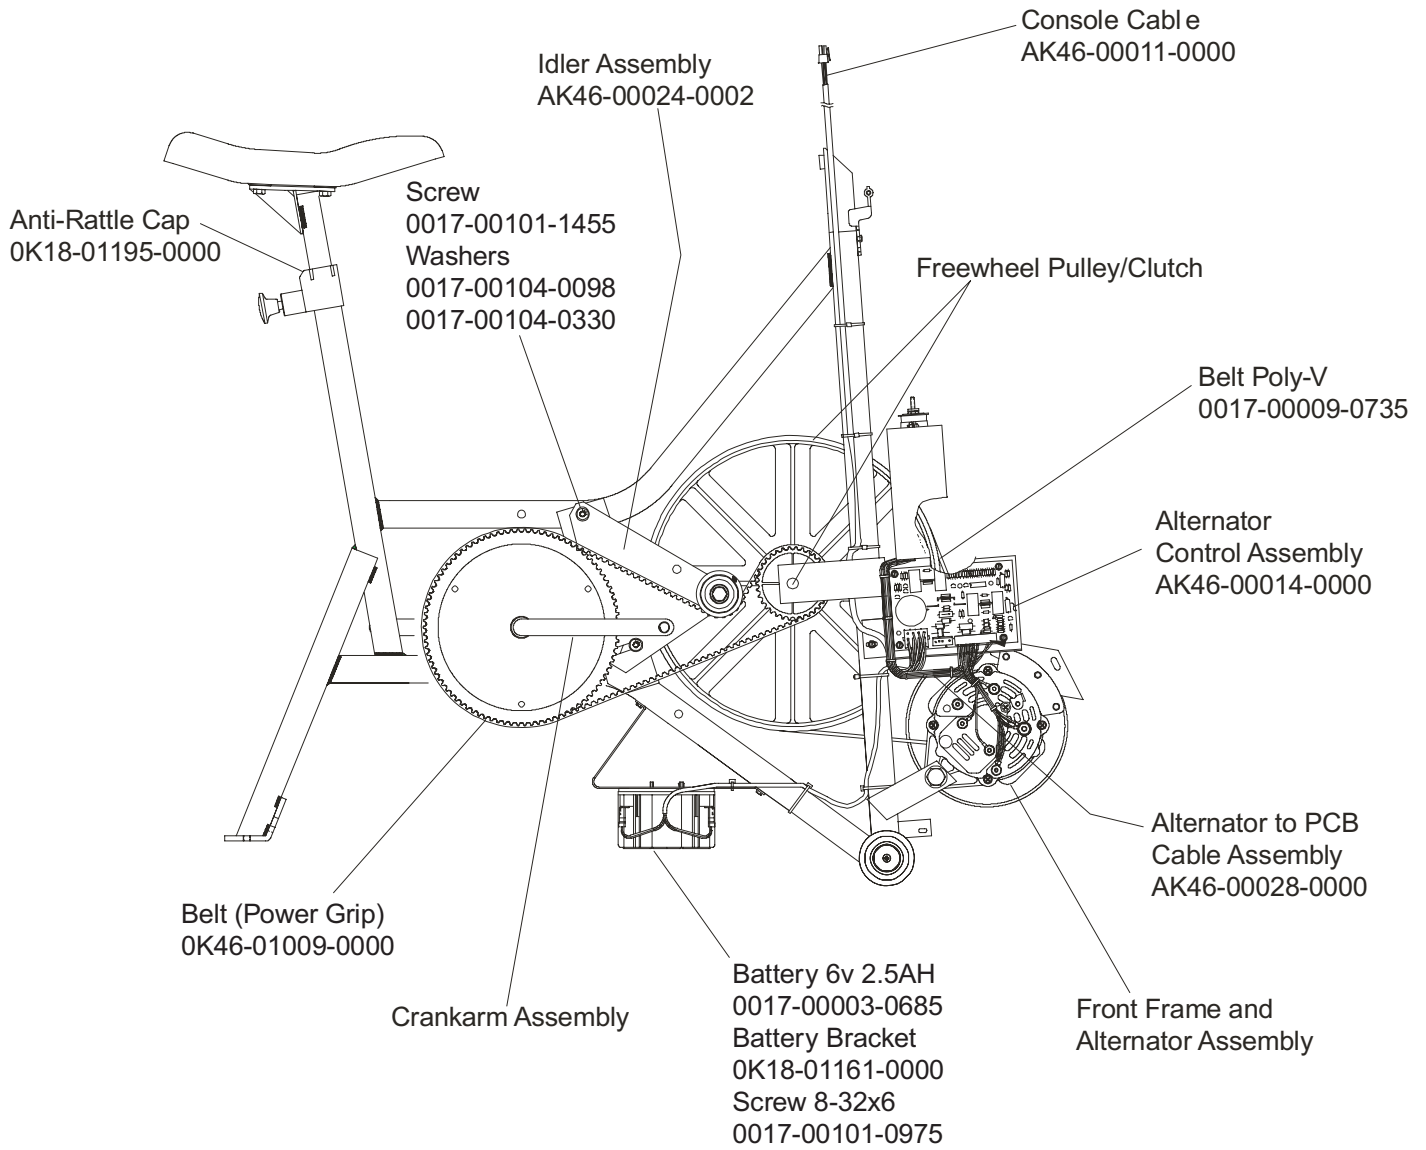



Side Shrouds, Handlebar Shrouds and Cap

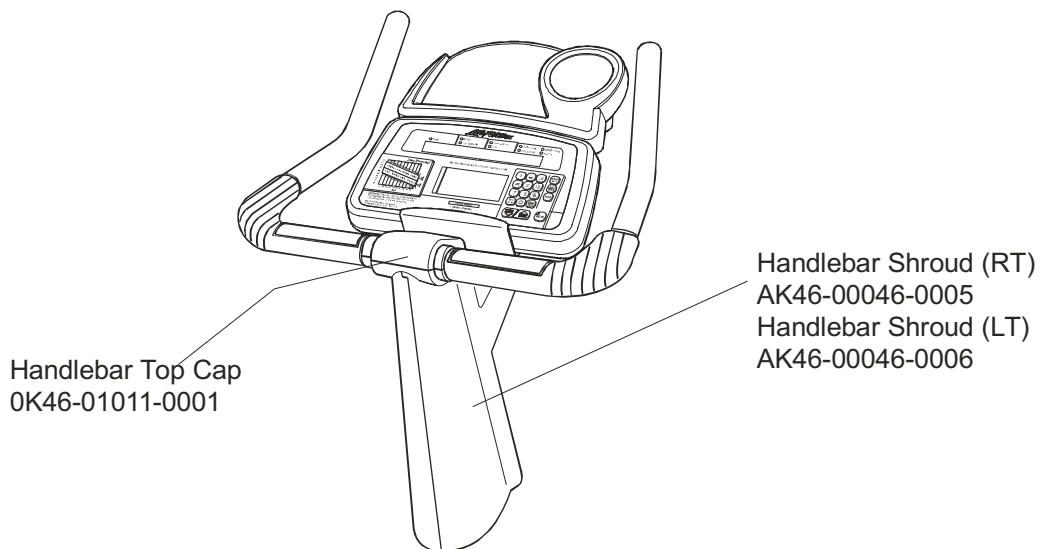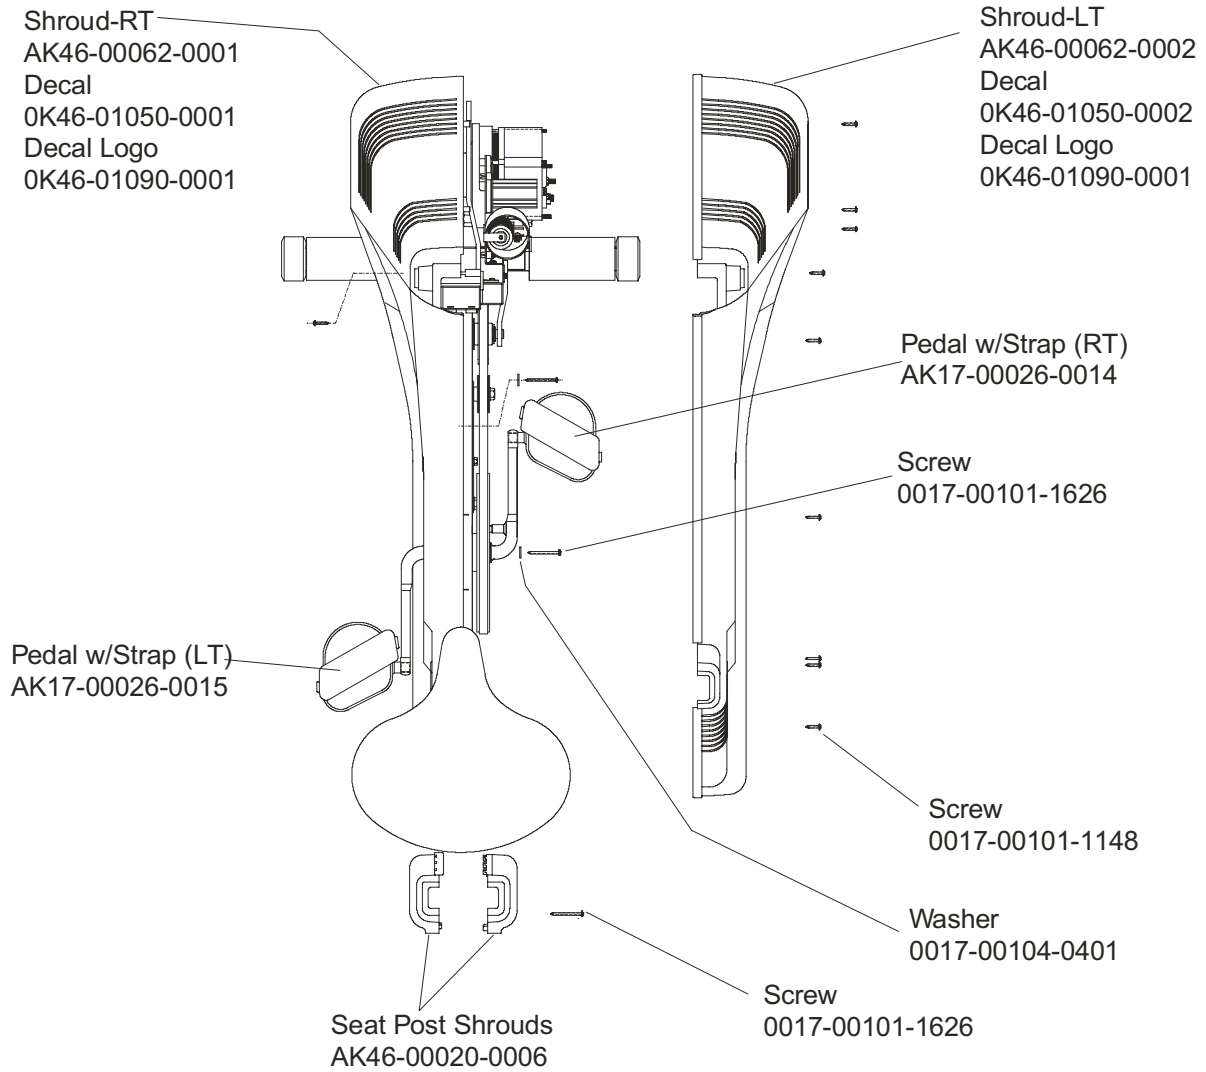  

Life Cycle LC9500HR



Alternator, Wheels, and Stabilizer Bar

  LC95-0XXX-11

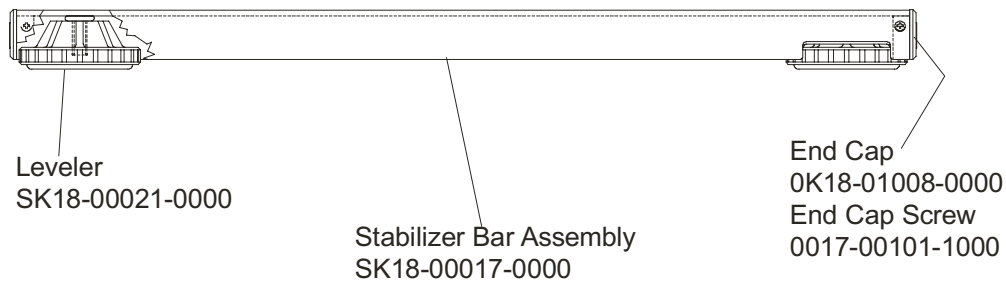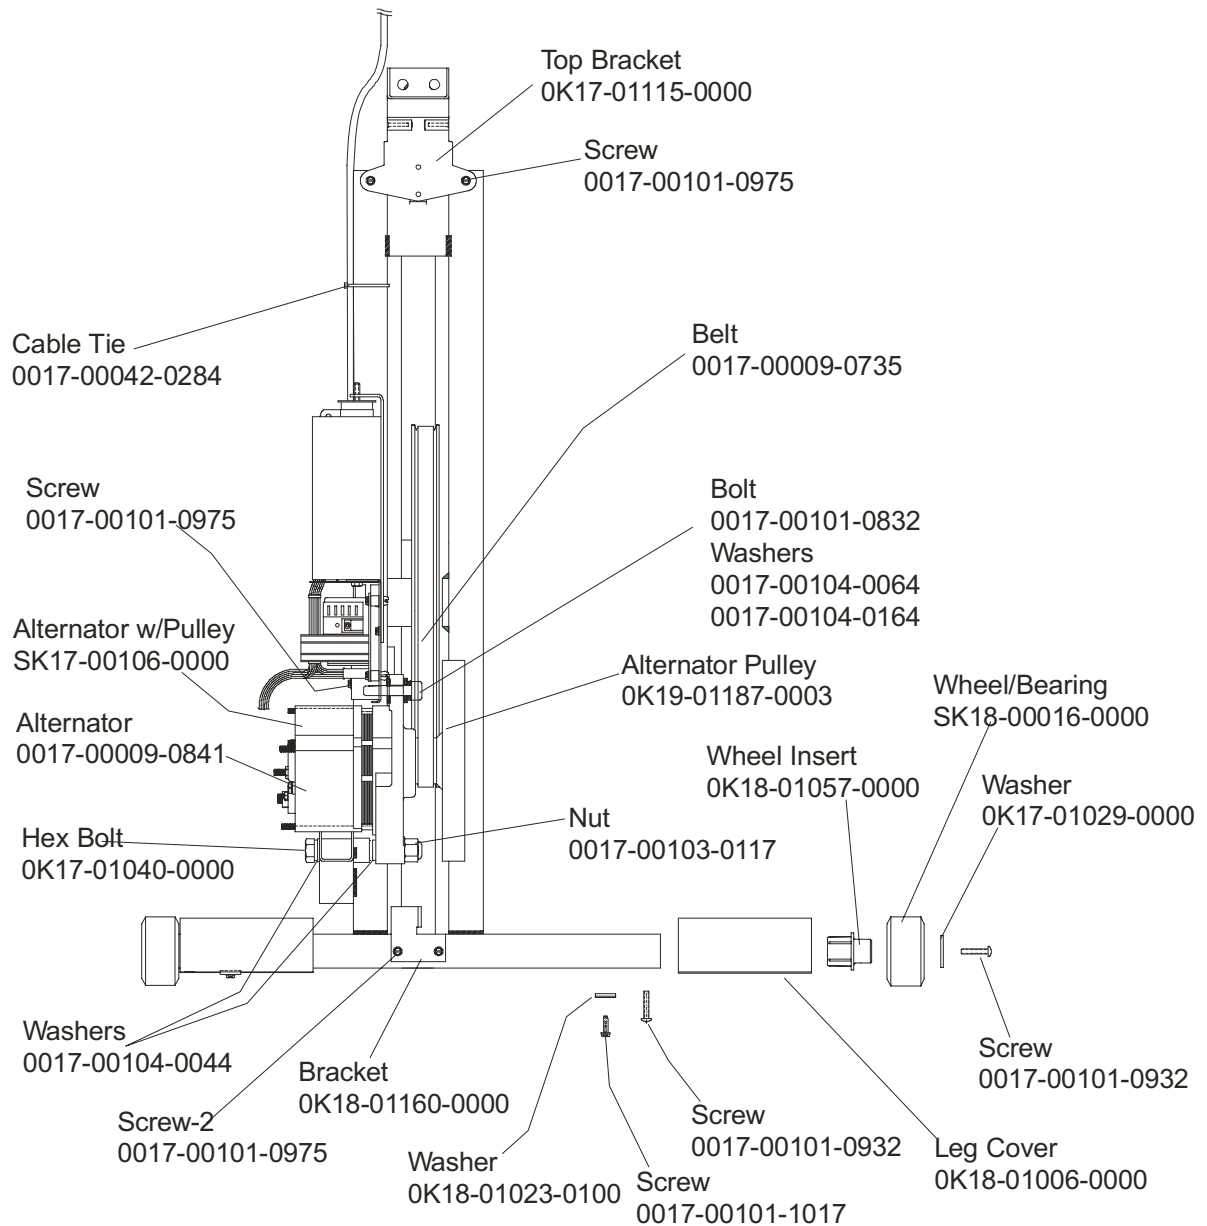


Console Assembly
 AK46-00057-0001 Eng/Met
 AK46-00057-0003 Ger/Eur
 AK46-00057-0004 Spn/Eur
 AK46-00057-0005 Spn
 AK46-00057-0006 Eng
 AK46-00057-0007 Frn/Eur
 AK46-00057-0008 Itl/Eur
 AK46-00057-0009 Dut/Eur
 AK46-00057-0010 Frn
 AK46-00057-0011 Por

  Overlay Bezel Assembly
 AK46-00058-0001 Eng/Met
 AK46-00058-0003 Ger/Eur
 AK46-00058-0004 Spn/Eur
 AK46-00058-0005 Spn
 AK46-00058-0006 Eng
 AK46-00058-0007 Frn/Eur
 AK46-00058-0008 Itl/Eur
 AK46-00058-0009 Dut/Eur
 AK46-00058-0010 Frn
 AK46-00058-0011 Por

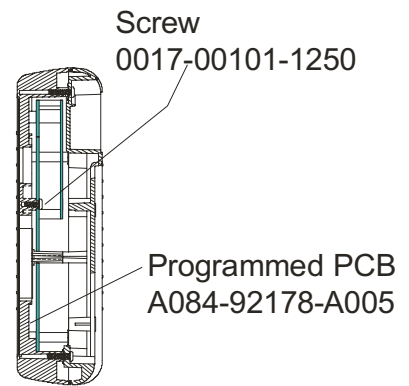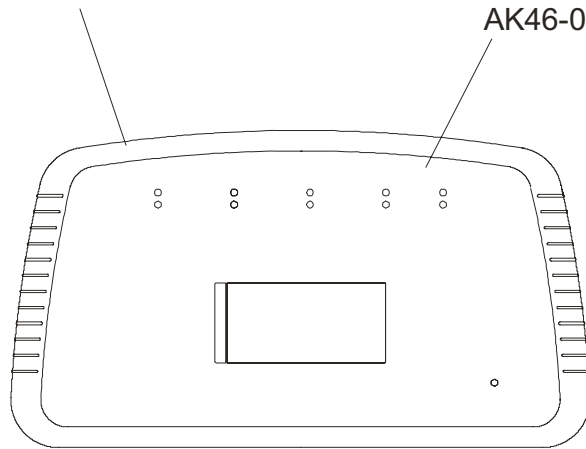


Console Case (Grey)
 0K36-01187-0009

 Battery Cover
 0K36-01035-0007

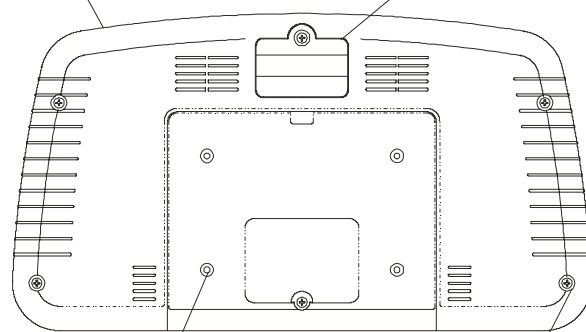



Screw
 0017-00101-1104

 
Screw
 0017-00101-0823

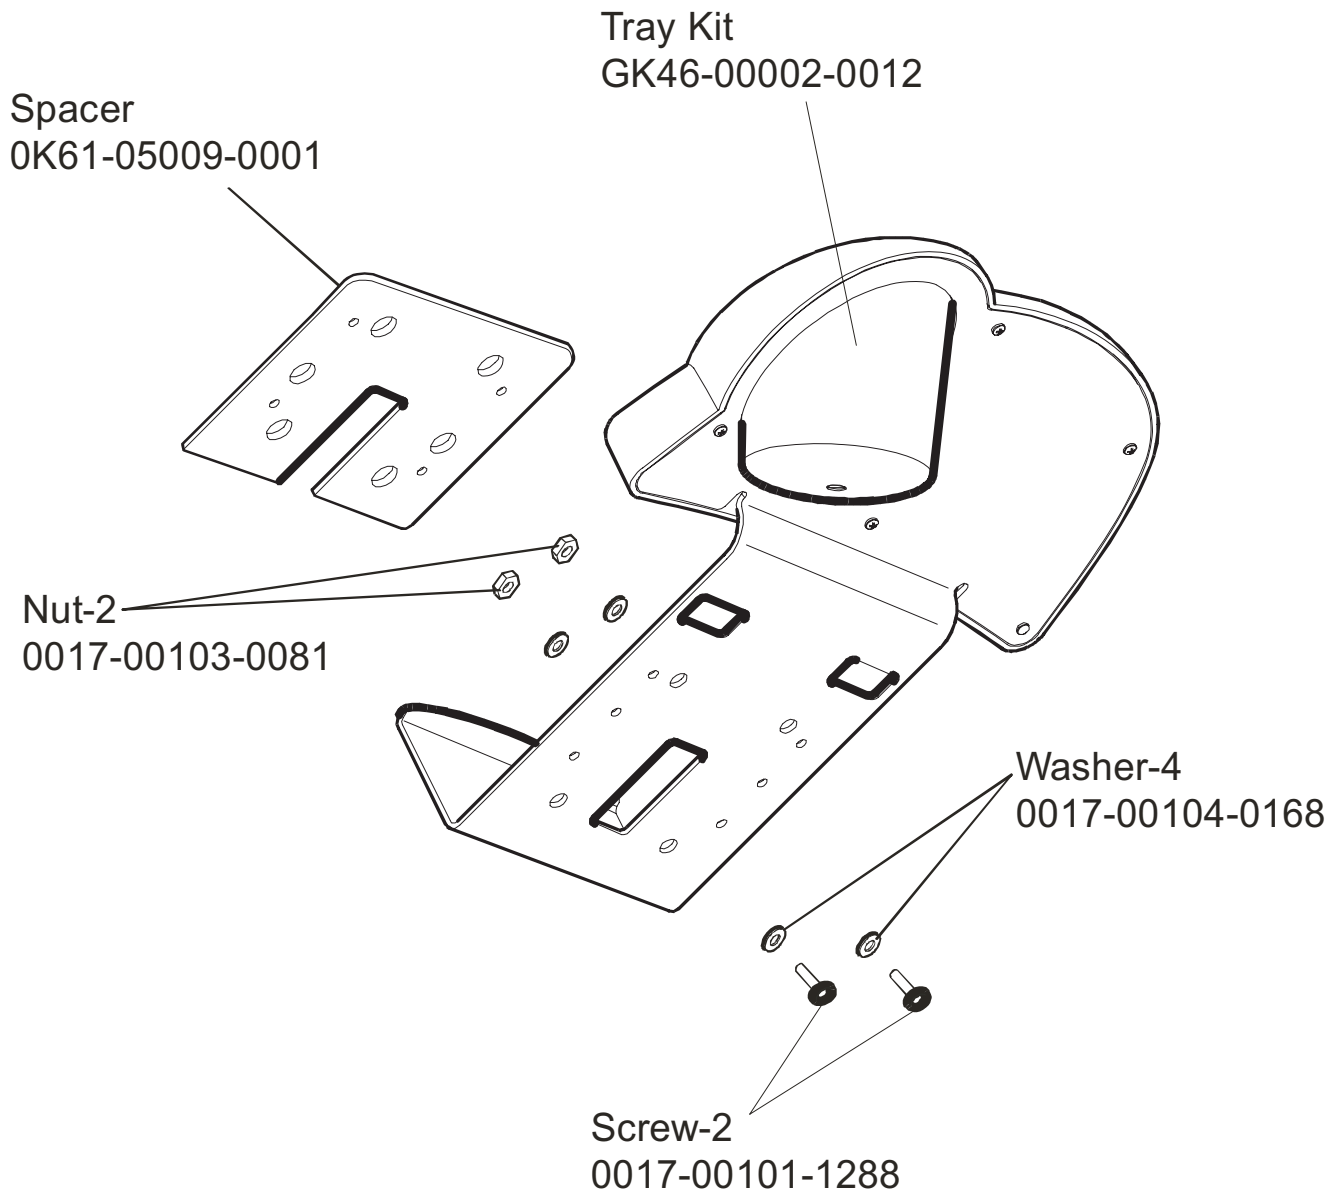

Life Cycle LC9500HR
Handlebar Assembly

   LC95-0XXX-11
SK46-00013-0001

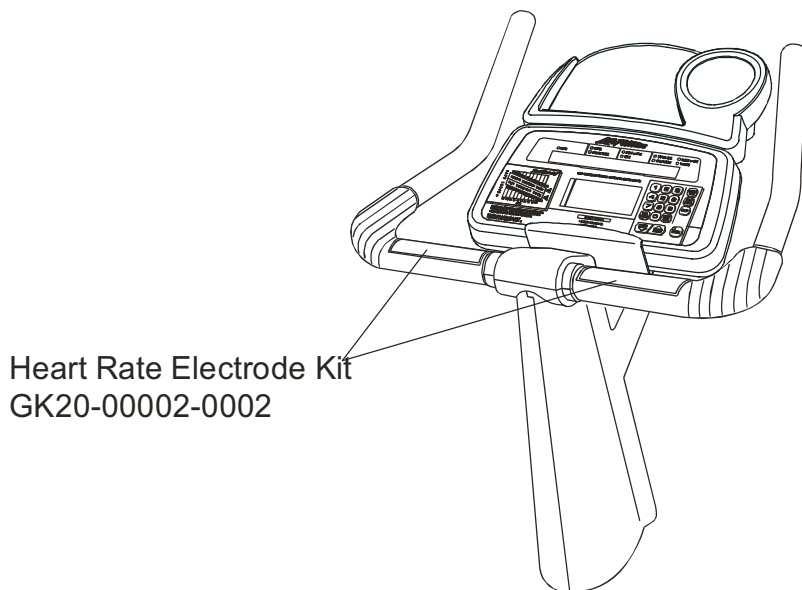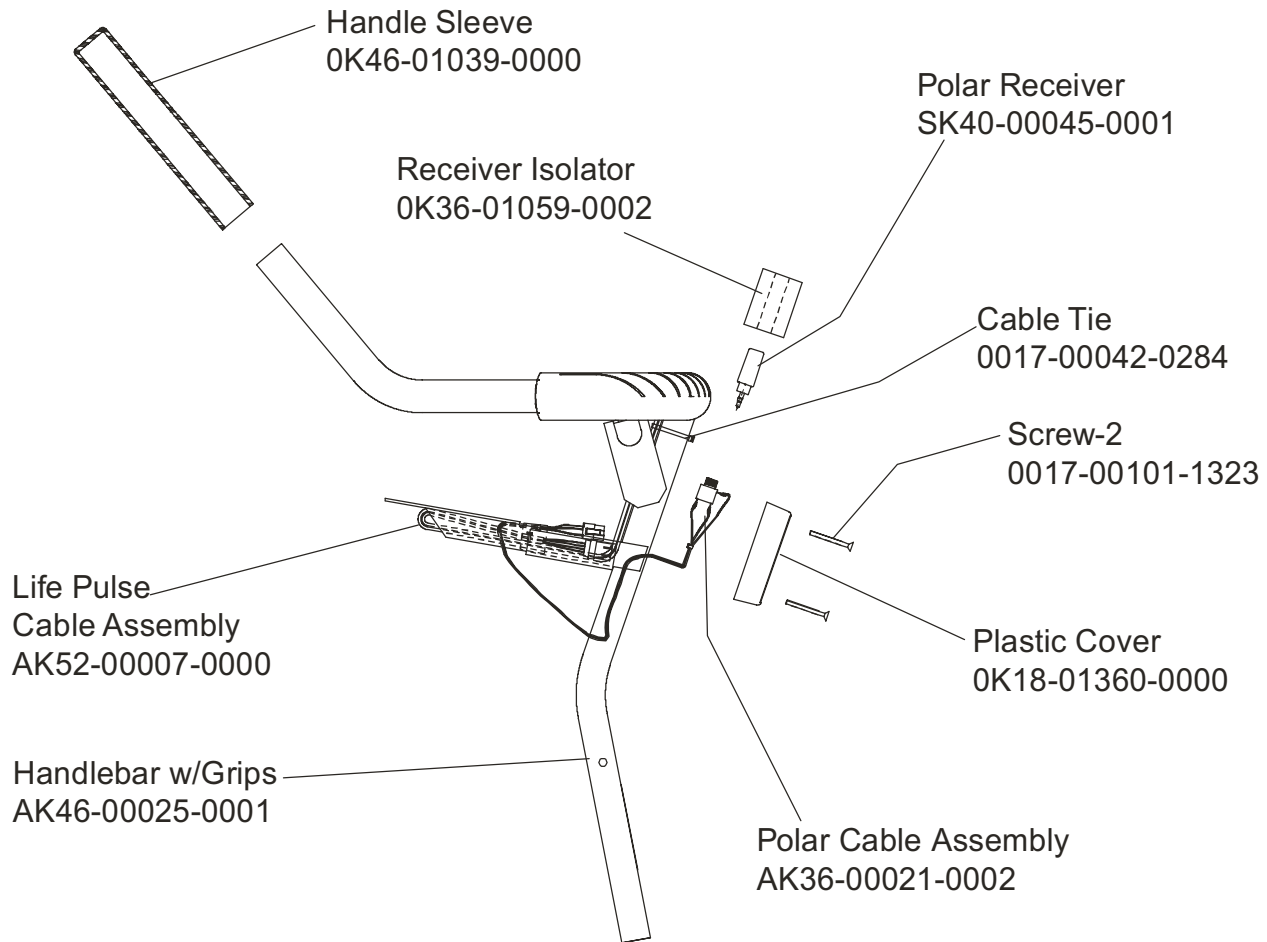


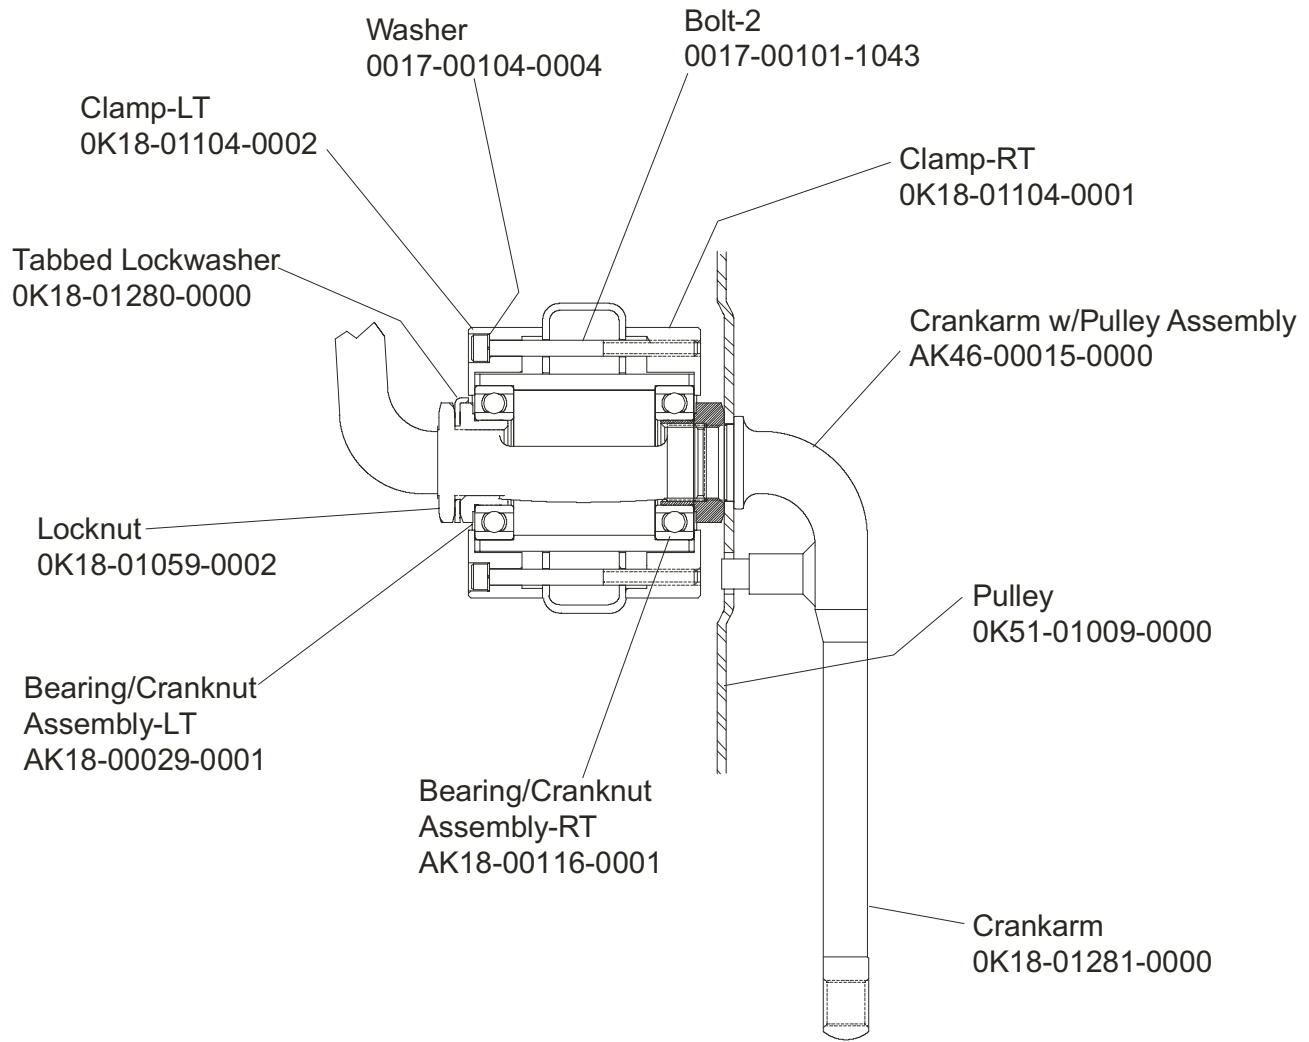


NOTE: Bearing Kit Number GK18-00004-0023

Life Cycle LC9500HR
Freewheel Pulley/Clutch Assembly

  LC95-0XXX-11

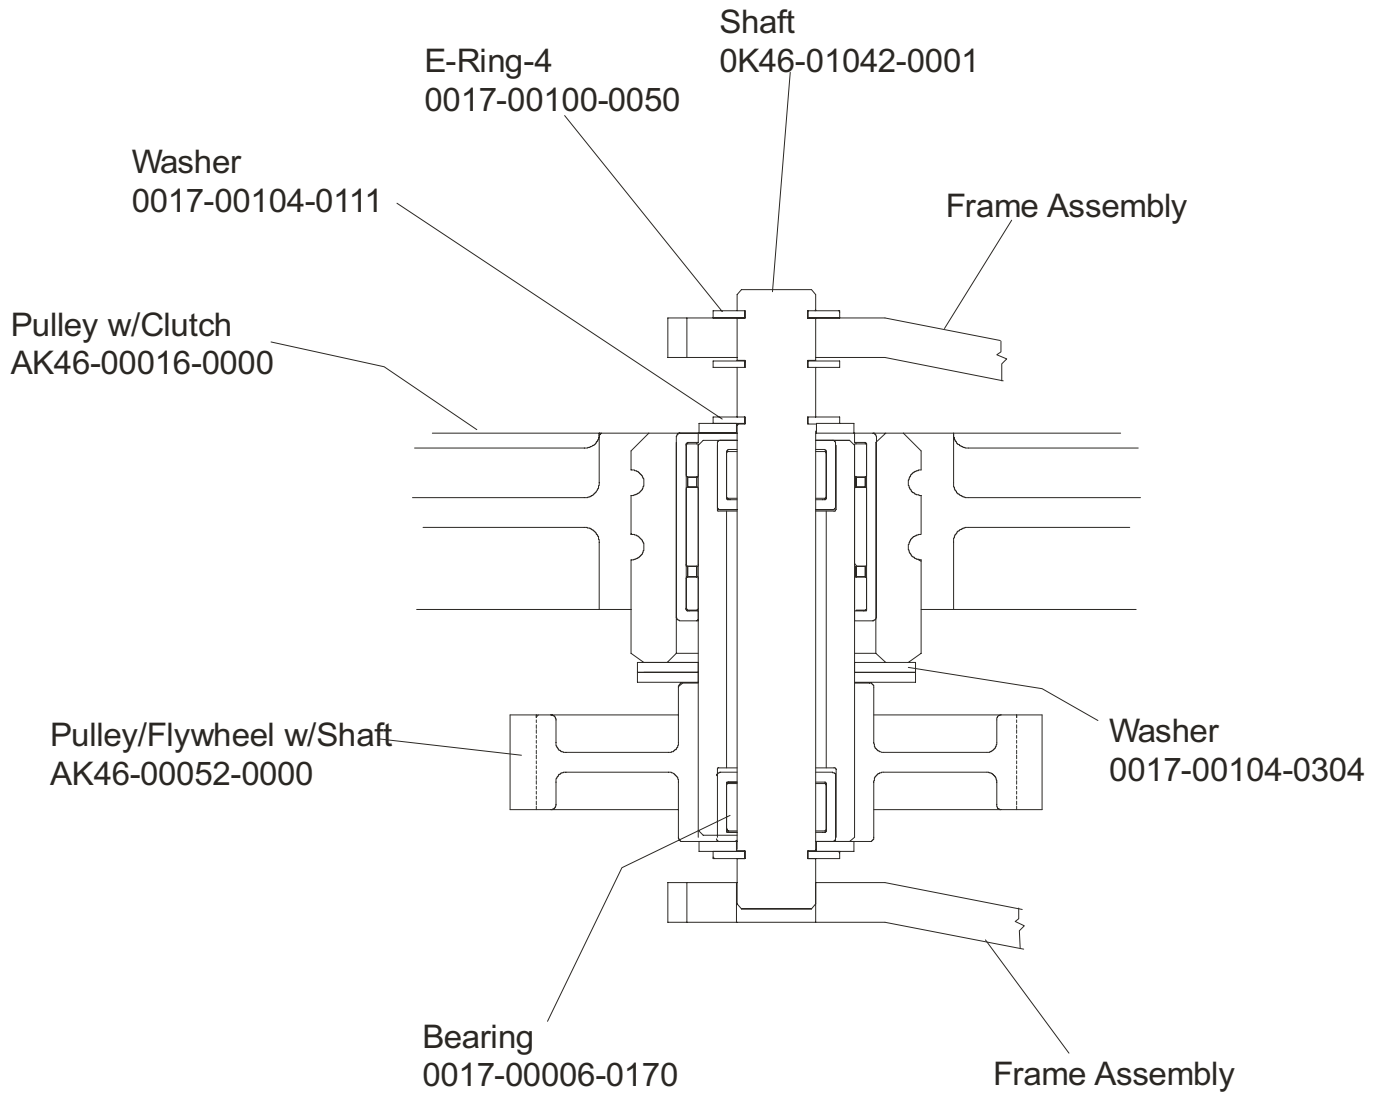

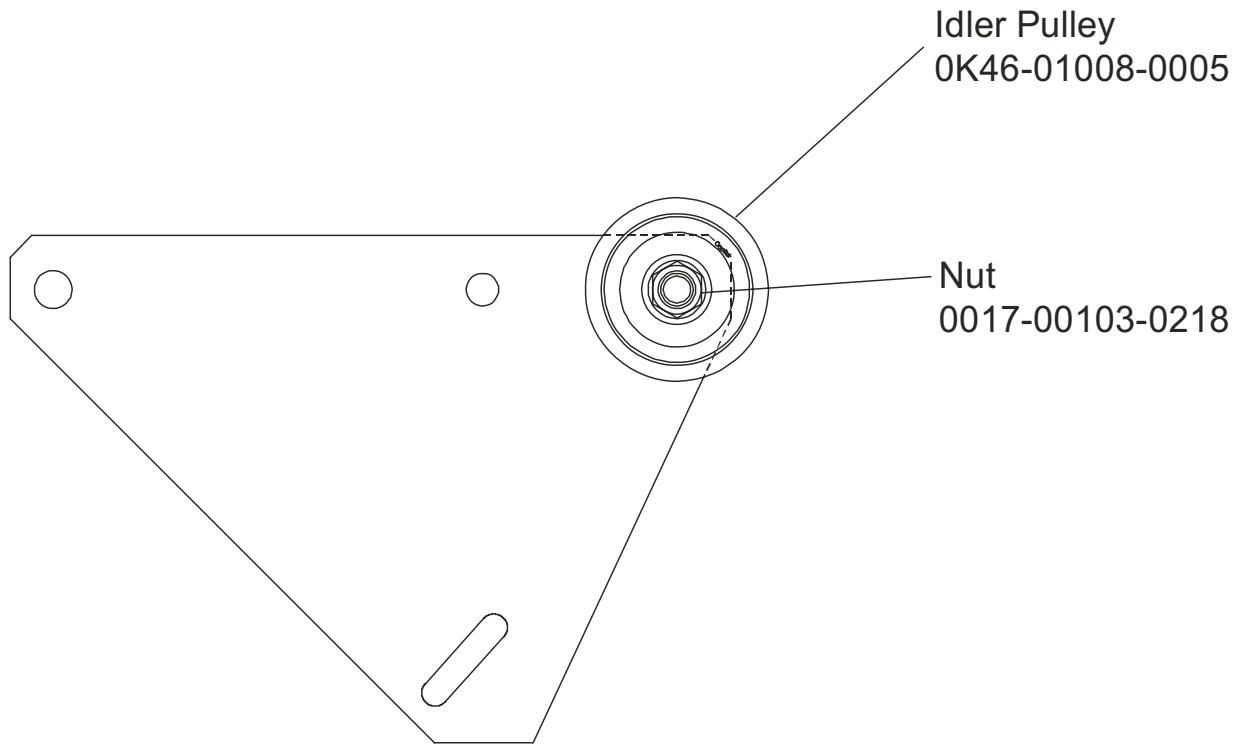

Life Cycle LC9500HR
Seat w/Seat Post Assembly

LC95-0XXX-11
AK46-00067-0000

