


LF Cross-Trainer
General Assembly

X30-0000-01

120V Dom. Eng/Eng

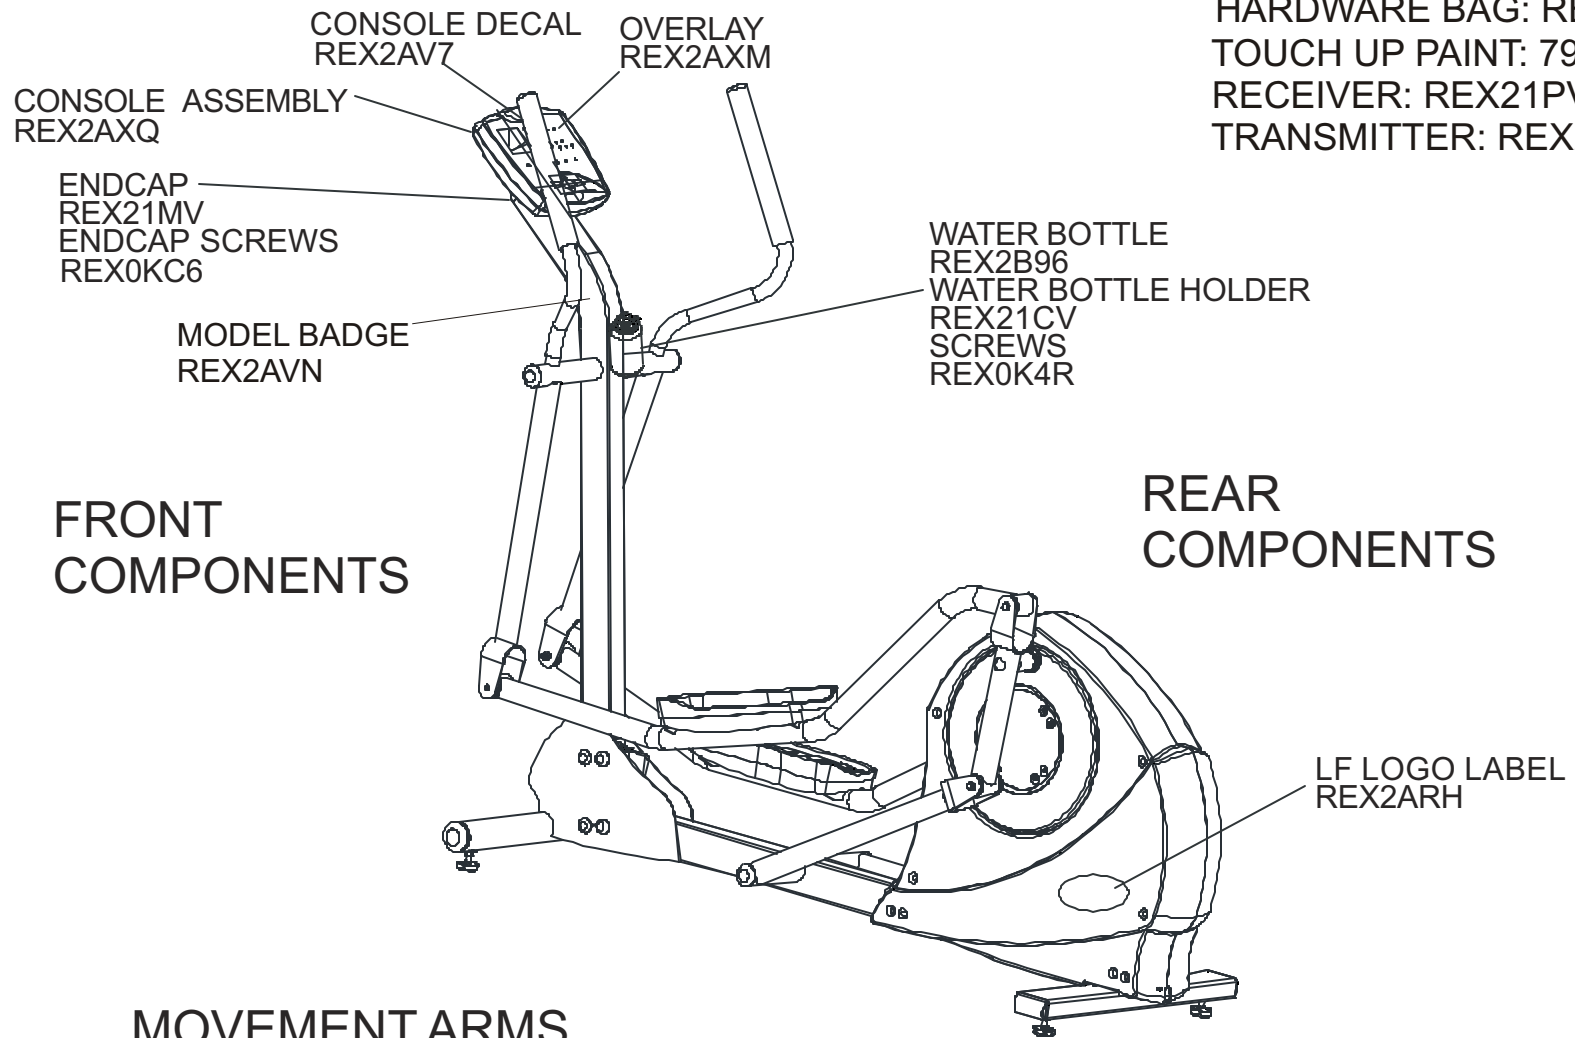

HARDWARE BAG: REX2AZ8
TOUCH UP PAINT: 7967401
RECEIVER: REX21PV
TRANSMITTER: REX2B95

**FRONT
COMPONENTS**

**REAR
COMPONENTS**

**MOVEMENT ARMS
& HARDWARE**


**BLOCK
DIAGRAM**

CABLES

LF Cross-Trainer
Movement Arms and Hardware

X30-0000-01


120V Dom. Eng/Eng

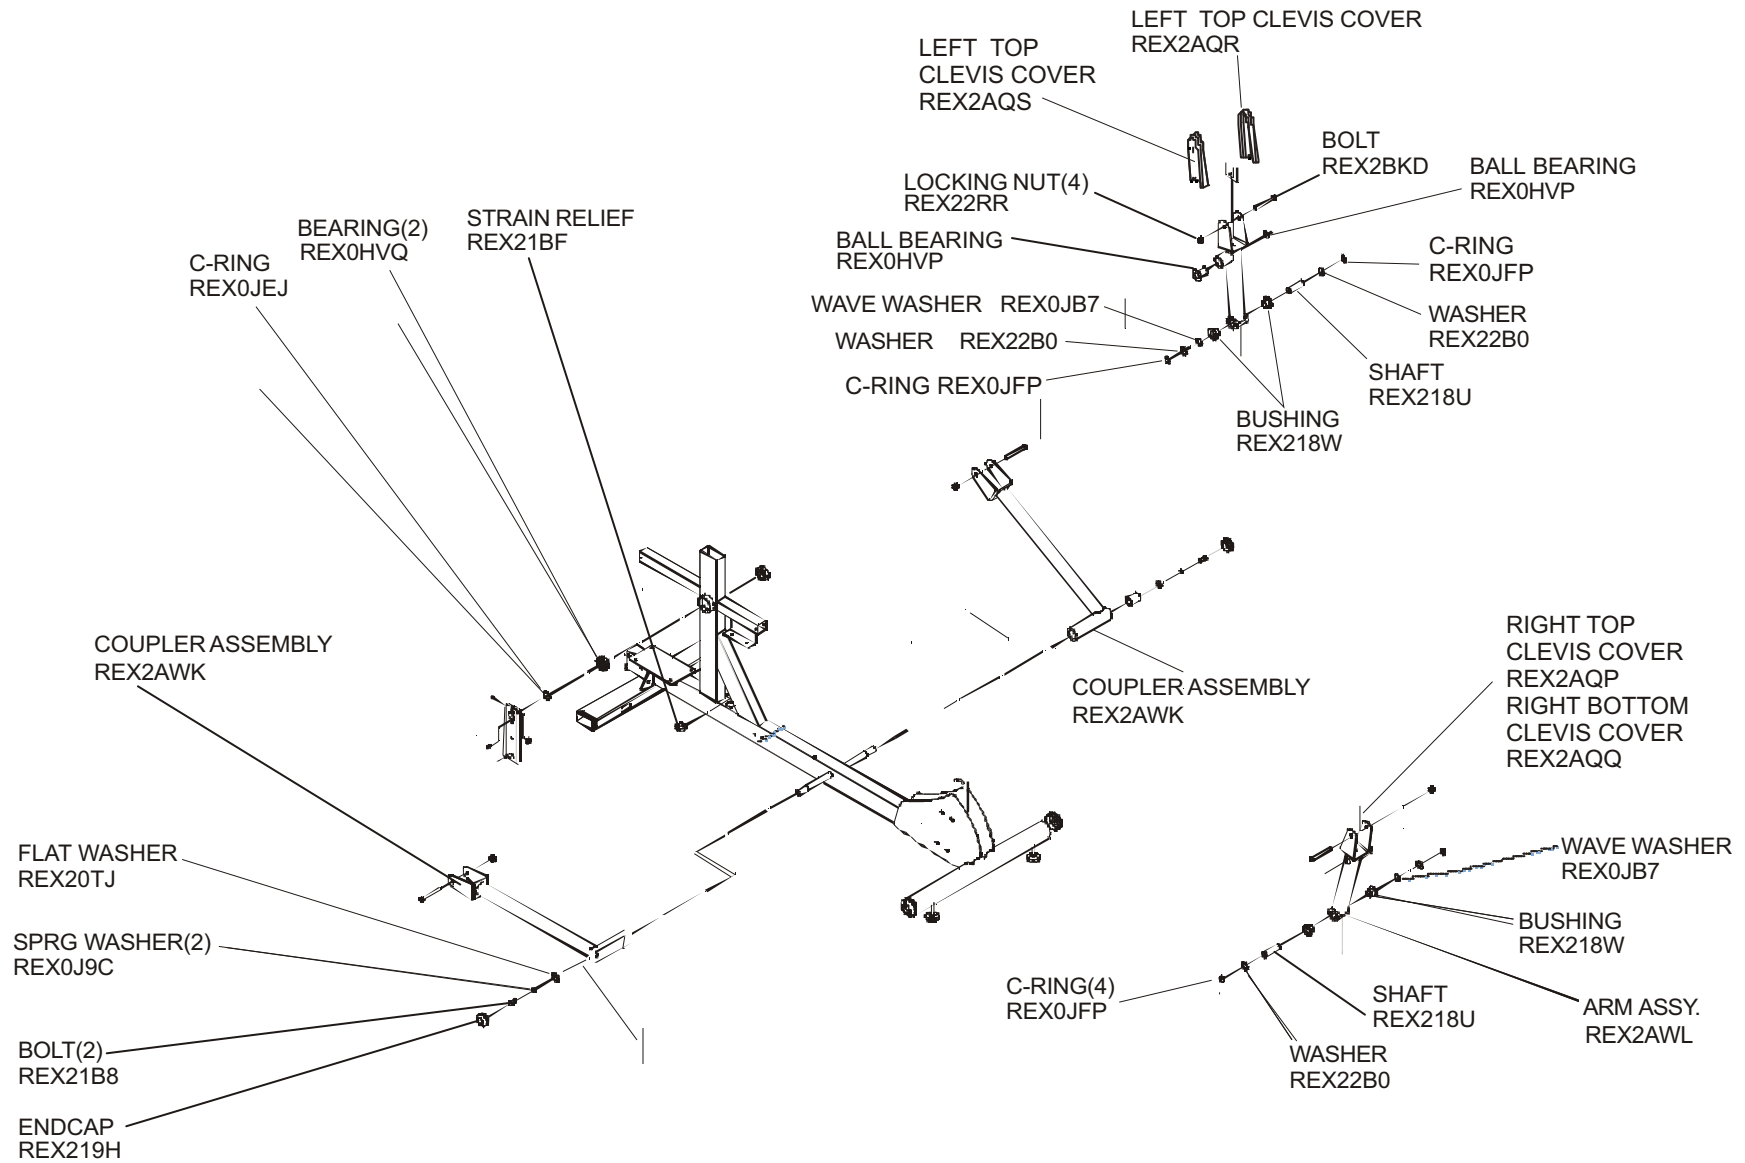

LF Cross-Trainer
Pedal Arms and Hardware

X30-0000-01


120V Dom. Eng/Eng

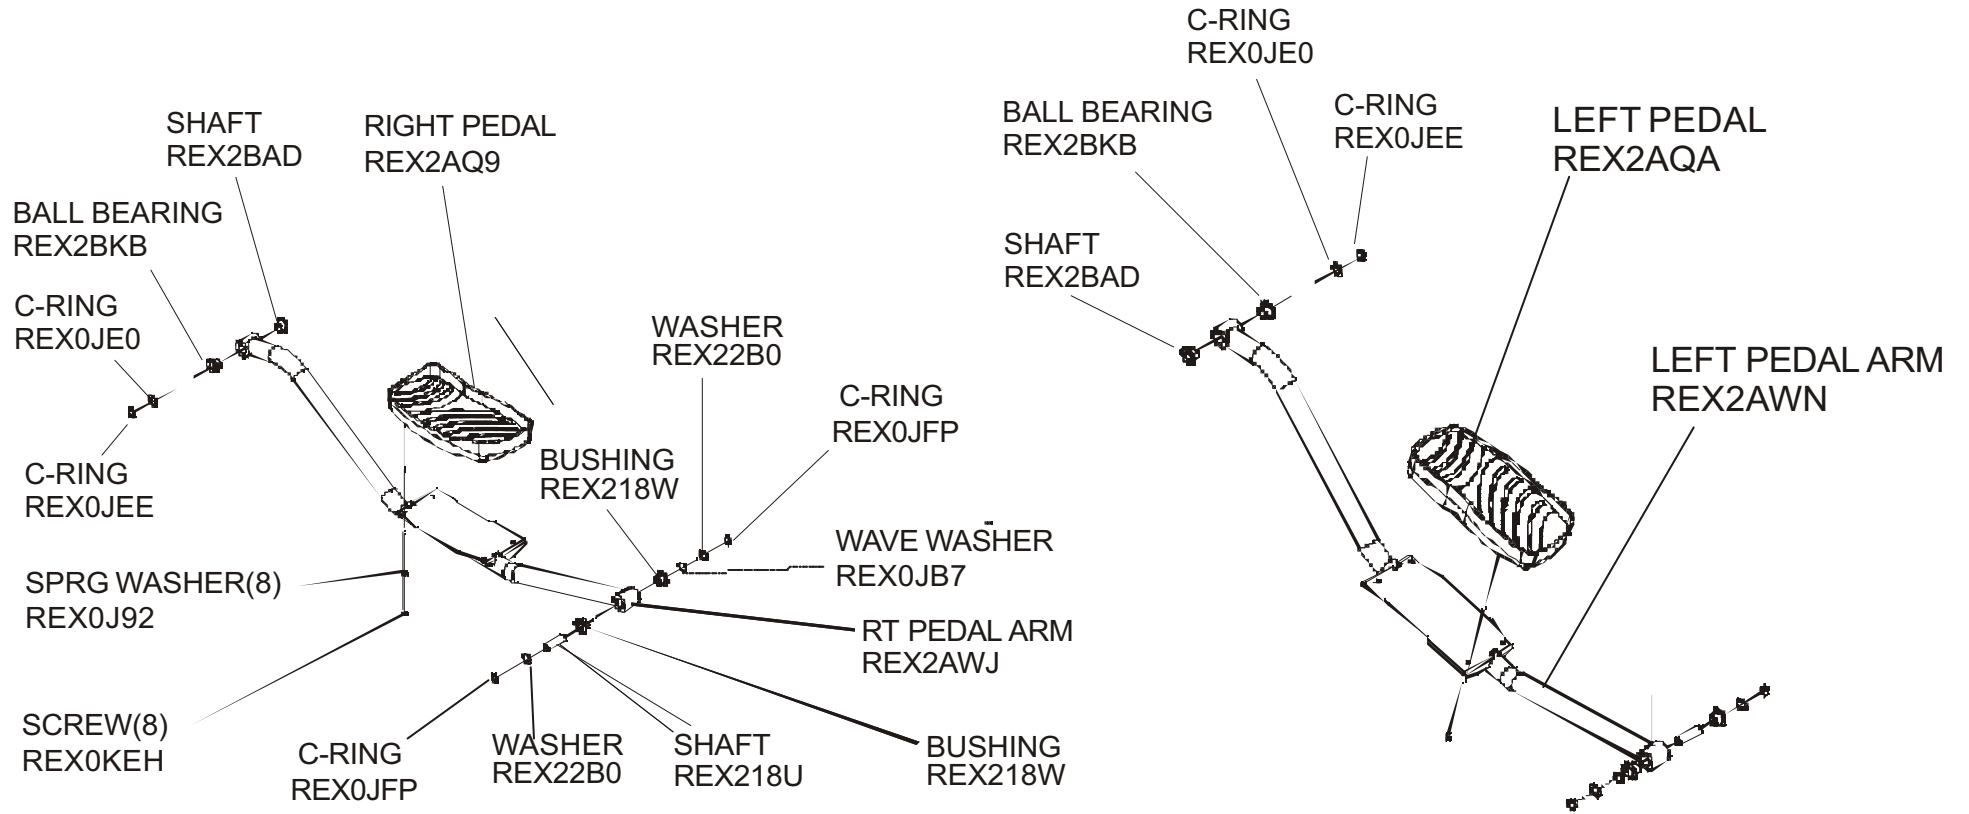

LF Cross-Trainer Rear Components

X30-0000-01


120V Dom. Eng/Eng

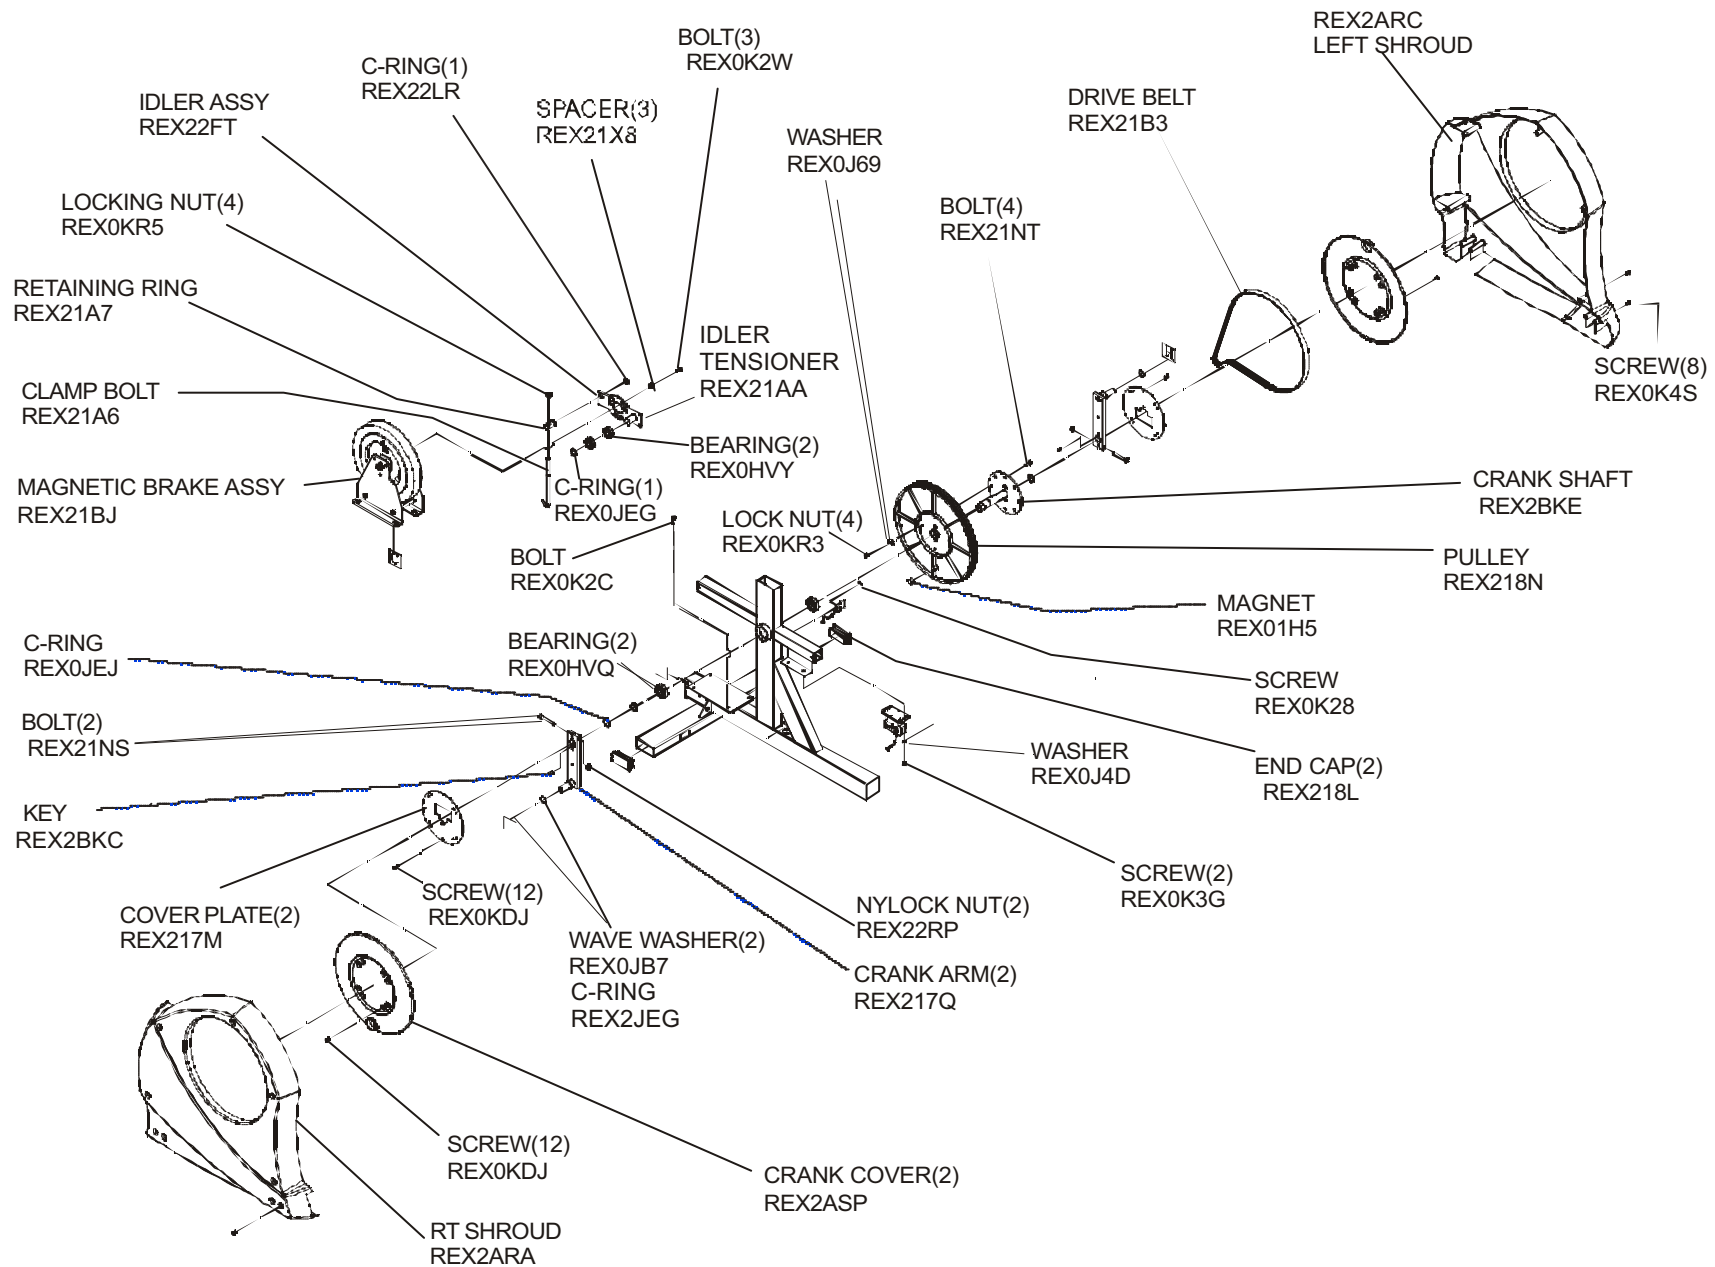


LF Cross-Trainer
Console, Upright & User Arm Components


X30-0000-01

120V Dom. Eng/Eng

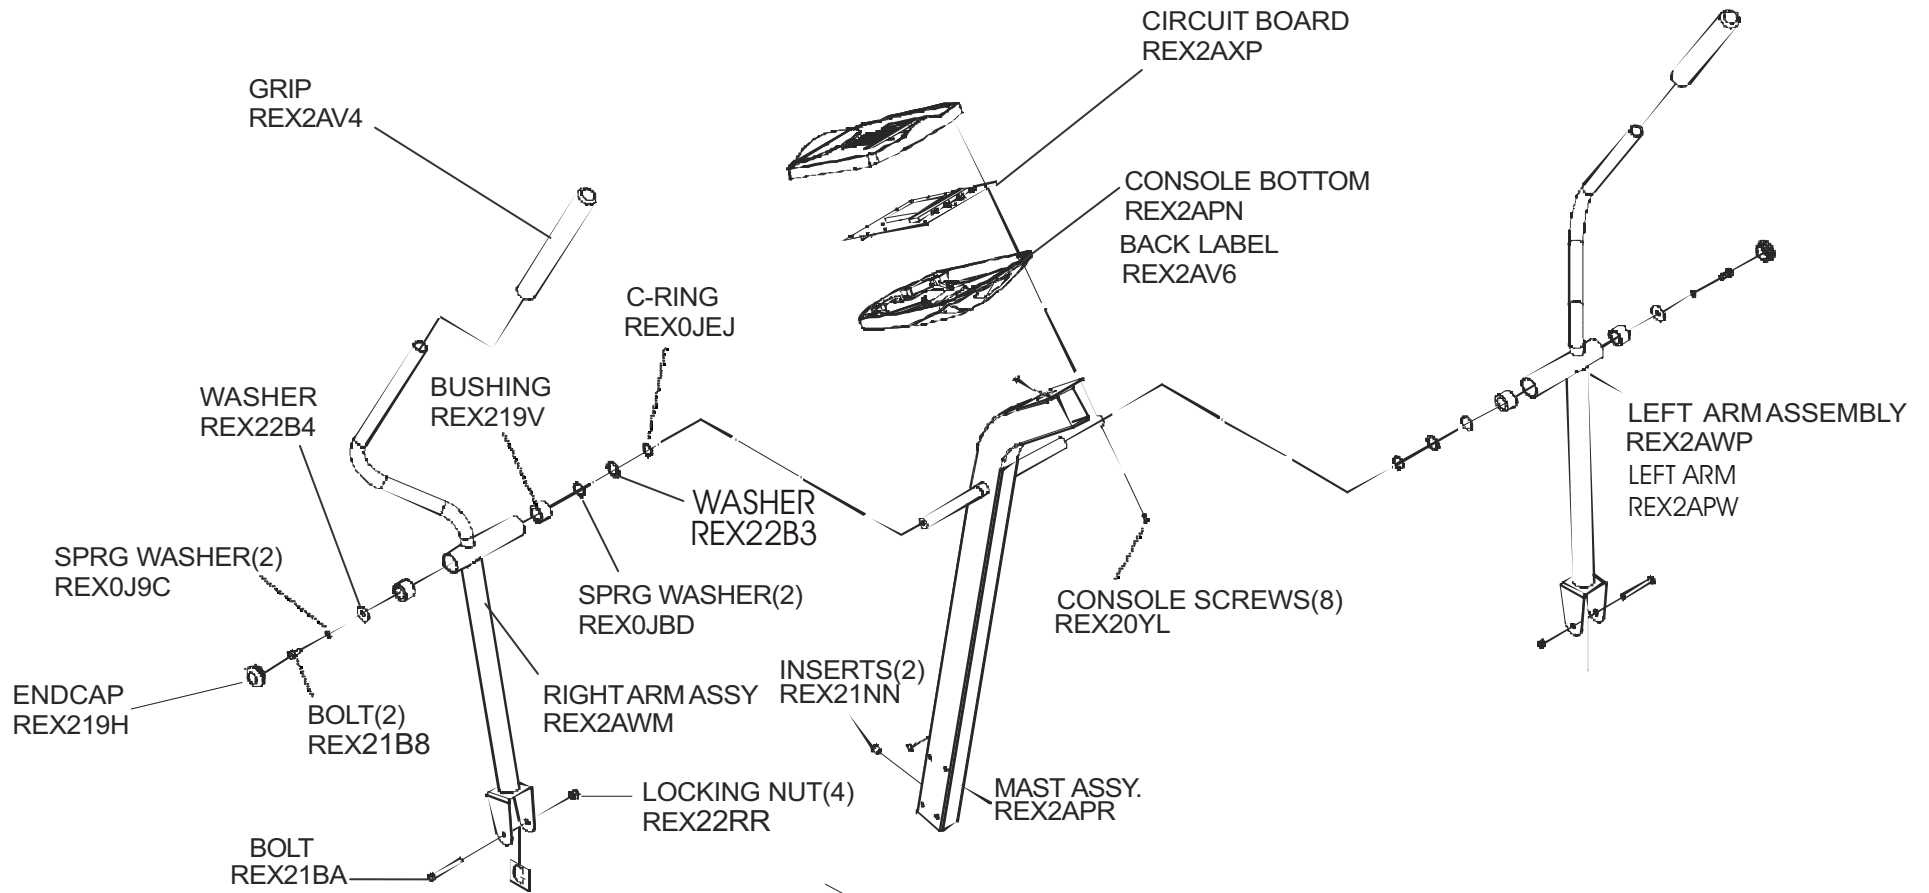

RIGHT CONSOLE
MAST COVER (NOT SHOWN)
REX2AQ1
LEFT CONSOLE
MAST COVER (NOT SHOWN)
REX2AQ6
MAST COVER SCREWS (3)
REX0K4S

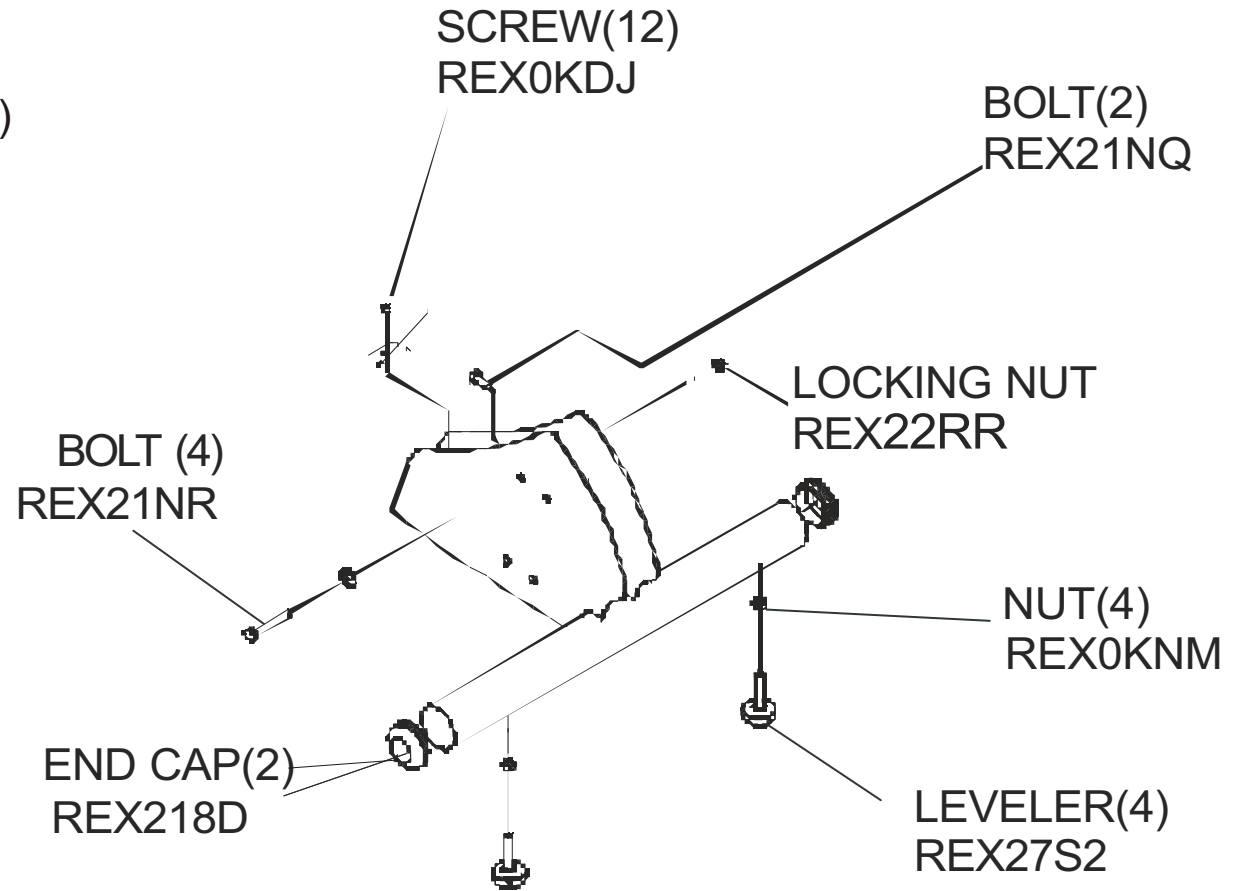

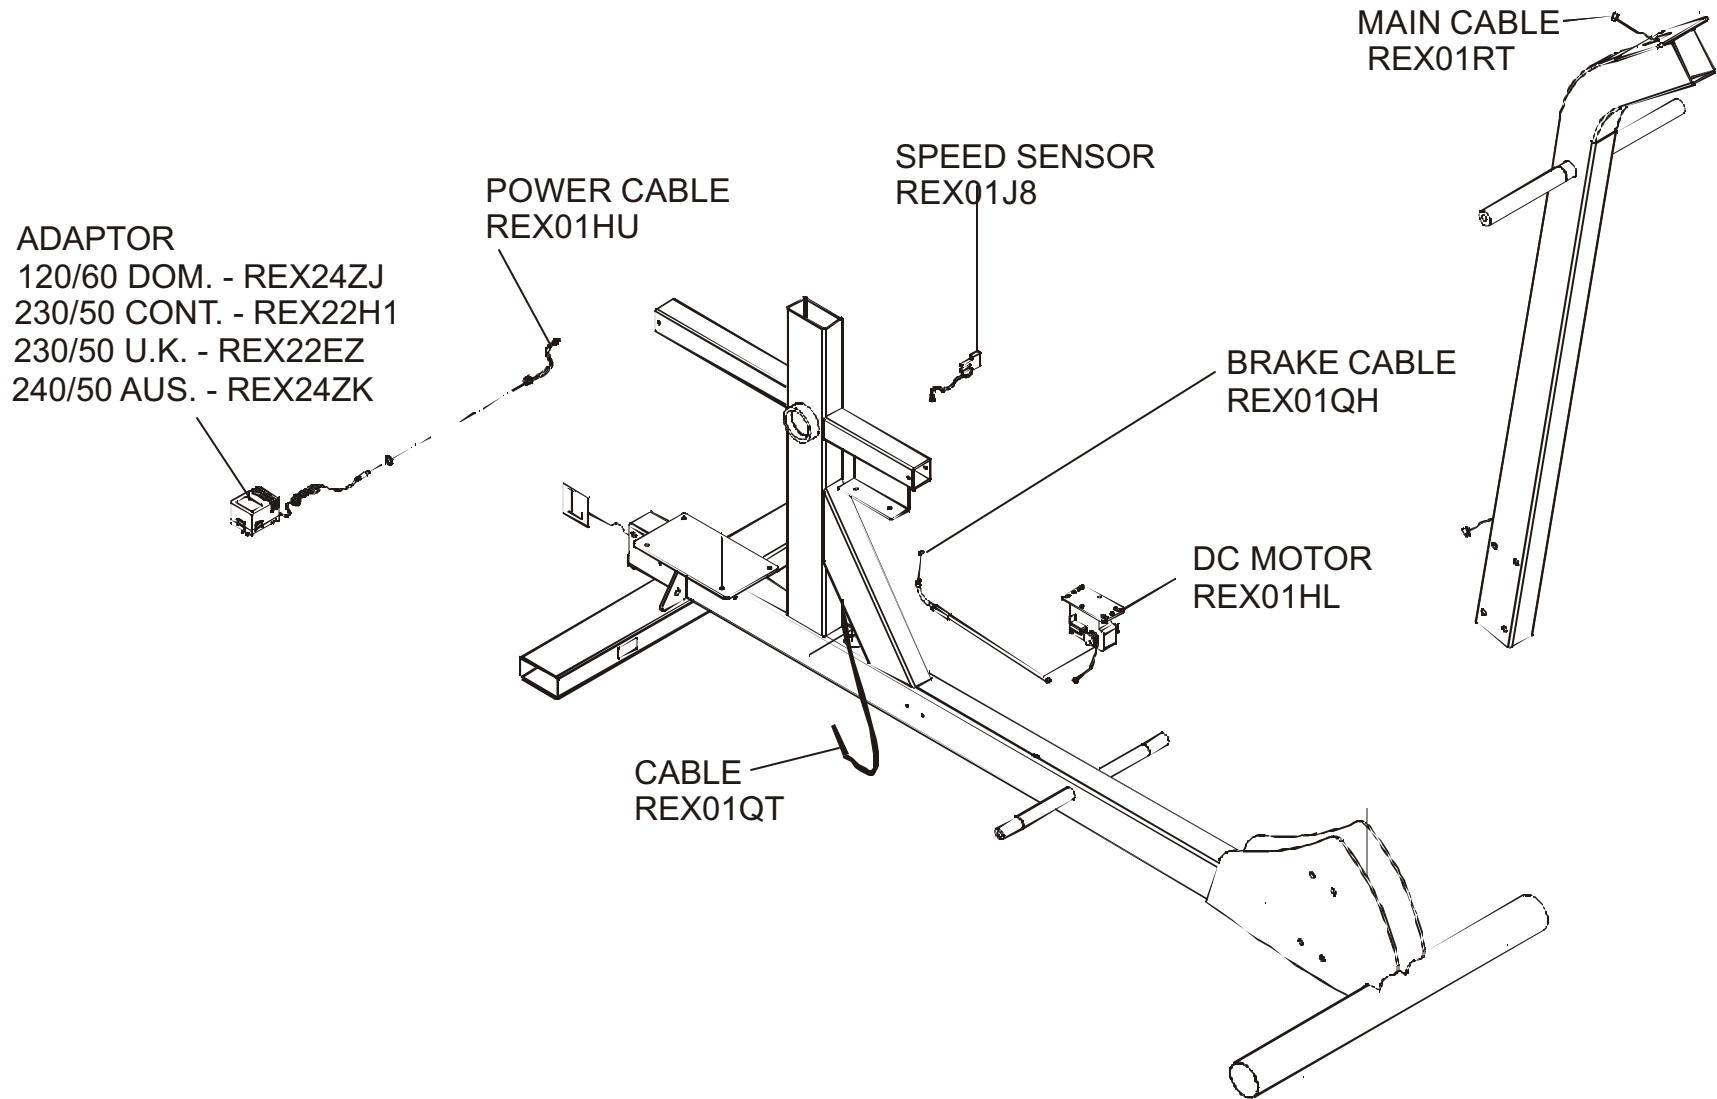

LF Cross-Trainer Block Diagram

X30-0000-01

120V Dom. Eng/Eng

