


**LF Cross-Trainer**  
**General Assembly**

**X35-0000-01**

**120V Dom. Eng/Eng**

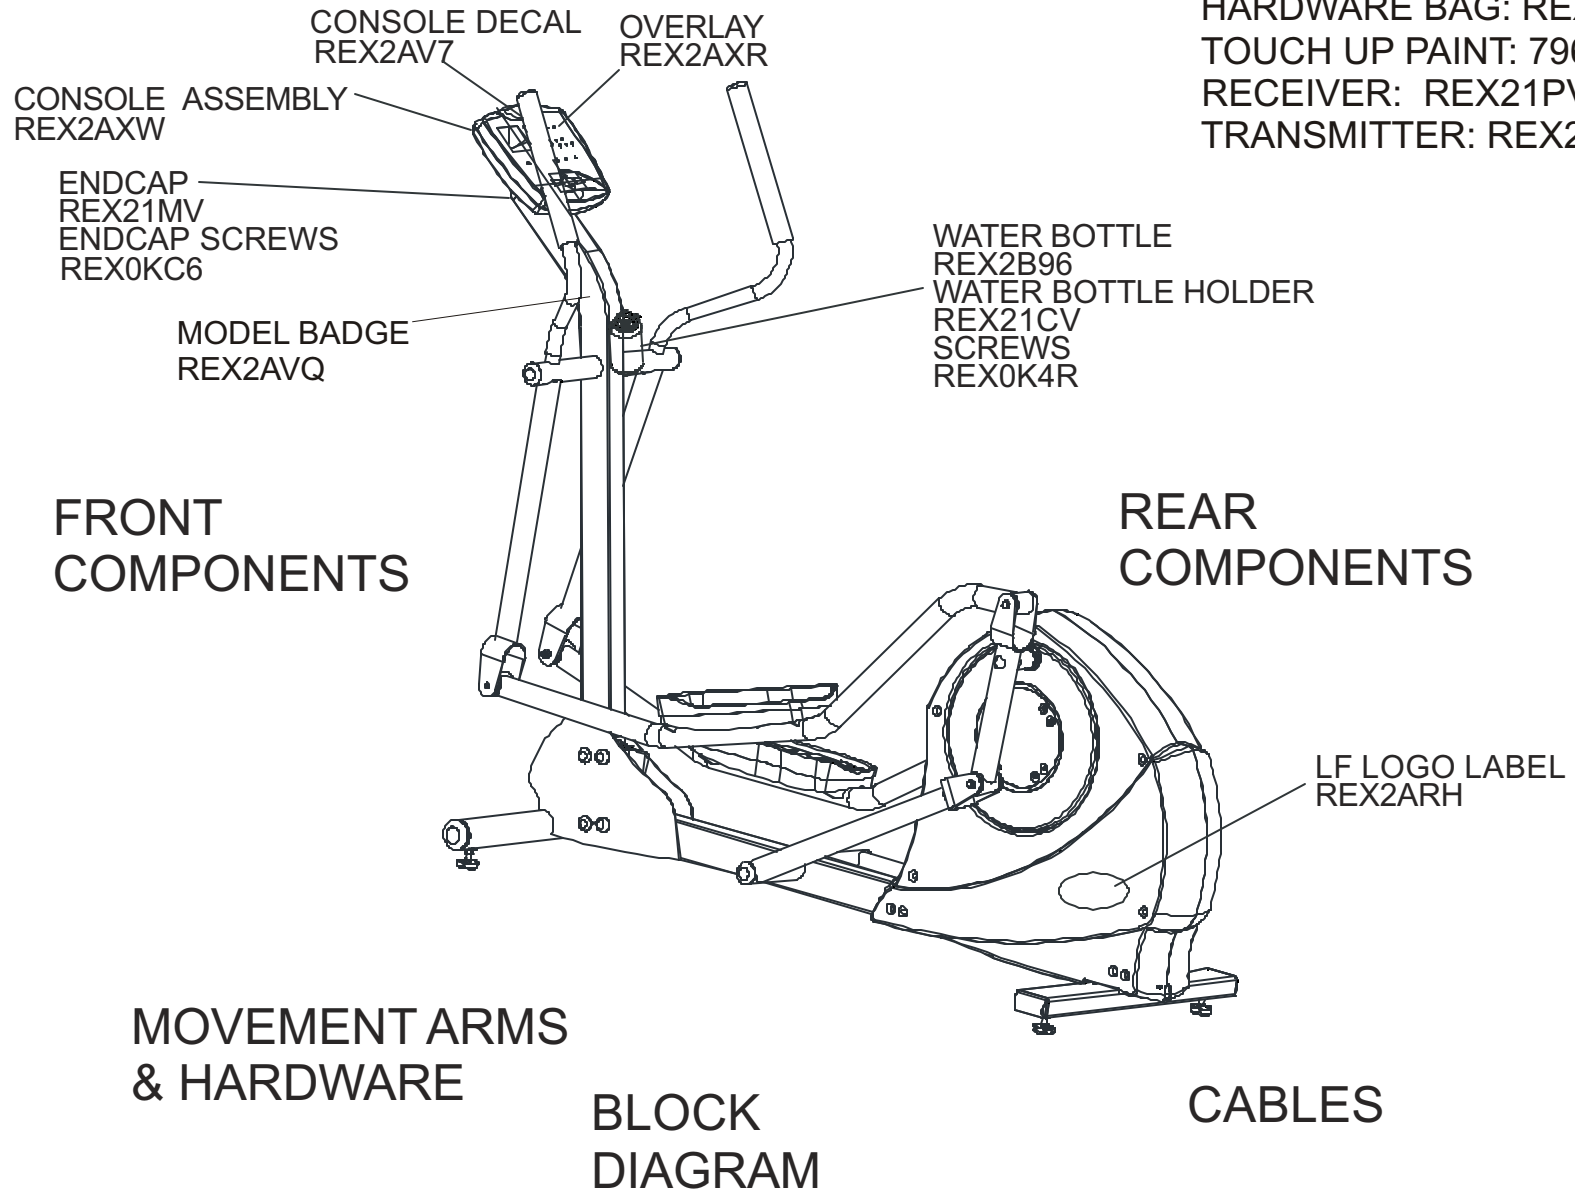


HARDWARE BAG: REX2AZ8  
TOUCH UP PAINT: 7967401  
RECEIVER: REX21PV  
TRANSMITTER: REX2B95

**LF Cross-Trainer  
Movement Arms and Hardware**

**X35-0000-01**


**120V Dom. Eng/Eng**

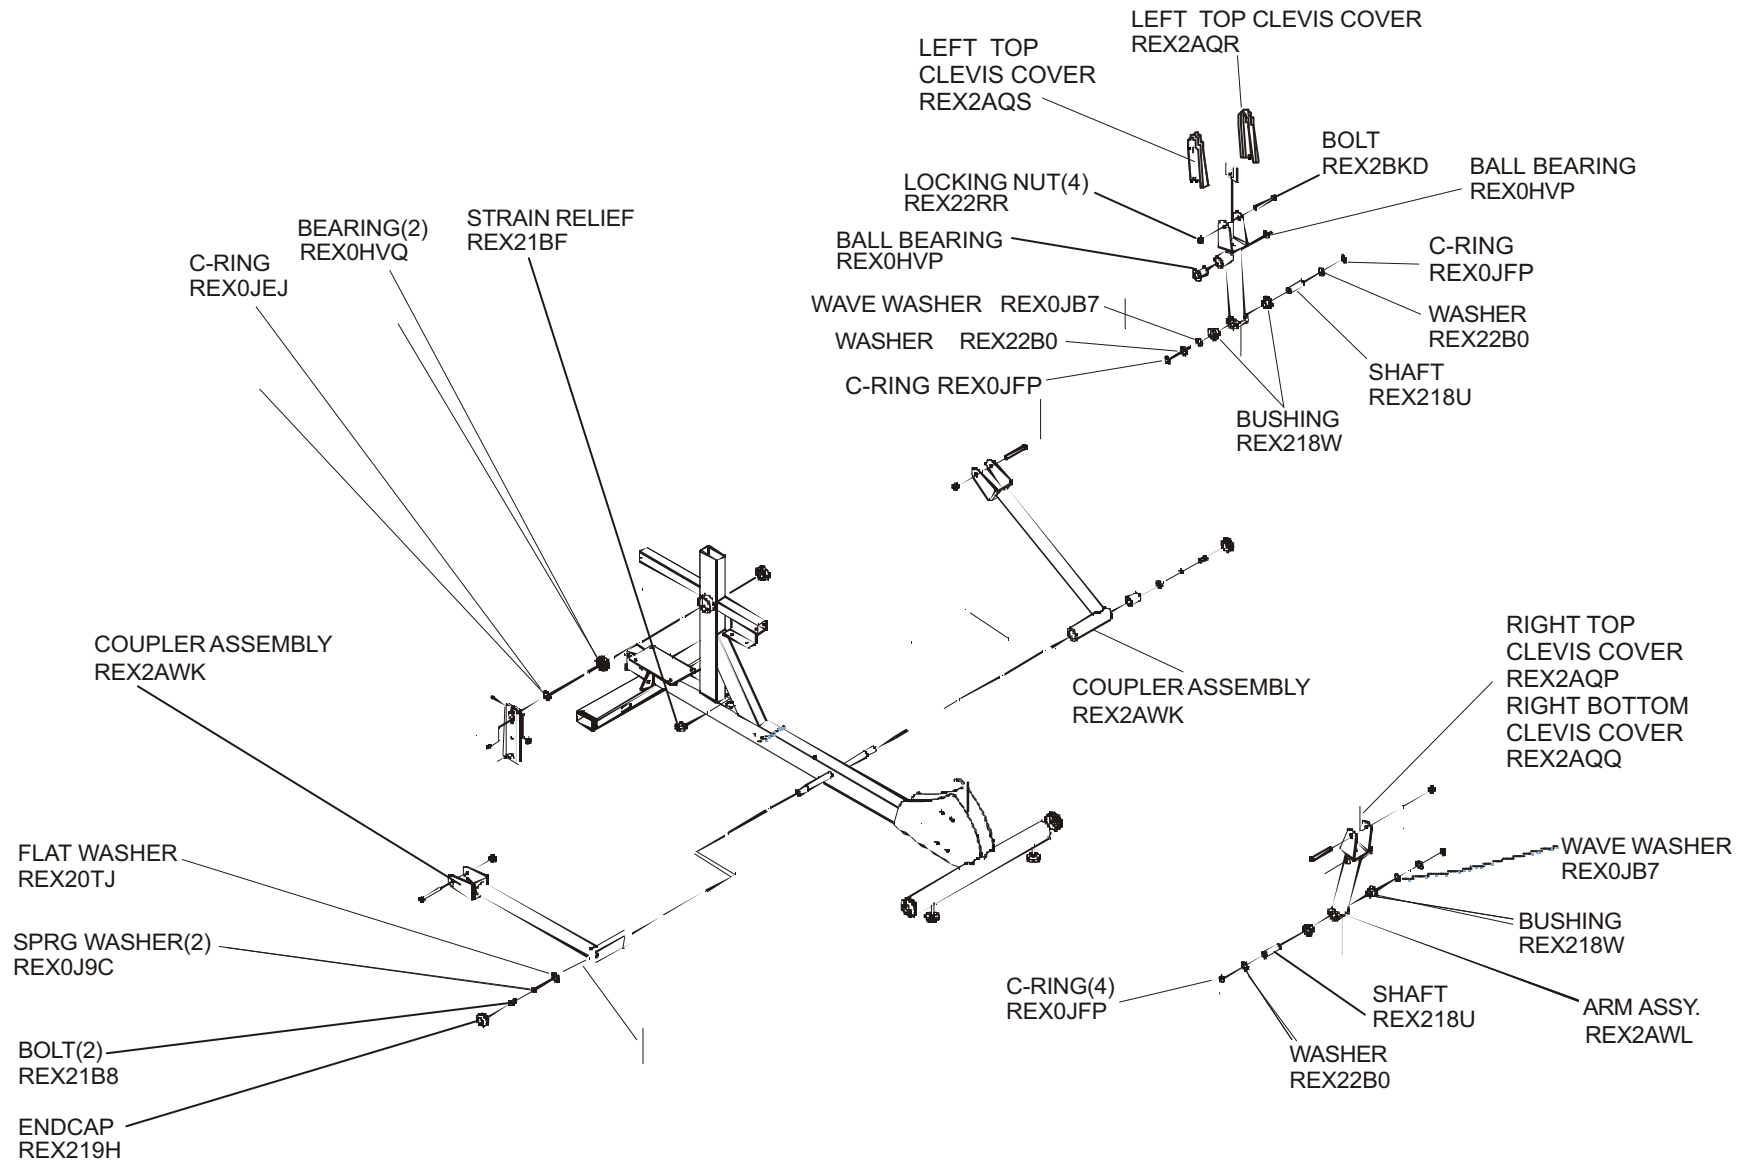

**LF Cross-Trainer**  
**Pedal Arms and Hardware**

**X35-0000-01**


**120V Dom. Eng/Eng**

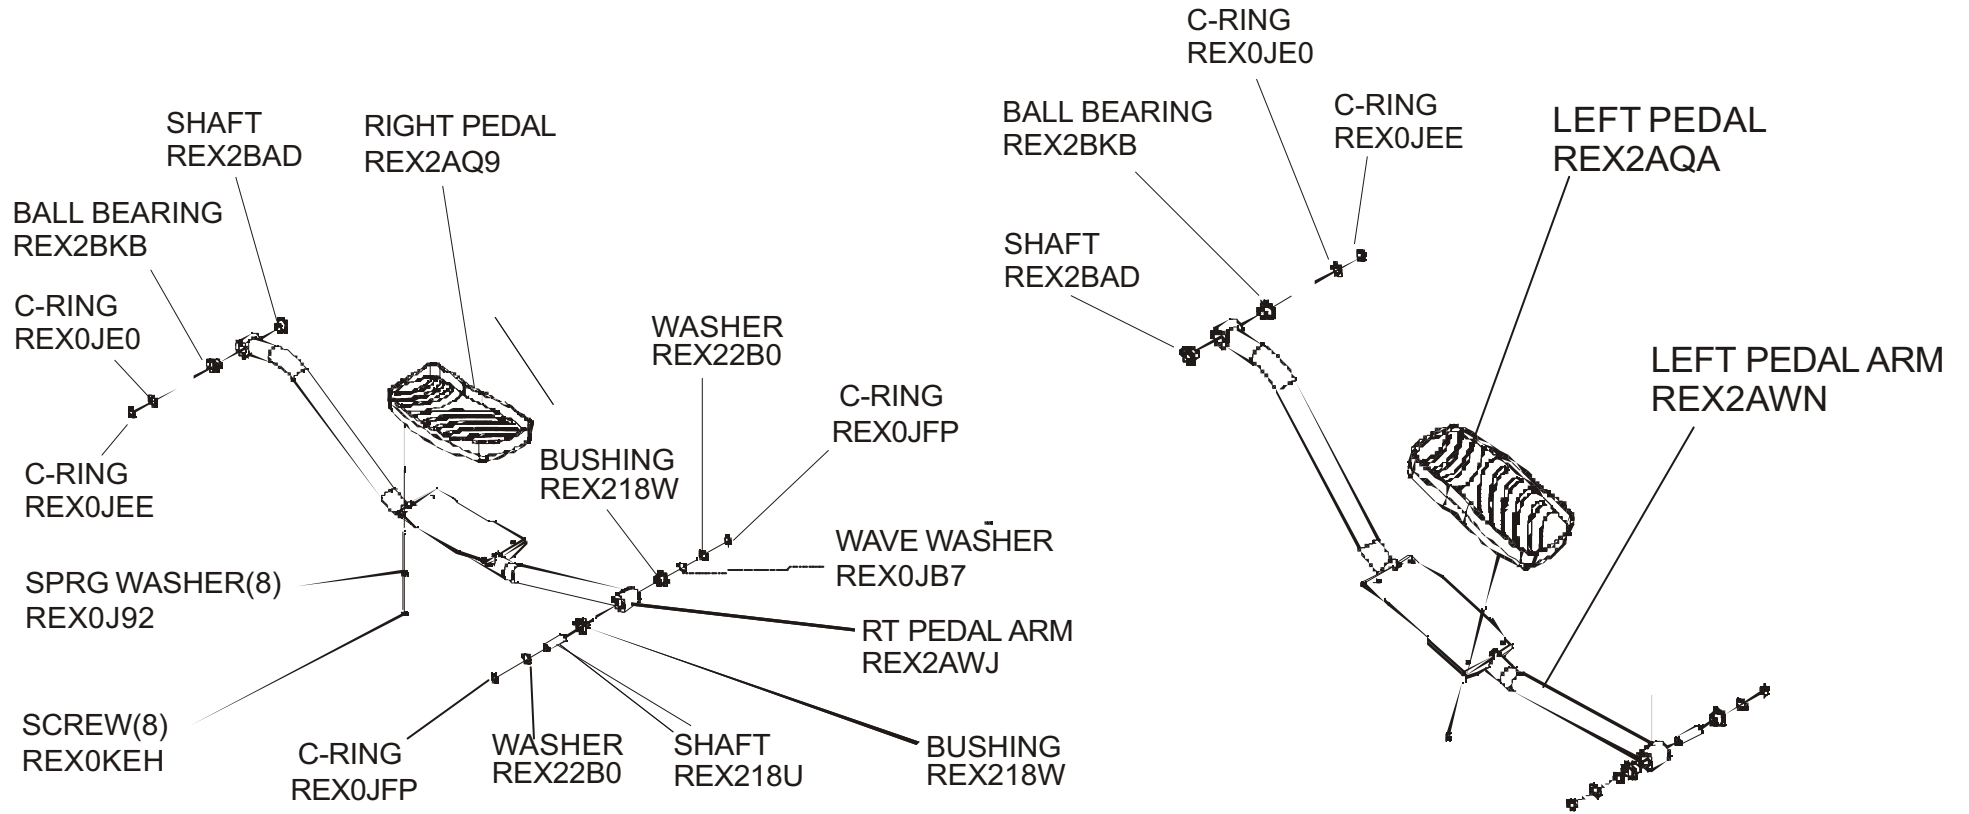

**LF Cross-Trainer**  
**Rear Components**

X35-0000-01


120V Dom. Eng/Eng

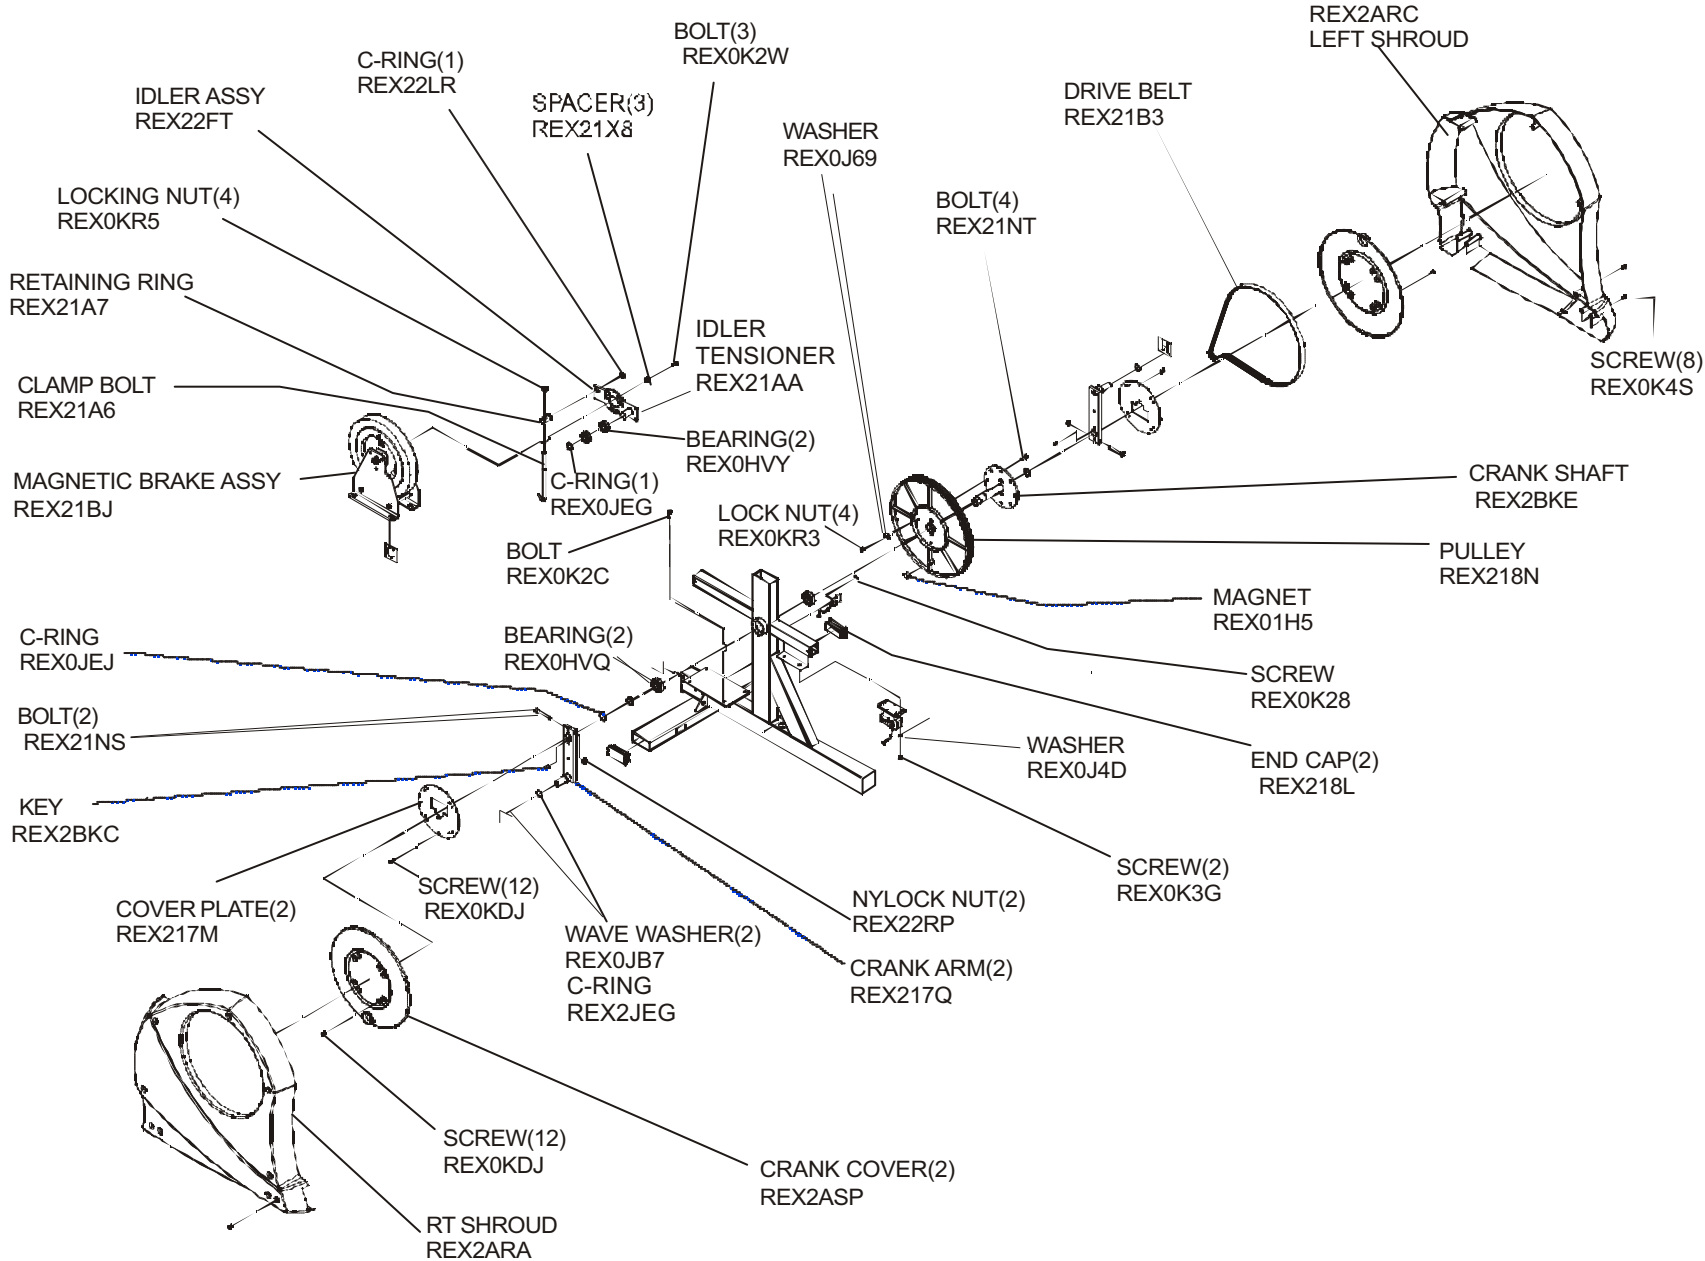


**LF Cross-Trainer**  
**Console, Upright & User Arm Components**


**X35-0000-01**

**120V Dom. Eng/Eng**

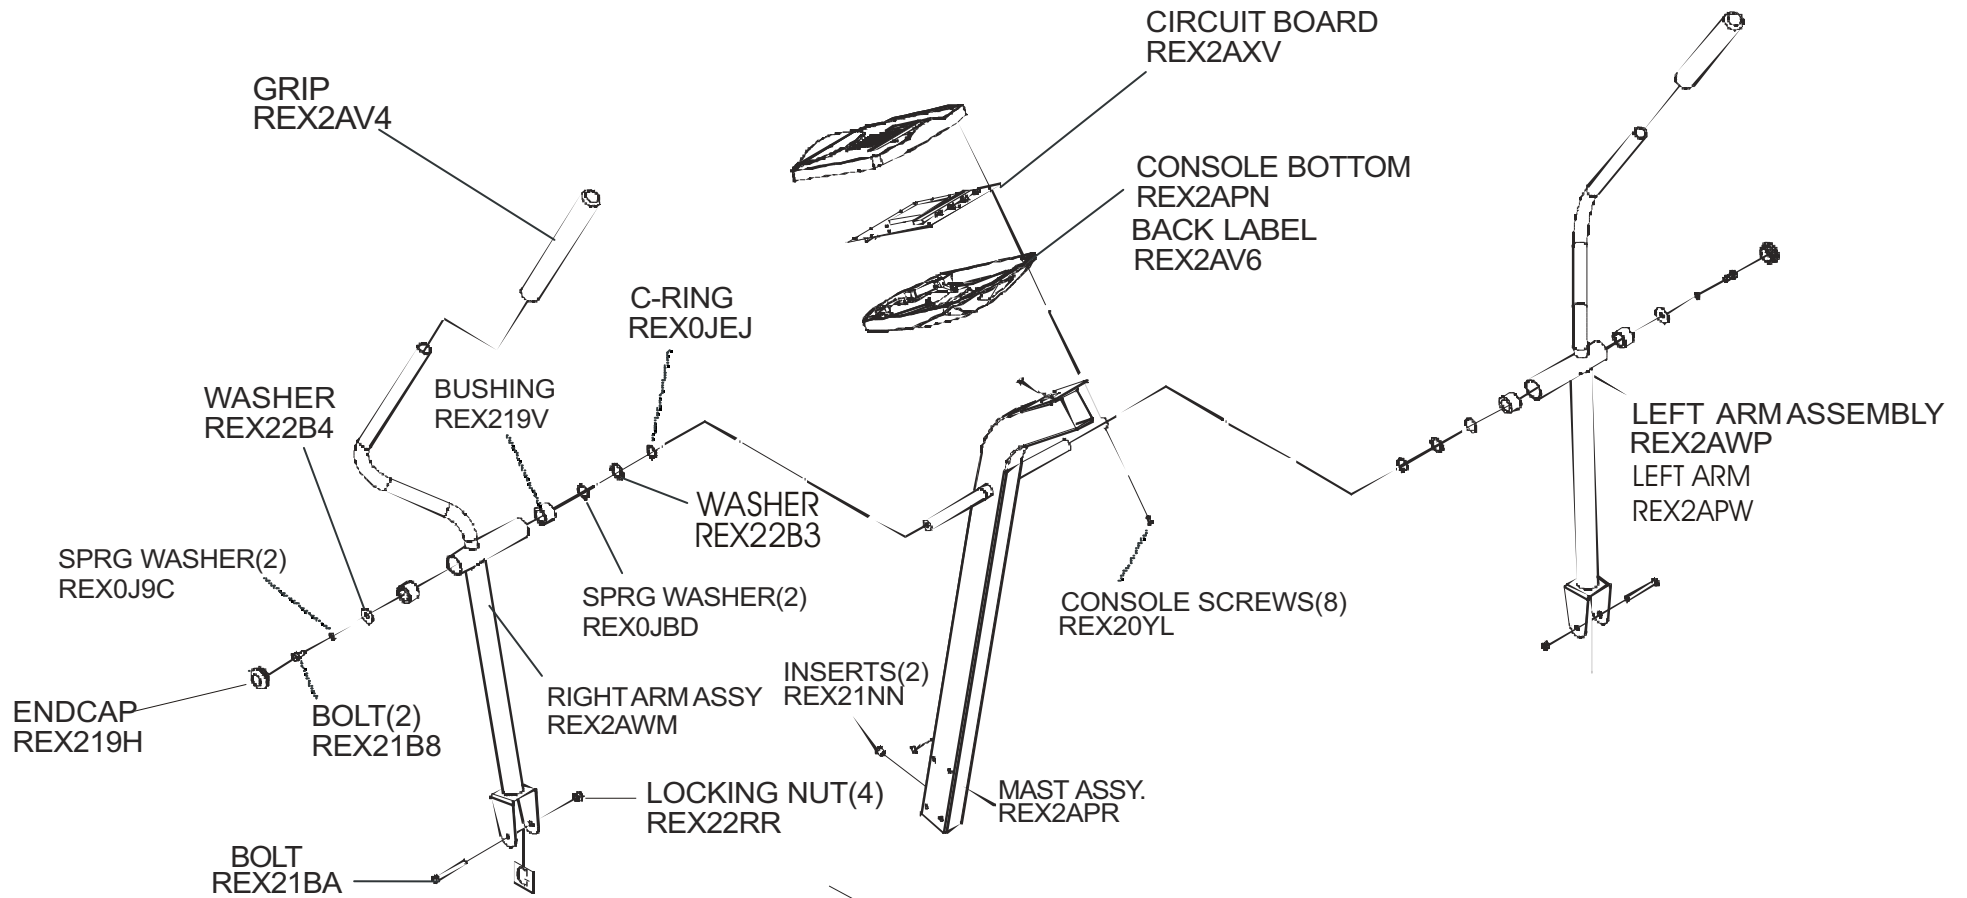

RIGHT CONSOLE  
MAST COVER (NOT SHOWN)  
REX2AQ1  
LEFT CONSOLE  
MAST COVER (NOT SHOWN)  
REX2AQ6  
MAST COVER SCREWS (3)  
REX0K4S

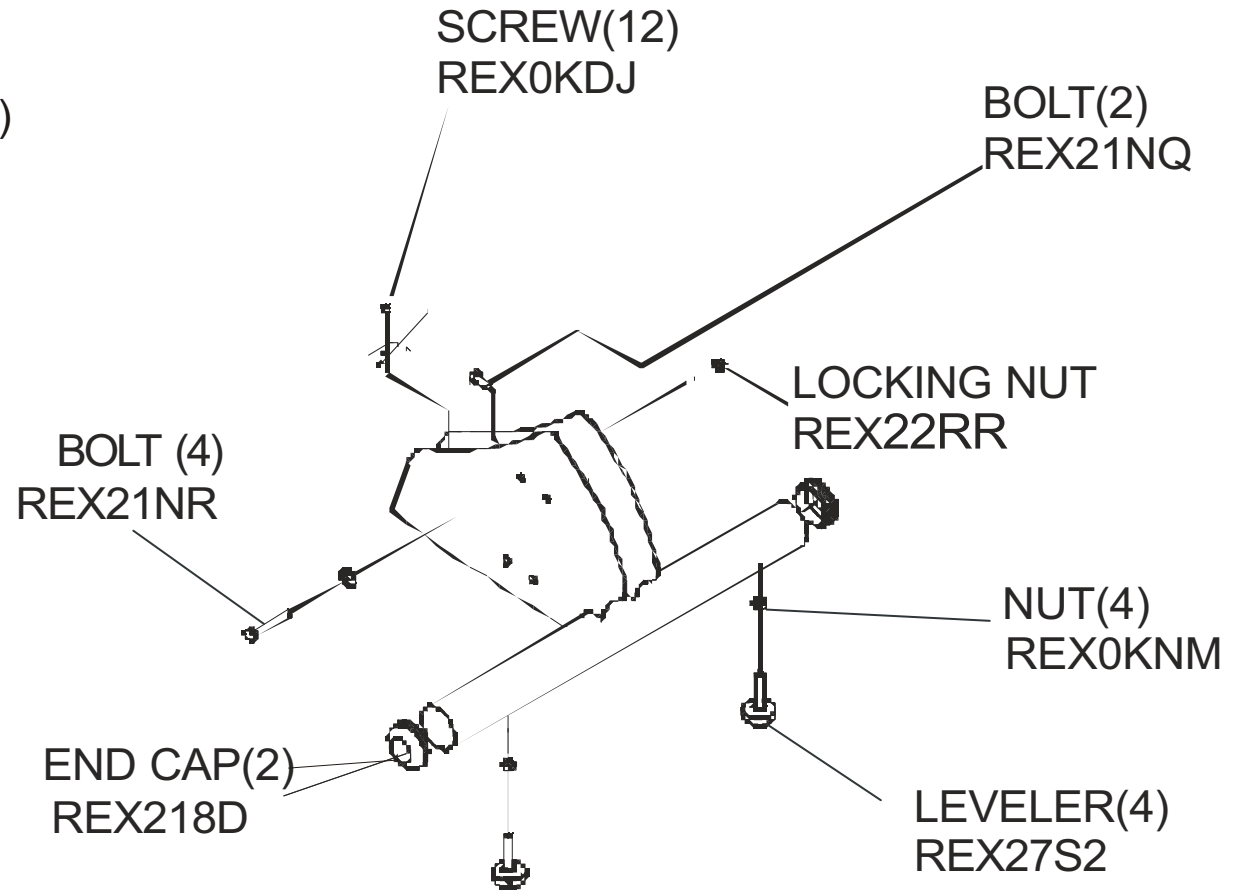

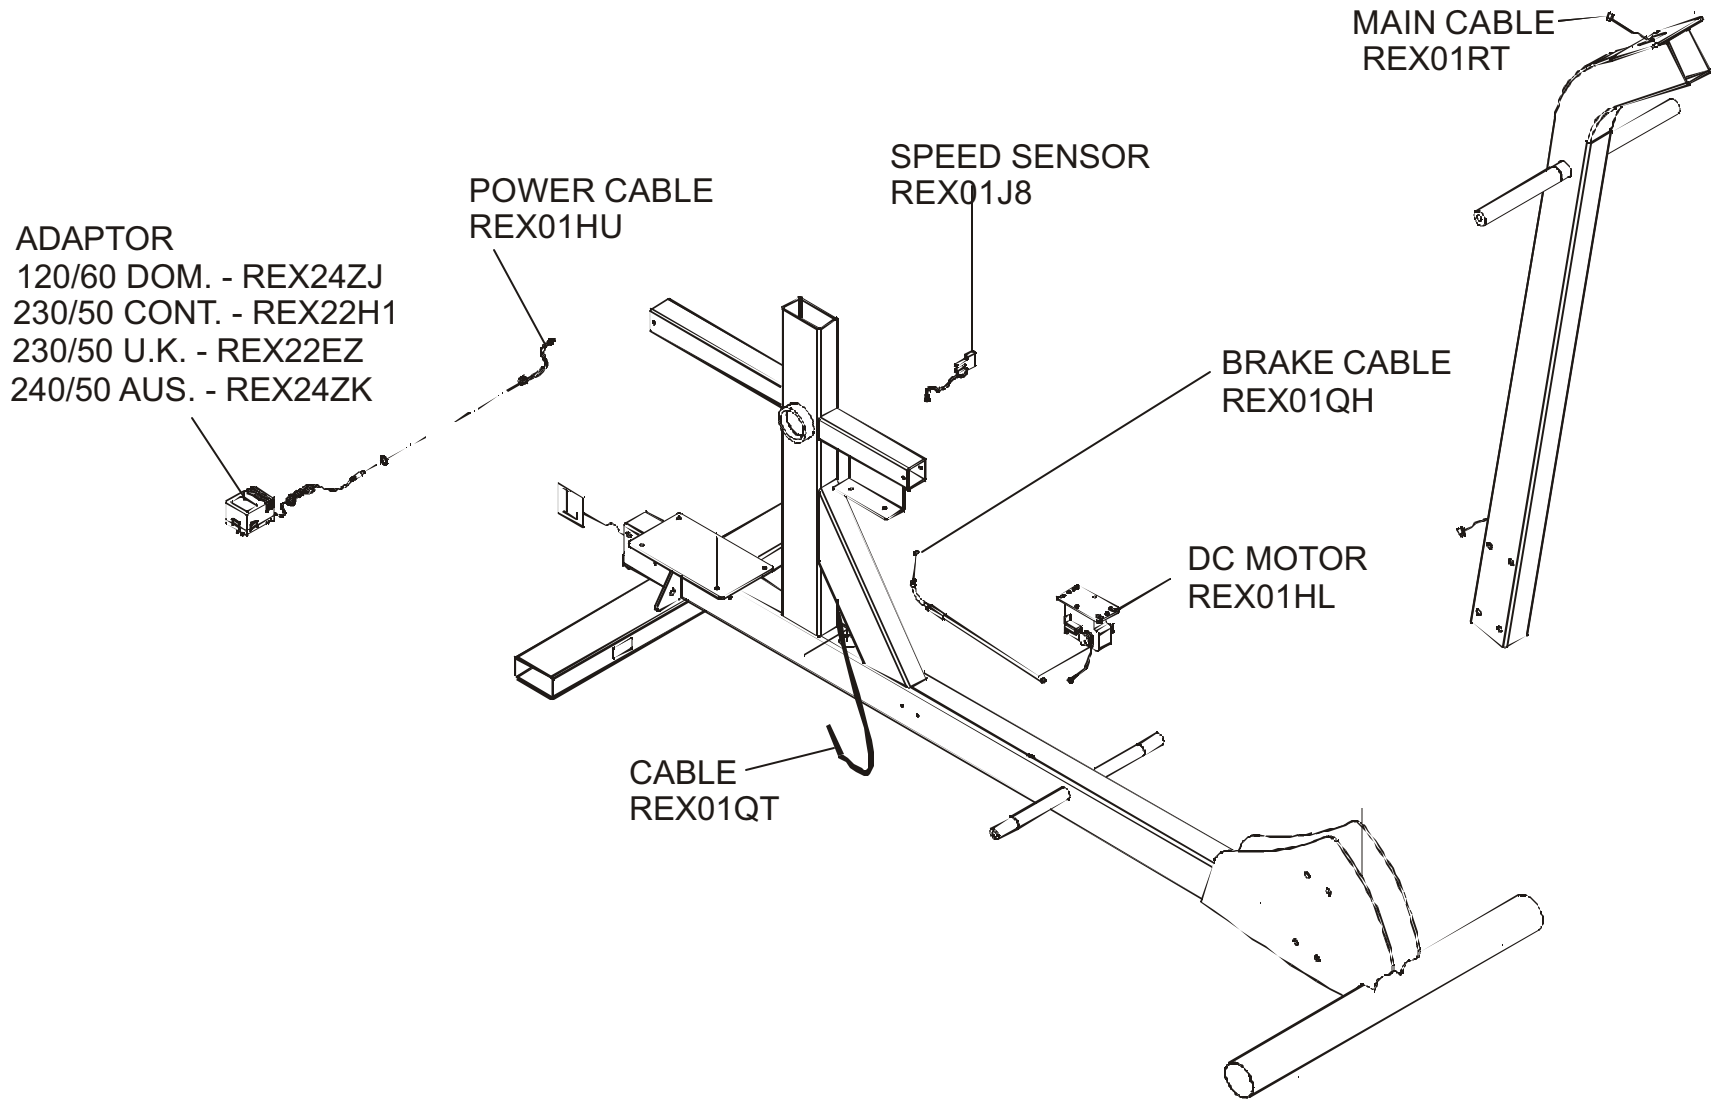

**LF Cross-Trainer  
Block Diagram**

**X35-0000-01**

**120V Dom. Eng/Eng**

