



Product Support Bulletin

Title: Alternator Wiring for Stairmaster Cordless Steppers 4400CL and 4600CL

Date: 08/23/2011

From the Internal Power Board

J2 Connector:

1. WHITE wire goes B+ or POS terminal on the alternator
2. BLACK wire goes to GROUND, NEG or N.C.* terminal on the alternator
3. BROWN wire goes to FLD (field) terminal on the alternator

J3 Connector:

1. Inductor Switch goes to the J3 connection on the internal power board

J4 Connector:

1. Gray cable from console goes to the J4 connection on the internal power board

J5 Connector:

1. Battery goes to the J5 connection on the internal power board

J6 Connector:

1. Load Resistor goes to J6 connection on the internal power board

(* N.C. can be used as GROUND)