



Product Support Bulletin

**Title: Stairmaster Alternator Wiring for Gauntlet,
Stepmill, 7000PT Stepmill and FreeRunners 5400/5600
Date: 08/23/2011**

From Relay Board:

1. WHITE wire goes to B+ or POS terminal on the alternator
2. BLUE wire goes to AC TAP or TACH terminal on the alternator
3. BROWN wire goes to FLD (field) terminal on the alternator
4. BLACK wire goes to the GROUND, NEG or N.C.* terminal on the alternator (*N.C. may be used as GROUND)