




Product Support Bulletin


Title: P16BS2 Sleeve Anchor Installation

Date: 3/24/05


INSTALLATION STEPS

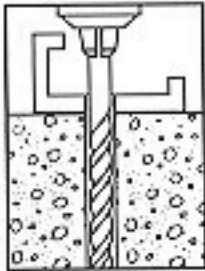

1. Use a bit with a diameter equal to the anchor. See selection chart to determine proper size bit for anchor used. Drill hole to any depth exceeding minimum embedment. Clean hole.

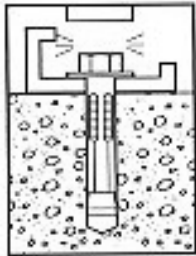

2. Insert assembled anchor into hole, so that washer or head is flush with materials to be fastened.

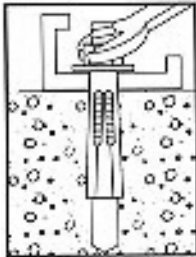

3. Expand anchor by tightening nut or head 2 to 3 turns.